

เตาไมโครเวฟ

คำแนะนำสำหรับผู้ใช้และคู่มือการอบอาหาร

**Planet
First** 100%
Recycled Paper

คู่มือนี้ใช้กระดาษรีไซเคิล 100 %

imagine the possibilities

ขอขอบคุณที่เลือกซื้อผลิตภัณฑ์ Samsung โปรดลงทะเบียนผลิตภัณฑ์ที่

www.samsung.com/register

SAMSUNG

สารบัญ

คู่มือค้นหาอย่างรวดเร็ว.....	2
การใช้การทำความสะดวกด้วยไอน้ำ.....	3
แผงควบคุม.....	4
เตาอบ.....	5
อุปกรณ์เสริม.....	5
การใช้คู่มือฉบับนี้.....	6
ข้อมูลเกี่ยวกับความปลอดภัย.....	6
คำอธิบายสัญลักษณ์และไอคอน.....	6
ขอควรระวังเพื่อหลีกเลี่ยงการได้รับพลังงานไมโครเวฟมากเกินไป.....	6
คำแนะนำสำคัญเพื่อความปลอดภัย.....	7
การติดตั้งเตาไมโครเวฟ.....	10
การตั้งเวลา.....	10
การตรวจสอบว่าเตาไมโครเวฟของคุณทำงานอย่างถูกต้อง.....	11
เตาไมโครเวฟทำงานอย่างไร.....	11
ควรทำอย่างไรเมื่อเกิดข้อสงสัยหรือมีปัญหา.....	12
การอบ/อุ่นอาหาร.....	12
ระดับพลังงานและการปรับเวลา.....	13
การหยุดการอบอาหาร.....	13
การปรับเวลาอบอาหาร.....	13
การใช้คุณสมบัติเมนูไทย.....	14
การใช้คุณสมบัติเมนูย่าง.....	16
การใช้คุณสมบัติละลายน้ำแข็ง.....	17
การใช้คุณสมบัติอาหารจานด่วน.....	19
การใช้คุณสมบัติเมนูอบ.....	20
การปรุงอาหารแบบหลายขั้นตอน.....	22
การอุ่นเตาอย่างรวดเร็ว.....	23
การอบอาหารด้วยการอบ.....	23
การย่าง.....	24
การเลือกอุปกรณ์เสริม.....	24
การใช้ไมโครเวฟผสมการย่าง.....	25
การใช้ไมโครเวฟพร้อมกับการอบ.....	25
การเลือกเตาไมโครเวฟ.....	26
การใช้คุณสมบัติกำจัดกลิ่น.....	26
คู่มือสำหรับอุปกรณ์การทำอาหาร.....	27
คู่มือการอบอาหาร.....	28
การทำความสะดวกเตาอบไมโครเวฟของคุณ.....	38
การเก็บรักษาและซ่อมเตาไมโครเวฟ.....	38
ข้อมูลจำเพาะด้านเทคนิค.....	39

คู่มือค้นหาอย่างรวดเร็ว

ขั้นตอนการปรุงอาหาร

1. วางอาหารในเตาอบ
กดปุ่ม **ไมโครเวฟ**

ไมโครเวฟ
Microwave

2. กดปุ่ม **ไมโครเวฟ** จนกว่าระดับพลังงานที่ต้องการปรากฏขึ้น

ไมโครเวฟ
Microwave

3. กำหนดเวลาในการอบอาหาร โดยกดปุ่ม (∧) และ (∇) ตามต้องการ



4. กดปุ่ม **เริ่มทำงาน** (◀)

ผลลัพธ์:

การอบจะเริ่มขึ้น

- เมื่อสิ้นสุดการอบอาหาร เตาจะส่งเสียงเตือน พร้อมกับกะพริบ "0" สี่ครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาฬิกาครั้ง

เริ่มทำงาน /+30 วินาที
Start / +30s

ขั้นตอนการเพิ่มเวลาอบอีก 30 วินาที

วางอาหารเอาไว้ในเตาอบแล้ว

กดปุ่ม **+30 วินาที** หนึ่งครั้งหรือตามจำนวนที่เหมาะสมเพื่อเพิ่มอีกครั้งละ 30 วินาทีตามที่คุณต้องการ

เริ่มทำงาน /+30 วินาที
Start / +30s

ขั้นตอนการละลายอาหารแช่แข็ง

 
1. วางอาหารในเตาอบ
กดปุ่ม **ละลายน้ำแข็ง**

ละลายน้ำแข็ง
Defrost

2. เลือกประเภทอาหารโดยกดปุ่ม **ละลายน้ำแข็ง** จนกว่าประเภทอาหารที่ต้องการจะปรากฏ

ละลายน้ำแข็ง
Defrost

3. เลือกน้ำหนักโดยกดปุ่ม (Λ) และ (V) ตามต้องการ



4. กดปุ่ม เริ่มทำงาน (◀▶)

ผลลัพธ์:

เริ่มต้นการละลายน้ำแข็ง

- เมื่อสิ้นสุดการอบอาหาร เตาจะส่งเสียงเตือน พร้อมกับกะพริบ "0" สี่ครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาฬิกาละครั้ง

 


การใช้การทำความสะอาดด้วยไอน้ำ


ระบบทำความสะอาดด้วยไอน้ำจะพ่นไอน้ำไปทั่วพื้นผิวด้านในของช่องเตาอบ หลังจากที่ใช้ฟังก์ชันทำความสะอาดด้วยไอน้ำ คุณสามารถทำความสะอาดด้านในของช่องเตาอบได้อย่างง่ายดาย

- ใช้ฟังก์ชันนี้เฉพาะหลังจากที่เตาอบเย็นสนิทเท่านั้น (อุณหภูมิปกติ)
- น้ำธรรมดาเท่านั้น ห้ามใช้น้ำกลั่น
- เพื่อให้การทำความสะอาดสมบูรณ์ยิ่งขึ้น โปรดใช้ฟังก์ชันจัดกลิ่นหลังจากการทำความสะอาดด้วยไอน้ำ
- หากมีการเปิดประตูเตาอบในระหว่างการทำงาน ระบบจะแสดงข้อความ "E-47" (น้ำที่อยู่ในเตาอบจะร้อนมาก เนื่องจากมีการทำความสะอาดด้วยไอน้ำอยู่)


1. เปิดประตู



 2. เติมน้ำตามเส้นบอกระดับน้ำภายนอกถ้วยน้ำ (เส้นนี้เท่ากับประมาณ 30 มิลลิลิตร)



 3. โปรดใส่น้ำที่ด้านขวาของเตาอบ




4. ปิดประตู


5. กดปุ่ม ทำความสะอาดด้วยไอน้ำ (ไฟจะสว่างระหว่างการทำงานทำความสะอาดด้วยไอน้ำ)



 6. เปิดประตู



 7. โปรดทำความสะอาดช่องเตาอบด้วยผ้าแห้งสำหรับเช็ดจาน นำจานหมุนออกให้เหลือเฉพาะตะแกรงด้านล่างและกระดาดขอเนกประสงค์




คำเตือน!

- ถ้วยใส่น้ำใช้ได้เฉพาะกับโหมด "ทำความสะอาดด้วยไอน้ำ" เท่านั้น
- เมื่ออบอาหารที่ไม่ใช่ของเหลว ให้นำถ้วยใส่น้ำออก เพื่อไม่ให้เกิดความเสียหายและอาจทำให้ติดไฟได้


ไทย

แผงควบคุม

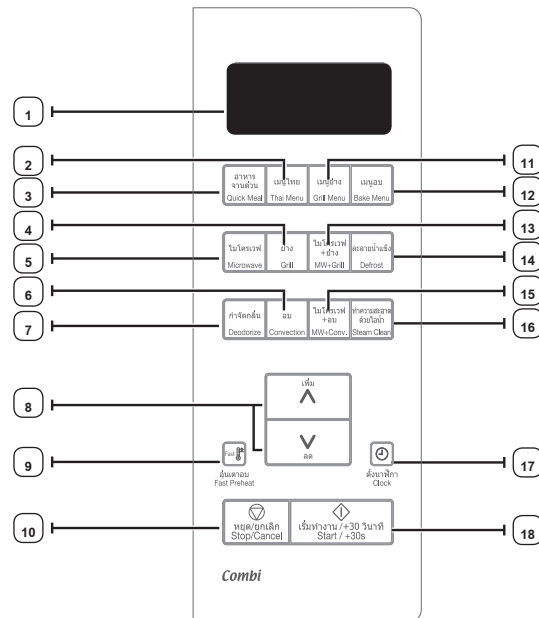

- | | |
|---------------------------------------|------------------------------|
| 1. จอแสดงผล | 10. ปุ่มหยุด/ยกเลิก |
| 2. ปุ่มเมนูไทยอัตโนมัติ | 11. ปุ่มเมนูย่างอัตโนมัติ |
| 3. ปุ่มอาหารจานด่วนอัตโนมัติ | 12. ปุ่มเมนูอบอัตโนมัติ |
| 4. ปุ่มย่าง | 13. ปุ่มไมโครเวฟ + ย่าง |
| 5. ปุ่มไมโครเวฟ | 14. ปุ่มละลายน้ำแข็ง |
| 6. ปุ่มอบ | 15. ปุ่มไมโครเวฟ + อบ |
| 7. ปุ่มกำจัดกลิ่น | 16. ปุ่มทำความสะอาดด้วยไอน้ำ |
| 8. ปุ่มเพิ่ม/ลด (น้ำหนัก/ปริมาณ/เวลา) | 17. ปุ่มตั้งนาฬิกา |
| 9. ปุ่มการเลือกอุณหภูมิอัตโนมัติ | 18. ปุ่มเริ่มทำงาน+30 วินาที |

เตาอบ

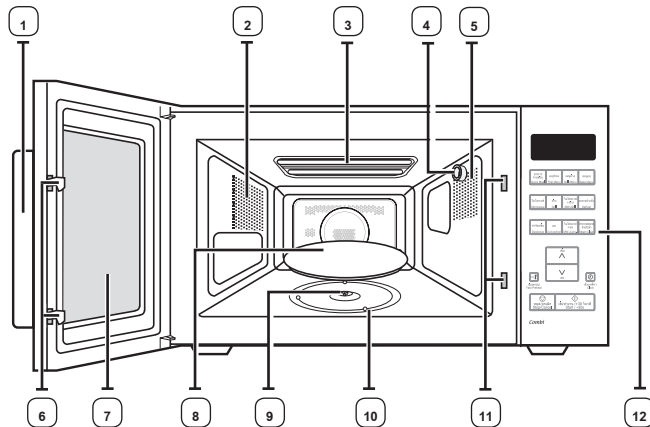

- | | |
|-------------------|-----------------------------|
| 1. ที่จับประตู | 7. ประตู |
| 2. ช่องระบายอากาศ | 8. จานหมุน |
| 3. ขดลวดความร้อน | 9. เฝือกของจานหมุน |
| 4. ที่ใส่ถ้วยน้ำ | 10. วงแหวน |
| 5. ช่องระบายอากาศ | 11. ช่องลีดเพื่อความปลอดภัย |
| 6. สลักประตู | 12. แผงควบคุม |

อุปกรณ์เสริม

คุณจะได้รับอุปกรณ์เสริมหลายชนิด เพื่อนำมาใช้ร่วมกับเตาอบ โดยขึ้นอยู่กับรุ่นที่คุณซื้อ

1. เฝือก เพื่อวางไว้ตรงกับแกนของมอเตอร์ที่ส่วนฐานของเตาอบ

วัตถุประสงค์: เฝือกนี้จะเป็นตัวหมุนจานหมุน



 
2. วงแหวน เพื่อวางไว้บริเวณส่วนกลางของเตาอบ

วัตถุประสงค์: วงแหวนนี้จะรองรับน้ำหนักของจานหมุน




3. จานหมุน วางเหนือวงแหวน โดยให้ส่วนกลางสามพอดีกับเฝือก

วัตถุประสงค์: จานหมุนทำหน้าที่เป็นพื้นที่หลักสำหรับอบอาหาร และสามารถถอดออกทำความสะอาดได้ง่าย



4. ตะแกรงสูง, ตะแกรงต่ำ เพื่อวางบนจานหมุน

วัตถุประสงค์: คุณสามารถใช้ตะแกรงนี้เพื่ออบอาหารสองจานในเวลาเดียวกัน โดยวางจานเล็กไว้บนจานหมุน และวางจานที่สองบนตะแกรง คุณสามารถใช้ตะแกรงนี้ในการอบอาหารแบบ ย่าง อบ และการอบแบบผสม

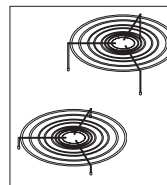

5. ถ้วยน้ำสำหรับทำความสะอาด เพื่อวางไว้ที่ด้านขวาของเตาอบ

วัตถุประสงค์: ถ้วยน้ำสามารถใช้ในการทำความสะอาด



การใช้คู่มือฉบับนี้

ขอขอบคุณที่เลือกใช้ไมโครเวฟ SAMSUNG คำแนะนำสำหรับผู้ใช้นี้ประกอบด้วยข้อมูลที่จำเป็นประโยชน์มากมายเกี่ยวกับการใช้อาหารด้วยเตาไมโครเวฟของคุณ ดังนี้

- ข้อควรระวังเพื่อความปลอดภัย
- คำแนะนำการใช้งาน
- อุปกรณ์เสริมและภาชนะที่เหมาะสม
- เคล็ดลับในการใช้อาหาร

ข้อมูลเกี่ยวกับความปลอดภัย

คำแนะนำสำคัญเพื่อความปลอดภัย

โปรดอ่านให้ละเอียด และเก็บไว้เป็นข้อมูลอ้างอิงในอนาคต

ก่อนที่จะใช้เตาอบ โปรดปฏิบัติตามคำแนะนำต่อไปนี้

- ใช้อุปกรณ์นี้เพื่อวัตถุประสงค์ที่อธิบายในคู่มือคำแนะนำนี้เท่านั้น คำเตือนและคำแนะนำเพื่อความปลอดภัยในคู่มือนี้ไม่ได้ครอบคลุมถึงสภาวะและสถานการณ์ทั้งหมดที่สามารถเกิดขึ้นได้ คุณมีหน้าที่จะต้องใช้สามัญสำนึก ความระมัดระวัง และใส่ใจกับการติดตั้ง บำรุงรักษา และใช้งานอุปกรณ์
- เนื่องจากคำแนะนำในการใช้งานต่อไปนี้ใช้สำหรับหลายรุ่น ลักษณะของเตาอบของคุณอาจแตกต่างจากที่อธิบายในคู่มือนี้ และสัญญาณคำเตือนบางอย่างอาจไม่มีผล ถ้าคุณมีข้อซักถามหรือข้อกังวลใด โปรดติดต่อศูนย์บริการที่ใกล้ที่สุด หรือหาความช่วยเหลือและข้อมูลออนไลน์ได้ที่ www.samsung.com
- เตาไมโครเวฟนี้ใช้สำหรับการให้ความร้อนกับอาหาร ใช้สำหรับการใช้งานภายในครัวเรือนเท่านั้น ห้ามอุ่นผ้าทุกประเภทหรือเบาะที่มีไส้ซึ่งอาจลุกไหม้ได้ ผู้ผลิตไม่มีส่วนรับผิดชอบต่อความเสียหายที่เกิดจากการใช้อุปกรณ์อย่างไม่ถูกต้องหรือไม่เหมาะสม
- การไม่รักษาความสะอาดเตาอบอาจทำให้เกิดความเสียหายกับพื้นผิว ซึ่งอาจมีผลเสียต่อเตาอย่างมาก และอาจก่อให้เกิดอันตรายได้

คำอธิบายสัญลักษณ์และไอคอน



คำเตือน

อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด การบาดเจ็บสาหัสหรือเสียชีวิต



ข้อควรระวัง

อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด การบาดเจ็บสาหัสหรือเสียชีวิต



คำเตือน อันตรายจากไฟ



คำเตือน พื้นผิวร้อน



คำเตือน ไฟฟ้า



คำเตือน วัตถุที่ระเบิดได้



ห้ามทำ



ห้ามถอดประกอบ



ห้ามสัมผัส



ทำตามคำแนะนำอย่างเคร่งครัด



ถอดปลั๊กออกจากเต้าเสียบที่ผนัง



ตรวจสอบว่าเครื่องมีการลงกราวด์เพื่อป้องกันไฟฟ้าดูด



ติดต่อศูนย์บริการเพื่อขอรับความช่วยเหลือ



หมายเหตุ



ข้อมูลสำคัญ

ข้อควรระวังเพื่อหลีกเลี่ยงการได้รับพลังงานไมโครเวฟมากเกินไป

หากไม่ปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยต่อไปนี้ อาจทำให้ได้รับพลังงานไมโครเวฟที่เป็นอันตราย

- ห้ามใช้เตาอบขณะที่ประตูของเตาเปิดอยู่ หรือตัดแปลงแก้ไขสวิตช์เพื่อความปลอดภัย (สวิตช์ของประตู) หรือสอดวัตถุในช่องล็อกเพื่อความปลอดภัย ไม่ว่าในกรณีใดๆ
- ห้ามสอดวัตถุใดๆ ระหว่างประตูของเตาอบกับด้านหน้า หรือปล่อยให้มีอาหารหรือสารทำความสะอาค้างอยู่ ที่ผิวหน้าของซिल ตรวจสอบว่าประตูและซิลของประตูสะอาดอยู่เสมอ โดยเช็ดด้วยผ้าหมาดและเช็ดอีกครั้งด้วยผ้าแห้งที่แห้งหลังจากการใช้งาน
- ห้ามใช้เตาอบที่มีความเสียหาย จนกว่าจะได้รับการซ่อมแซมโดยช่างผู้ชำนาญการซ่อมบำรุงไมโครเวฟที่ผ่านการฝึกอบรมโดยผู้ผลิต โปรดปิดประตูของเตาอบให้สนิท และตรวจสอบว่าส่วนต่างๆ ต่อไปนี้ไม่ชำรุดเสียหาย:
 - (1) ประตู (งอ)
 - (2) บานพับของประตู (หักหรือหลวม)
 - (3) ซิลประตูและผิวหน้าของซิล
- ห้ามปรับแต่งหรือซ่อมแซมเตาอบโดยบุคคลอื่นที่ไม่ใช่ช่างผู้ชำนาญการซ่อมบำรุงไมโครเวฟที่ผ่านการฝึกอบรมโดยผู้ผลิต

ผลิตภัณฑ์นี้เป็นอุปกรณ์ Group 2 Class B ISM คำนิยามของ Group 2 ซึ่งมีอุปกรณ์ ISM ทั้งหมด ซึ่งมีพลังงาน ความถี่วิทยุที่สร้างขึ้นและ/หรือใช้ในรูปแบบของรังสีแม่เหล็กไฟฟ้า สำหรับการใช้กับวัสดุ และอุปกรณ์ EDM และอุปกรณ์ เชื่อมโลหะ

สำหรับอุปกรณ์ Class B คืออุปกรณ์ที่เหมาะสมสำหรับการใช้งานในสถานที่พักอาศัย และในสถานที่ซึ่งเชื่อมต่อกับ เครือข่ายพลังงานแรงดันไฟฟ้าต่ำ ซึ่งจ่ายให้กับอาคารสิ่งปลูกสร้างสำหรับการใช้งานในครัวเรือน

คำแนะนำสำคัญเพื่อความปลอดภัย

โปรดปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยตลอดเวลา

คำเตือน					
	ควรไฟเจ้าหน้าที่ผู้มีความชำนาญเท่านั้นเป็นผู้แก้ไขหรือซ่อมแซมเตาไมโครเวฟ	✓	✓	✓	✓
	ห้ามให้ความร้อนของเหลวหรืออาหารอื่นในภาชนะที่ปิดผนึกแน่นสำหรับฟังก์ชันไมโครเวฟ	✓	✓	✓	✓
	เพื่อความปลอดภัย ห้ามใช้เครื่องทำความสะอด้วยแรงดันน้ำหรือเครื่องทำความสะอด้วยเครื่องฉีดน้ำ	✓	✓	✓	✓
	ห้ามติดตั้งอุปกรณ์ใกล้เครื่องทำความร้อน วัตถุไวไฟ ความชื้น ตำแหน่งที่มีน้ำมันหรือฝุ่นละอองมาก ในตำแหน่งที่ได้รับแสงแดดโดยตรงหรือโดนน้ำ หรือในที่ซึ่งอาจมีก๊าซรั่ว หรือบนพื้นที่ไม่เรียบ	✓	✓	✓	✓
	อุปกรณ์นี้ต้องมีการลงกราวด์อย่างเหมาะสมตามข้อกำหนดของท้องถิ่นหรือของประเทศ	✓	✓	✓	✓
	นำสิ่งแปลกปลอมทั้งหมด เช่น ฝุ่นละอองหรือน้ำมันจากขาของปลั๊กไฟและหน้าสัมผัสเป็นประจำ โดยใช้ผ้าแห้ง	✓	✓	✓	✓
	ห้ามสัมผัสกับของเหลวหรือวางสิ่งของกับสายไฟ	✓	✓	✓	✓
	ถ้ามีก๊าซรั่ว (เช่น ก๊าซโพรเพน ก๊าซหุงต้ม ฯลฯ) ให้ระบายอากาศทันที โดยไม่สัมผัสกับปลั๊กไฟ	✓	✓	✓	✓
	ห้ามสัมผัสปลั๊กไฟด้วยมือที่เปียก	✓	✓	✓	✓
	ห้ามปิดเครื่องด้วยกรรอกปลั๊กไฟ ขณะที่เครื่องกำลังทำงานอยู่	✓	✓	✓	✓
	ห้ามสอดนิ้วหรือสิ่งแปลกปลอม ถ้ามีสิ่งแปลกปลอมหรือน้ำเข้าเครื่อง ให้ถอดปลั๊กไฟและติดต่อศูนย์บริการที่อยู่ใกล้ที่สุด	✓	✓	✓	✓

	ห้ามใช้แรงกดหรือกระแทกอุปกรณ์	✓	✓	✓	✓
	อย่าวางอุปกรณ์ไว้บนวัตถุที่เปราะบางเช่นเซรามิกหรือกระจก	✓	✓		
	ห้ามใช้เบ็นซิน ทินเนอร์ แอลกอฮอล์ เครื่องทำความสะอด้วยไอน้ำหรือเครื่องฉีดน้ำแรงดันสูงเพื่อทำความสะอาดอุปกรณ์	✓	✓	✓	✓
	ตรวจสอบว่าแรงดันไฟฟ้า ความถี่ และกระแสไฟฟ้ตรงกับในข้อมูลจำเพาะของผลิตภัณฑ์	✓	✓		✓
	ต่อสายไฟเข้ากับเต้ารับไฟฟ้าที่ผนวอย่างแน่นหนา ห้ามใช้ตัวแปลงปลั๊ก สายต่อ หรือหม้อแปลงไฟฟ้า	✓	✓	✓	
	ห้ามเกี่ยวสายไฟกับวัตถุที่เป็นโลหะ ใต้สายไฟไว้ระหว่างวัตถุหรือหลังเตาอบ	✓	✓	✓	
	ห้ามใช้ปลั๊กไฟที่เสียหาย สายไฟ หรือเต้ารับไฟฟ้าที่เสียหาย หลวม เมื่อปลั๊กไฟหรือสายไฟเสียหาย โปรดติดต่อศูนย์บริการใกล้บ้านคุณ	✓	✓	✓	✓
	อุปกรณ์นี้ไม่ได้ออกแบบมาเพื่อใช้งานด้วยเครื่องจับเวลาภายนอกหรือระบบรีโมทคอนโทรลแยกต่างหาก	✓	✓		
	ห้ามฉีดพ่นน้ำมันเตาอบ	✓	✓		
	ห้ามวางสิ่งของบนเตาอบ ภายในหรือบนประตูเตาอบ	✓	✓	✓	
	ห้ามพันสายระเหยเช่นผ้าอำเนลงบนพื้นผิวผลิตภัณฑ์โดยตรง	✓	✓		
	โปรดดูแลมิให้เด็กเล่นกับอุปกรณ์นี้	✓	✓	✓	✓
	อุปกรณ์นี้ไม่ได้ออกแบบมาสำหรับการติดตั้งในยานพาหนะบนท้องถนน คาร์วาน และยานพาหนะในลักษณะเดียวกัน	✓	✓	✓	✓
	โปรดอย่าเก็บวัสดุที่ติดไฟได้ไว้ในเตาอบ วัสดุบางชนิดจะระเบิดเมื่อให้ความร้อนอาหารหรือเครื่องพิมพ์ที่มีแอลกอฮอล์ เนื่องจากไอของแอลกอฮอล์อาจสัมผัสกับส่วนที่ร้อนจัดของเตาอบ	✓		✓	✓

<input type="checkbox"/>	เตาไมโครเวฟหุ้กแบบมาสำหรับใช้งานบนเคาน์เตอร์เท่านั้น ไม่ควรวางเตาไมโครเวฟไว้บนของสูงดู (ดูว่าบนเคาน์เตอร์เท่านั้น)	✓	✓	✓	✓
★	คำเตือน: อุปกรณ์และชิ้นส่วนที่เข้าถึงได้อาจร้อนจัดระหว่างการใช้งาน โปรดใช้ความระมัดระวังอย่าสัมผัสขั้วต่อความร้อนภายในเตาอบ ห้ามเด็กอายุต่ำกว่า 8 ขวบใช้อุปกรณ์ ยกเว้นกรณีที่มีผู้ดูแลใกล้ชิด	✓	✓	✓	✓
★	คำเตือน: ไม่ควรให้เด็กใช้เตาอบตามลำพัง ยกเว้นกรณีที่เด็กได้รับคำแนะนำเพียงพอก็จะใช้อย่างปลอดภัย และทราบถึงอันตรายจากการใช้วิธี	✓	✓	✓	✓
★	อุปกรณ์นี้สามารถใช้งานโดยเด็กที่มีอายุ 8 ปีขึ้นไปและบุคคลที่มีสมรรถภาพร่างกายประสาทสัมผัส หรือสภาพจิตใจไม่ปกติ หรือขาดประสบการณ์หรือความรู้ ถ้าได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล ห้ามเด็กเล่นกับอุปกรณ์นี้ ห้ามเด็กทำความสะอาดหรือบำรุงรักษาอุปกรณ์โดยไม่มีการดูแล	✓	✓	✓	✓
<input type="checkbox"/>	คำเตือน: ห้ามใช้เตาอบหากประตูหรือช่องเปิดเสียหาย จนกว่าจะได้รับการซ่อมแซมจากช่างผู้ชำนาญ	✓	✓	✓	✓
★	เตาอบนี้ควรอยู่ในตำแหน่งและความสูงที่เหมาะสม เพื่อให้สามารถเข้าถึงส่วนภายในเตาอบและบริเวณควบคุมได้ง่าย	✓	✓	✓	✓
<input type="checkbox"/>	คำเตือน: อาจเกิดอันตรายขึ้นได้ หากบุคคลที่ไม่ชำนาญที่มีความชำนาญเป็นผู้ซ่อมบำรุงซึ่งต้องมีการถอดฝาครอบของเครื่อง ซึ่งเป็นเครื่องป้องกันพลังงานไมโครเวฟ	✓		✓	✓
<input type="checkbox"/>	คำเตือน: ตรวจสอบว่าอุปกรณ์แล้ว ก่อนที่จะเปลี่ยนหลอดไฟ เพื่อป้องกันไฟฟ้าช็อต	✓	✓	✓	
<input type="checkbox"/>	คำเตือน: โปรดอย่าอุ่นของเหลวและอาหารอื่นในภาชนะที่ปิดสนิท เนื่องจากอาจระเบิดได้	✓		✓	✓
<input type="checkbox"/>	คำเตือน: ชิ้นส่วนที่เข้าถึงได้อาจร้อนจัดหลังจากการใช้งาน เพื่อหลีกเลี่ยงการลวกโปรดอย่าให้เด็กเล่นใกล้	✓		✓	
★	ระหว่างการใช้งานอุปกรณ์จะมีความร้อนสูง โปรดใช้ความระมัดระวังอย่าสัมผัสขั้วต่อความรอนภายในเตาอบ	✓		✓	✓
★	คำเตือน: ควรนหรือเขย่าสิ่งที่บรรจุอยู่ในขวดนมเด็กและขวดอาหารเด็ก และตรวจสอบอุณหภูมิก่อนที่จะรับประทาน เพื่อลดความเสี่ยงของการลวก			✓	

★	คำเตือนระหว่างการใช้งานเครื่องต้มด้วยไมโครเวฟ จะมีการเตือนที่ล่าช้าออกไป ดังนั้นโปรดใช้ความระมัดระวังเมื่อถือภาชนะ เพื่อป้องกันสถานการณ์นี้ โปรดพิจารณาอาหารอย่างน้อย 20 วินาที หลังจากเปิดเตาอบ เพื่อให้อุณหภูมิกระจายตัวอย่างสม่ำเสมอทุกครั้ง คนอาหารระหว่างให้ความร้อนถ้าจำเป็น และคนทุกครั้ง หลังจากอุ่นในกรณีที่ของเหลวลวก โปรดปฏิบัติตามคำแนะนำในการปฐมพยาบาล: <ul style="list-style-type: none"> • แขนบริเวณที่ถูกลวกในน้ำเย็นเป็นเวลาอย่างน้อย 10 นาที • พั่นด้วยผ้าพันแผลที่แห้งและสะอาด • โปรดอย่าทาครีม น้ำมัน หรือโลชั่น 		✓	✓	✓
★	อุปกรณ์นี้ไม่เหมาะสำหรับบุคคล (รวมถึงเด็ก) ที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตใจไม่ปกติ หรือขาดประสบการณ์หรือความรู้ ยกเว้นจะได้รับคำแนะนำหรือได้รับการคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล	✓	✓	✓	✓
★	ก่อนที่จะใช้เตาอบเป็นครั้งแรก ควรใช้เตาอบกับน้ำเป็นเวลา 10 นาที จากนั้นจึงใช้งาน	✓	✓	✓	✓
★	ควรวางเตาอบในตำแหน่งที่สามารถเข้าถึงปลั๊กไฟได้ ถ้าอุปกรณ์มีเสียงผิดปกติ มีควันหรือกลิ่นไหม้ ให้ถอดปลั๊กทันที และติดต่อศูนย์บริการใกล้บ้าน	✓	✓	✓	✓
<input type="checkbox"/>	ระหว่างการทำความสะอาด พื้นผิวอาจร้อนกว่าปกติ และควรระวังอย่าให้เด็กอยู่ใกล้เสียง (รุ่นที่มีฟังก์ชันทำความสะอาดเท่านั้น)		✓	✓	
<input type="checkbox"/>	ต้องจัดเศษอาหารที่หกค้างอยู่ ก่อนที่จะทำความสะอาด และควรระวังว่าสามารถใส่เครื่องใช้ใดไว้ในเตาอบระหว่างการทำความสะอาดได้ (เฉพาะรุ่นที่มีการทำความสะอาด)	✓	✓	✓	✓
★	อุปกรณ์นี้ควรจะสามารถถอดสายไฟออกจากด้านหลังที่ติดตั้งแล้ว สามารถดำเนินการถอดอุปกรณ์ออกจากแหล่งจ่ายไฟด้วยการทำให้อุปกรณ์ในตำแหน่งที่เอียงถึง หรือใช้สวิตช์กับการเดินสายตามที่ตามกฎหมายของการเดินสาย (เฉพาะรุ่นที่ทำงานในตำแหน่ง)	✓	✓	✓	✓
<input type="checkbox"/>	กรณีที่ปลั๊กไฟของเครื่องใช้ไฟฟ้าทำให้เกิดเสียง ต้องให้ผู้ผลิต ตัวแทนให้บริการ หรือผู้ที่มีความชำนาญเป็นผู้เปลี่ยนสายไฟ เพื่อไม่ให้เกิดอันตราย		✓		


⚠️ ข้อควรระวัง		🔥	⚡	💧	🔪
★	โปรดใช้เฉพาะภาชนะที่เหมาะสมกับเตาไมโครเวฟเท่านั้น ห้ามใช้ภาชนะที่เป็นโลหะ ภาชนะที่มีขอบทองหรือเงิน เหล็กเสียบ ส้อม ฯลฯ น้ำลวดที่ใช้ตัดปากถุงออกจากถุงกระดาษหรือถุงพลาสติกก่อน สาเหตุ: อาจมีประกายไฟเกิดขึ้น ซึ่งทำให้เตาไมโครเวฟเสียหาย	✓		✓	✓
★	เมื่ออุ่นอาหารในภาชนะพลาสติก โปรดระวังว่าอาจจะมีการติดไฟขึ้นในเตาอบ	✓		✓	
⊘	ห้ามใช้เตาไมโครเวฟเพื่อทำให้หนังสือพิมพ์หรือผ้าแห้ง	✓		✓	✓
★	ใช้เวลาสั้นลงสำหรับอาหารปริมาณน้อย เพื่อป้องกันอาหารร้อนเกินและไหม้	✓		✓	✓
🔧	ถ้าพบว่ามีควัน ให้ปิดหรือถอดปลั๊กอุปกรณ์ และอย่าเปิดประตูเตาอบ เพื่อให้เกิดเปลวไฟ	✓		✓	✓
★	ทำความสะอาดและจัดอาหารตากอย่างสม่ำเสมอ	✓	✓		✓
⊘	ห้ามจุ่มสายไฟหรือปลั๊กในน้ำ และระวังอย่าให้สายไฟอยู่ใกล้พื้นผิวที่ร้อน	✓	✓		
⊘	ห้ามอุ่นร้อนหรือให้ความร้อนกับไข่ทั้งเปลือกหรือไข่ต้มในเตาไมโครเวฟ เนื่องจากอาจระเบิดได้ แม้ว่าจีสันสุดท้ายให้ความร้อนของไมโครเวฟแล้วก็ตาม นอกจากนี้ อย่าให้ความร้อนขวดหรือภาชนะที่ปิดฝาสนิทหรือเป็นสุญญากาศ ถ้วยที่มีเปลือก มะเขือเทศ ฯลฯ			✓	✓
⊘	ห้ามเปิดหรือบังช่องระบายอากาศด้านหลังของเตาด้วยผ้าหรือกระดาษ ผ้าหรือกระดาษอาจติดไฟ ขณะที่มีการระบายอากาศหรือออกจากเตา เตาอบอาจมีความร้อนสูงเกินไป และติดการทำงานโดยอัตโนมัติ และจะไม่สามารถใช้งานได้นานกว่าจะเย็นลง	✓		✓	
🚫	ทุกครั้ง จะต้องใช้ถุงมือกันความร้อนขณะนำอาหารออกจากเตาเพื่อป้องกันความร้อนลวก			✓	
🚫	ห้ามสัมผัสหลอดความร้อนหรือผืนด้านในของเตาอบจนกว่าจะเย็นลงเสียก่อน			✓	
★	คนของเหลวเมื่อถึงครึ่งหนึ่งของเวลาอุ่น หรือหลังจากสิ้นสุดการอุ่นร้อน และพักให้ของเหลวเย็นลงอย่างน้อย 20 วินาทีหลังจากให้ความร้อนเพื่อป้องกันการเดือดและกระเด็น			✓	
★	ยืนห่างจากเตาอบประมาณหนึ่งช่วงแขนเมื่อเปิดประตู เพื่อป้องกันไอน้ำหรืออากาศร้อนลวก			✓	

⊘	ห้ามใช้งานไมโครเวฟเมื่อไม่มีอาหารอยู่ภายในเตา เตาไมโครเวฟจะปิดลงโดยอัตโนมัติหลังจากผ่านไป 30 นาทีเพื่อความปลอดภัย ขอแนะนำให้วางแก้วน้ำไว้อย่างน้อย 1 แก้วในเตาอบตลอดเวลา เพื่อลดอุณหภูมิของไมโครเวฟในกรณีที่เตาไมโครเวฟทำงานโดยไม่ได้อัตโนมัติ	✓			✓
⊘	ห้ามใช้สารทำความสะอาดที่มีฤทธิ์กัดกร่อนหรือที่ขัดโลหะเพื่อทำความสะอาด เนื่องจากจะทำให้พื้นผิวเป็นรอยและทำให้แก้วแตกได้	✓			✓
★	ติดตั้งเตาอบตามระยะห่างที่กำหนดในคู่มือนี้ (ดูที่ การติดตั้งเตาไมโครเวฟ)	✓		✓	
★	ใช้ความระมัดระวังเมื่อถอดอุปกรณ์ไฟฟ้าเข้ากับเตาเสียบปลั๊กเตาอบ	✓	✓	✓	


การติดตั้งเตาไมโครเวฟ

วางเตาไว้บนพื้นผิวที่เรียบและได้ระดับ 85 ซม. เหนือพื้น พื้นผิวควรมีความแข็งแรงเพียงพอที่จะรับน้ำหนักของเตาได้อย่างปลอดภัย

- เมื่อคุณติดตั้งเตาอบ โปรดจติวางให้มีระยะระบายอากาศที่เพียงพอ โดยเว้นช่องว่างอย่างน้อย 10 ซม. (4 นิ้ว) ที่ด้านหลังและด้านข้างของเตาอบ และเว้นที่ 20 ซม. (8 นิ้ว) ด้านบนของเตาอบ

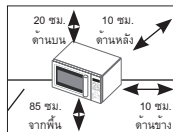

- นำวัสดุที่เป็นบรรจุภัณฑ์ภายในเตาอบออก ติดตั้งวงแหวนและจานหมุน และตรวจสอบว่าสามารถหมุนได้อย่างอิสระ

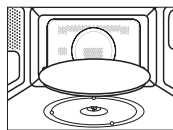

- เตาไมโครเวฟจะต้องอยู่ในตำแหน่งที่คุณสามารถเอื้อมถึงปลั๊กได้ง่าย

กรณีที่สายไฟของเครื่องใช้ไฟฟ้านี้เกิดเสียหาย ต้องใช้สายไฟหรือชุดสายไฟเฉพาะที่มีให้จากผู้ผลิตหรือตัวแทนผู้ให้บริการ

เพื่อความปลอดภัยของคุณ โปรดต่อสายไฟของเตาไมโครเวฟกับเต้าเสียบ 3 ขา 220 โวลต์ 50 Hz ที่มีการลงกราวด์ ถ้าสายไฟของเครื่องใช้ไฟฟ้าเสียหาย จะต้องเปลี่ยนทดแทนด้วยสายไฟฟ้าพิเศษ

ห้ามติดตั้งเตาไมโครเวฟในบริเวณที่มีความร้อนและความชื้นสูง เช่น ถัดจากเตาอบธรรมดาหรือเครื่องทำความร้อน โปรดปฏิบัติตามข้อกำหนดการจ่ายไฟของเตาอบ และหากจะใช้สายต่อ จะต้องใช้สายที่เป็นมาตรฐานเดียวกับสายไฟของเตาอบ เช็ดด้านในของซิลประตูด้วยผ้าหมาด ก่อนที่จะใช้เตาไมโครเวฟเป็นครั้งแรก

การตั้งเวลา

เตาไมโครเวฟของคุณมีนาฬิกาอยู่ภายใน เมื่อมีการจ่ายไฟ “0”, “88:88” หรือ “12:00” จะปรากฏบนหน้าจอแสดงผลโดยอัตโนมัติ

โปรดตั้งเวลาปัจจุบัน ซึ่งสามารถแสดงเวลาในระบบ 24 หรือ 12 ชั่วโมง คุณจะต้องตั้งเวลาของนาฬิกา:

- เมื่อติดตั้งเตาไมโครเวฟเป็นครั้งแรก
- หลังจากไฟดับ

 
อย่าลืมปรับเวลา ถ้าคุณต้องสลับระหว่างเวลาของฤดูร้อนและฤดูหนาว

- ถ้าต้องการแสดงเวลาในรูปแบบ... ให้กดปุ่ม ...

เวลาแบบ 12 ชั่วโมง หนึ่งครั้ง
เวลาแบบ 24 ชั่วโมง สองครั้ง




- กดปุ่ม และ เพื่อกำหนดชั่วโมง



- กดปุ่ม



 - กดปุ่ม และ เพื่อตั้งนาฬิกา




- เมื่อนาฬิกาแสดงเวลาถูกต้องแล้ว ให้กดปุ่ม อีกครั้งเพื่อให้นาฬิกาเริ่มเดิน

ผลลัพธ์: เวลานี้จะปรากฏเมื่อใดก็ตามที่คุณไม่ได้ใช้เตาไมโครเวฟ



การตรวจสอบว่าเตาไมโครเวฟของคุณทำงานอย่างถูกต้อง

กระบวนการง่าย ๆ ต่อไปนี้ช่วยให้คุณตรวจสอบว่าเตาไมโครเวฟของคุณทำงานถูกต้องอยู่เสมอ หากคุณมีข้อสงสัย โปรดอ่านข้อมูลในหัวข้อ "ควรทำอะไรเมื่อเกิดข้อสงสัยหรือมีปัญหา"

-  เตาอบจะต้องเข้ากับปลั๊กไฟที่ผนังอย่างถูกต้อง จานหมุนจะต้องอยู่ในตำแหน่งที่ถูกต้องในเตา ถ้ามีการใช้พลังงานนอกเหนือจากระดับสูงสุด (100 % - 900 วัตต์) น้ำจะใช้เวลาเดือดนานขึ้น

เปิดประตูเตาอบโดยดึงที่จับที่ด้านขวาของประตู

วางแก้วใส่น้ำโบนจานหมุน ปิดประตู

กดปุ่ม **เริ่มทำงาน** (▶) และตั้งเวลาเป็น 4 หรือ 5 นาที โดยกดปุ่ม **เริ่มทำงาน** (▶) เป็นจำนวนครั้งที่เหมาะสม

ผลลัพธ์: เตาจะให้ความร้อนกับน้ำเป็นเวลา 4 หรือ 5 นาที น้ำควรจะเดือด


เริ่มทำงาน / +30 วินาที
Start / +30s

เตาไมโครเวฟทำงานอย่างไร

ไมโครเวฟเป็นคลื่นแม่เหล็กไฟฟ้าที่มีความถี่สูง พลังงานที่ปล่อยออกมาทำให้อาหารสุกหรือร้อนขึ้น โดยไม่มีการเปลี่ยนรูปร่างหรือสี


คุณสามารถใช้เตาไมโครเวฟเพื่อ:

- ละลายน้ำแข็ง
- อุ่นอาหาร
- อบอาหาร


หลักการอบอาหาร

1. ไมโครเวฟที่เกิดจากแมกเนตรอนจะสะท้อนอยู่ในช่องเตาอบ และกระจายอย่างเป็นระเบียบ ในขณะที่อาหารหมุนอยู่บนจานหมุน ทำให้อาหารสุกทั่วถึงกัน
2. อาหารจะดูดซับไมโครเวฟประมาณ 1 นิ้ว (2.5 ซม.) จากนั้นการอบอาหารจะเกิดขึ้นต่อไป เมื่อมีการถ่ายเทความร้อนภายในอาหาร
3. เวลาในการอบอาหารจะขึ้นอยู่กับภาชนะใส่อาหาร และคุณสมบัติของอาหารนั้นๆ:

- ปริมาณและความหนาแน่น
- ปริมาณน้ำภายในอาหาร
- อุณหภูมิเริ่มต้น (มีการแช่เย็นไว้หรือไม่)

 เนื่องจากส่วนกลางของอาหารสุกเนื่องจากการถ่ายเทความร้อน การอบอาหารจึงเกิดขึ้นแม้ว่าคุณจะนำอาหารออกจากเตาแล้วก็ตาม ดังนั้น โปรดปฏิบัติตามเวลาพักที่แนะนำในตำราอาหารและในคู่มือนี้เพื่อให้:

- อาหารสุกทั่วถึงกันจนถึงด้านใน
- อาหารมีอุณหภูมิเท่ากันทั้งหมด

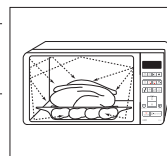

ควรทำอย่างไรเมื่อเกิดข้อสงสัยหรือมีปัญหา

การสร้างความคุ้นเคยกับเครื่องใช้ชนิดใหม่ในบ้านมักจะต้องใช้เวลา หากคุณมีปัญหาเช่นเดียวกับที่กล่าวถึงในหัวข้อนี้ โปรดลองใช้ขั้นตอนการแก้ไขที่ระบุ ซึ่งอาจช่วยประหยัดเวลาและช่วยให้คุณติดต่อศูนย์บริการโดยใช่จำเป็น

ต่อไปนี้ เป็นสภาพการทำงานปกติ

- เกิดไออุ่นเกาะตัวในเตาอบ
- มีอากาศหมุนเวียนใกล้ประตูและด้านนอกของเตาอบ
- มีการสะท้อนแสงรอบๆ ประตูและกรอบด้านนอก
- มีไออุ่นออกมาจากข้างประตูหรือช่องระบายอากาศ

อาหารไม่สุกเลย

- คุณกำหนดเวลาถูกต้อง และกดปุ่ม **เริ่มทำงาน** (▶) แล้วหรือไม่
- ประตูปิดเรียบร้อยหรือไม่
- คุณใช้วงจรไฟฟ้าเกินกำลัง และทำให้ฟิวส์ขาดหรือทำให้เบรกเกอร์ตัดไฟหรือไม่

อาหารสุกเกินไปหรือไม่สุกพอ

- คุณใช้ระยะเวลาในการอบอาหารเหมาะสมกับชนิดของอาหารหรือไม่
- ระดับพลังงานที่เลือกถูกต้องหรือไม่

มีประกายไฟหรือเสียงแตกเกิดขึ้นภายในเตาอบ (เกิดประกายไฟ)

- คุณใช้จานที่มีขอบโลหะหรือไม่
- คุณลืมส้อมหรือเครื่องใช้ในครัวที่เป็นโลหะไว้ในเตาอบหรือไม่
- แผ่นฟอยล์อะลูมิเนียมใกล้กับผนังด้านในของเตาอบหรือไม่

เตาอบทำให้เกิดสัญญาณรบกวนหรือไหม้หรือไหม้

- คุณอาจพบสัญญาณรบกวนหรือไหม้หรือไหม้เล็กน้อย เมื่อเตาอบทำงาน ซึ่งเป็นอาการปกติ
 - วิธีแก้ปัญหา: จิตว่างเตาอบให้ห่างจากโทรทัศน์ วิทยุ และเสารายอากาศ
- ถ้าไม่ใคร่เช็ดเชอร์ของเตาอบพบสัญญาณรบกวน อาจจะมีการรีเซ็ตจอแสดงผล
 - วิธีแก้ปัญหา: ถอดสายไฟของเตาอบออก ตั้งเวลาใหม่

ข้อความ "E - 24" หมายถึง

- ข้อความ "E - 24" จะปรากฏอัตโนมัติ ก่อนหน้าที่ไมโครเวฟจะมีความร้อนสูงเกินไป หากข้อความ "E - 24" ปรากฏขึ้น ให้กดปุ่ม "หยุดยกเลิก" เพื่อรีเซ็ตใหม่เริ่มต้น


ถ้าคำแนะนำข้างต้นไม่สามารถแก้ไขปัญหาก็ได้ โปรดติดต่อศูนย์บริการลูกค้า SAMSUNG ใกล้บ้านคุณ โปรดเตรียมข้อมูลต่อไปนี้

- หมายเลขรุ่นและหมายเลขผลิตภัณฑ์ ซึ่งมักจะพิมพ์ไว้ที่ด้านหลังของเตาอบ
- รายละเอียดของการรับประกัน
- คำอธิบายปัญหาอย่างชัดเจน

จากนั้นติดต่อผู้แทนจำหน่าย หรือฝ่ายบริการหลังการขายของ SAMSUNG

การอบ/อุ่นอาหาร

ขั้นตอนต่อไปนี้กล่าวถึงการอบและการอุ่นอาหาร

-  โปรดตรวจสอบการตั้งค่าการอบอาหารทุกครั้ง ก่อนที่จะปล่อยให้เตาอบทำงานตามลำพัง เปิดประตู วางอาหารที่ส่วนกลางของจานหมุน ปิดประตู ห้ามเปิดเครื่อง หากเตาอบว่างเปล่า

1. กดปุ่ม **ไมโครเวฟ**

ผลลัพธ์: หน้าจอจะแสดงผลดังนี้:
 (โหมดไมโครเวฟ)

ไมโครเวฟ
Microwave

2. เลือกดับพลังงานที่เหมาะสม โดยกดปุ่ม **ไมโครเวฟ** ซ้ำ จนกว่าจะแสดงผลกำลังไฟที่ต้องการ โปรดดูรายละเอียดในตารางแสดงระดับพลังงานด้านล่าง

ไมโครเวฟ
Microwave

3. กำหนดเวลาในการอบอาหารโดยกดปุ่ม (∧) และ (∨)

ผลลัพธ์: เครื่องจะแสดงเวลาอบอาหารขึ้น




4. กดปุ่ม **เริ่มทำงาน** (▶)


ผลลัพธ์: ไฟของเตาอบจะสว่างขึ้น และจานหมุนจะเริ่มหมุน การอบอาหารจะเริ่มขึ้น และเมื่อเสร็จแล้ว:

- เตาอบส่งเสียงและแสดง "0" กะพริบสี่ครั้ง
- เตาอบจะส่งเสียงหนึ่งครั้งทุกนาที


เริ่มทำงาน /+30 วินาที
Start / +30s

-  หากคุณต้องการทราบระดับพลังงานของเตาอบ ให้กดปุ่ม **ไมโครเวฟ** หนึ่งครั้ง หากคุณต้องการเปลี่ยนระดับพลังงานระหว่างการอบอาหาร ให้กดปุ่ม **ไมโครเวฟ** สองครั้งขึ้นไป เพื่อเลือกระดับพลังงานที่ต้องการ

การเริ่มต้นอย่างรวดเร็ว:

-  หากคุณต้องการอุ่นอาหารเป็นเวลาสั้นๆ โดยใช้พลังงานสูงสุด (900 วัตต์) คุณสามารถกดปุ่ม **เริ่มทำงาน** (▶) หนึ่งครั้งต่อเวลาการอบ 30 วินาที เตาอบจะทำงานทันที

ระดับพลังงานและการปรับเวลา

ฟังก์ชันระดับพลังงานช่วยให้คุณสามารถปรับปริมาณพลังงานที่จะใช้ พร้อมทั้งเวลาที่ใช้ในการอบหรืออุ่นอาหาร ตามชนิดและปริมาณของอาหารนั้น คุณสามารถเลือกระดับพลังงานได้ถึงหกระดับ

ระดับพลังงาน	เปอร์เซ็นต์	กำลังไฟฟ้า
สูง	100 %	900 วัตต์
สูงปานกลาง	67 %	600 วัตต์
ปานกลาง	50 %	450 วัตต์
ต่ำปานกลาง	33 %	300 วัตต์
ลดหย่อนครึ่ง	20 %	180 วัตต์
ต่ำ	11 %	100 วัตต์

เวลาอบอาหารที่ระบุในตำราอาหารและในคู่มือนี้จะสอดคล้องกับระดับพลังงานที่ระบุไว้

ถ้าคุณเลือก...	เวลาการอบอาหารจะเป็น...
ระดับพลังงานสูง ระดับพลังงานต่ำ	ลดลง เพิ่มขึ้น

การหยุดการอบอาหาร

คุณสามารถหยุดการอบอาหารได้ตลอดเวลา เพื่อ:

- ตรวจสอบอาหาร
- พลิกด้านหรือคนอาหาร
- พักอาหาร

ในการหยุดการอบอาหาร...	จากนั้น...
ชั่วคราว	เปิดประตู ผลลัพธ์: การอบจะหยุดลง หากต้องการอบอาหารต่อ ให้เปิดประตูและกดปุ่ม เริ่มทำงาน (▶)
โดยสิ้นเชิง	กดปุ่ม หยุด (⏏) ผลลัพธ์: การอบจะหยุดลง หากคุณต้องการยกเลิกการตั้งค่าการอบ ให้กดปุ่ม หยุด (⏏) อีกครั้ง

การปรับเวลาอบอาหาร

คุณสามารถเพิ่มเวลาในการอบอาหาร โดยกดปุ่ม +30 วินาทีหนึ่งครั้งสำหรับการเพิ่ม 30 วินาที

- ดูความคืบหน้าของการอบเมื่อใดก็ได้ โดยเปิดประตูของเตาอบ
- เพิ่มเวลาที่เหลือในการปรุงอาหาร

ในการเพิ่มเวลาอบอาหาร ให้กดปุ่ม **เริ่มทำงาน** (▶) หนึ่งครั้งต่อ 30 วินาทีที่คุณต้องการเพิ่ม

- ตัวอย่าง: หากต้องการเพิ่มเวลาอบอีกสามนาที ให้กดปุ่ม **เริ่มทำงาน** (▶) หกครั้ง



การใช้คุณสมบัติเมนูไทย

คุณสมบัติเมนูไทยสืบแบบมีไทม์เวลาในการปรุงอาหารที่กำหนดไว้ล่วงหน้า โดยคุณไม่จำเป็นต้องตั้งเวลาอบหรือระดับพลังงานอีก

คุณสามารถปรับปริมาณของอาหาร โดยกดปุ่ม (Λ) และ (V)

เปิดประตู วางอาหารที่ส่วนกลางของจานหมุน ปิดประตู

1. กด ปุ่ม เมนูไทย

เมนูไทย
Thai Menu

2. เลือกประเภทอาหารที่คุณชอบด้วยการกดปุ่ม เมนูไทย โปรดดูตารางในหน้าถัดไปเพื่อดูคำอธิบายการตั้งค่าต่างๆ

เมนูไทย
Thai Menu

3. เลือกปริมาณอาหารโดยกดปุ่ม (Λ) และ (V)

เพิ่ม
Λ
ลด
V

4. กดปุ่ม เริ่มทำงาน (▶)

ผลลัพธ์:

เตาอบจะอบอาหารตามการตั้งค่าล่วงหน้าที่คุณเลือกไว้

- เมื่อสิ้นสุดการอบอาหาร เตาจะส่งเสียงเตือน พร้อมกับกะพริบ "0" สี่ครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาฬิกาละครั่ง

▶
เริ่มทำงาน /+30 วินาที
Start / +30s

ตารางต่อไปนี้จะแสดงโปรแกรมเมนูไทยแบบต่างๆ รวมทั้งปริมาณ เวลาพักอาหาร และคำแนะนำที่เหมาะสม

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ	คำแนะนำ
1.	ข้าว	320 กรัม	ข้าว - 1 ถ้วย, น้ำ - 1¼ ถ้วย	1. เติมน้ำ น้ำในถ้วยและปิดฝา 2. หุงและปิดฝาไว้เป็นเวลา 15-20 นาทีก่อนรับประทาน
2.	ข้าวกล้อง	350 กรัม	ข้าวกล้อง - 1 ถ้วย, น้ำสำหรับหุง - 2 ถ้วย, น้ำสำหรับล้างข้าว	1. เติมน้ำข้าวกล้องในถ้วย เติมน้ำและปิดฝา 2. หุงและรอ 10 นาทีก่อนรับประทาน
3.	ข้าวเหนียว	350-400 กรัม	ข้าวเหนียว - 1 ถ้วย, น้ำ - ½ ถ้วย	1. เติมน้ำเหนียว เติมน้ำในถ้วยและปิดฝา 2. หุงและปิดฝาไว้เป็นเวลา 15-20 นาทีก่อนรับประทาน
4.	ข้าวต้ม/โจ๊กหมู	600-750 กรัม	ข้าวสวย - 1 ถ้วย, น้ำ - 500 มล., หมูสับ - ½ ถ้วย, พริกไทยป่น - 1 ช้อนโต๊ะ, ซีอิ๊ว - 1 ช้อนโต๊ะ, น้ำมันหอย - 1 ช้อนโต๊ะ, ต้นหอม, ต้นไชย, ผักชี - ½ ถ้วย	1. นำหมูสับมาคลุกพริกไทย น้ำมันหอยและปั้นเป็นก้อนกลม 2. ใส่หมวกก่อน ข้าวสวย น้ำ และปรุงรสด้วยผงปรุงรสหมู คนให้เข้ากันและอบ 3. โรยต้นไชย ต้นหอม ผักชี ก่อนรับประทาน
5.	แกงจืดเต้าหู้สำหรับ	850 กรัม	หมูสับ - 100 กรัม, พริกไทย - ¼ ช้อนชา, ต้นหอม - ¼ ถ้วย, ผักชี - 1 ช้อนโต๊ะ, น้ำ - 500 มล., น้ำปลา - 1 ช้อนโต๊ะ, เต้าหู้หลอด - 2 หลอด, สาหร่ายทะเลแห้ง - ¼ ถ้วย, น้ำมันหอย - 1 ช้อนโต๊ะ, พริกไทย - 1 ช้อนโต๊ะ	1. หมักหมูกับพริกไทยเป็นเวลา 5 นาที 2. เติมน้ำ หมูสับ เต้าหู้อ่อนและอบ 3. เติมน้ำมันหอย ผักชี และพริกไทย สาหร่ายทะเลแห้ง พร้อมรับประทาน

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ	คำแนะนำ
6.	ต้มยำกุ้ง	920 กรัม	กุ้ง - 150 กรัม, ข่าผ่านบางๆ - 4 แวน, ใบมะกรูด - ¼ ถ้วย, ตะไคร้- 2 ต้น, น้ำร้อน - 500 มล., เติบ - 1 ถ้วย, มะเขือเทศ - 4 ลูก, พริกเผา - 1 ช้อนโต๊ะ, นมข้นจืด - ¼ ถ้วย, น้ำปลา - 3 ช้อนโต๊ะ, น้ำมันหอย - 3 ช้อนโต๊ะ, พริก - 10 เม็ด	1. ใส่ข่า ตะไคร้ ลวกในมะกรูด มะเขือเทศ น้ำพริกเผาในน้ำร้อน และรอ 2 นาที 2. เติบกุ้ง เติบ พริก และอบ 3. จากนั้นเติมนมข้นจืด ปรง รสด้วยน้ำปลา น้ำมันหอย พริก และรับประทานขณะร้อน
7.	ไข่ตุ๋น	400-450 กรัม	ไข่สด - 2 ฟอง, นมข้นจืด - 2 ช้อนโต๊ะ, น้ำ - ¼ ถ้วย, ซอสถั่วเหลืองแบบญี่ปุ่น - 1 ช้อนโต๊ะ, เกลือ - ¼ ช้อนชา, ปูอัด - ¼ ถ้วย, กุ้งต้ม - 4 ตัว	1. ใส่ไข่ในถ้วย ตีและเติมนมข้นจืด น้ำและปรุงรสด้วยซอสถั่วเหลืองแบบญี่ปุ่น เติมเกลือและตีให้เข้ากัน 2. อบและตกแต่งด้วยปูอัดและกุ้งก่อนรับประทาน
8.	ไข่เจียว	120 กรัม	ไข่ - 2 ฟอง, มะเขือเทศสับ - 1 ช้อนโต๊ะ, หัวหอมสับ - 1 ช้อนโต๊ะ, ซีอิ๊ว - ¼ ช้อนโต๊ะ, เนย - 1 ช้อนโต๊ะ	1. ผสมไข่ มะเขือเทศสับ หัวหอมสับและซอสถั่วเหลือง จากนั้นคนให้เข้ากัน 2. ทาเนยบนจาน ใส่ส่วนผสมบนจานและอบ
9.	สปาเก็ตตี้ครีมซอส	450-500 กรัม	หัวหอม - ¼ ถ้วย, น้ำ - ¼ ถ้วย, แยมลูก - ¼ ถ้วย, สปาเก็ตตี้สด - 80 กรัม, เนยเค็ม - 2 ช้อนโต๊ะ, เบียร์ - 3 โย, แป้ง - 1 ช้อนโต๊ะ, วิปครีม - 100 มล., เติบผ่านเป็นแวน - ¼ ถ้วย, เกลือ, พริกไทย - ¼ ช้อนชา, มอซซาเรลล่าชีส - 2 ช้อนโต๊ะ	1. ผสมน้ำและแป้ง จากนั้นเติมนม เนย วิปครีม เบียร์ หัวหอมสับ แยม เติบ ปรงรสด้วยพริกไทยและเกลือ 2. อบและเติมนมมอซซาเรลล่าชีส คนและรับประทานพร้อมสปาเก็ตตี้

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ	คำแนะนำ
10.	สังขยามะพร้าว	130 กรัม	ไข่เป็ด - 3, น้ำตาล - ¼ ถ้วย, กระทิ - 1 ถ้วย, ใบเตย - 2-3, พักทองหั่นลูกเต๋า - 1 ถ้วย	1. ผสมไข่และคนให้เข้ากัน น้ำคั้นใบเตย จนได้กลิ่นหอมใบเตย จากนั้นคนให้เข้ากัน น้ำตาล เติมเฉพาะน้ำมะพร้าว 2. เติมพักทองหั่นลูกเต๋า จากนั้นอบ ทิ้งให้เย็นแล้วรับประทาน

การใช้คุณสมบัติเมนูย่าง

คุณสมบัติเมนูย่างทกแบบมีเวลาในการปรุงอาหารที่กำหนดไว้ล่วงหน้าสลับแบบ โดยคุณไม่จำเป็นต้องตั้งเวลาอบหรือระดับพลังงานอีก

คุณสามารถปรับปริมาณของอาหาร โดยกดปุ่ม (Λ) และ (V)

เปิดประตู วางอาหารที่ส่วนกลางของจานหมุน ปิดประตู

1. กดปุ่ม เมนูย่าง

เมนูย่าง
Grill Menu

2. เลือกประเภทอาหารที่คุณต้องการอบโดยกดปุ่ม เมนูย่าง โปรดดูตารางในหน้าถัดไป เพื่อดูคำอธิบายการตั้งค่าต่างๆ

เมนูย่าง
Grill Menu

3. เลือกปริมาณอาหารโดยกดปุ่ม (Λ) และ (V)



4. กดปุ่ม เริ่มทำงาน (▶)

ผลลัพธ์:

เตาอบจะอบอาหารตามการตั้งค่าล่วงหน้าที่คุณเลือกไว้

- เมื่อสิ้นสุดการอบอาหาร เตาจะส่งเสียงเตือน พร้อมกับกะพริบ "0" สี่ครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาฬิกาละครั้ง

เริ่มทำงาน /+30 วินาที
Start / +30s


ตารางต่อไปนี้จะแสดงโปรแกรมเมนูย่างแบบต่างๆ รวมทั้งปริมาณ เวลาพักอาหาร และคำแนะนำที่เหมาะสม

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ	คำแนะนำ
1.	ขนมปังกระเทียม	200-250 กรัม	ขนมปังฝรั่งเศส - 10 ชิ้น, เนย - 2 ช้อนโต๊ะ, เกลือ - ½ ช้อนชา, กระเทียม - 1 ช้อนโต๊ะ	1. ผสมเนย เกลือ และกระเทียมเข้าด้วยกัน แล้วทาบนขนมปัง 2. วางขนมปังบนตะแกรง แล้วอบจากบนจึงนำไปรับประทาน
2.	ขนมปังหัวกุ้ง	200-220 กรัม	ขนมปังขาวตัดเป็นชิ้นสี่เหลี่ยม - 16 ชิ้น, กุ้งสด - 150 กรัม, กระเทียมสด - 1 ช้อนโต๊ะ, พริกไทย - ¼ ช้อนชา, รากผักชี - 1 ช้อนโต๊ะ, น้ำมันหอย - ¼ ช้อนโต๊ะ, ใบผักชีสำหรับตกแต่ง	1. ผสมท็อปปิงโดยใส่กุ้งสดและเครื่องเทศทั้งหมด จากนั้นปรุงรสด้วยน้ำมันหอย และคนให้เข้ากัน 2. ทาท็อปปิงบนขนมปัง 3. อบและรอให้เย็น รับประทานได้
3.	หมูสะเต๊ะ	200-250 กรัม	เนื้อหมู - 250 กรัม, พริกแกงสะเต๊ะ - 1 ช้อนโต๊ะ, หมูขัณฑ์ - 5 ช้อนโต๊ะ, เกลือ - ¼ ช้อนโต๊ะ, น้ำมันหอย - 1 ช้อนโต๊ะ, น้ำตาล - 2 ช้อนโต๊ะ	1. ผสมซอสหมัก โดยผสมพริกแกงสะเต๊ะกับน้ำมันหอย น้ำตาล เกลือ และนมข้นจืด 2. หมักเนื้อหมูกับซอสหมัก 15 นาที แล้วนำไปเสียบไม้ (ประมาณ 20 ไม้) 3. วางบนถาดแล้วอบ จากนั้นรับประทานกับน้ำจิ้ม
4.	ปีกไก่หัวออร์ลิส์	200 กรัม	ปีกไก่ - 250 กรัม, น้ำมันหอย - 2 ช้อนโต๊ะ, พริกไทย - ¼ ช้อนโต๊ะ, ซอสพริก - 1 ช้อนโต๊ะ, เบย์ลีฟ - 1 ใบ	1. ทำซอสหมักโดยผสมน้ำมันหอย เบย์ลีฟ พริกไทย ซอสพริก จากนั้นหมักกับปีกไก่ แล้วทิ้งไว้ 15 นาที 2. วางปีกไก่บนถาดอบเตรียมแล้วอบ 3. เมื่อมีสัญญาณเตือนดังขึ้น ให้พลิกปีกไก่แล้วอบต่อ
5.	ไก่เทอริยากิ	450-550 กรัม	อกไก่ติดหนัง - 500 กรัม, ซอสเทอริยากิ - 2 ช้อนโต๊ะ, ผักต้ม	1. ผสมไก่กับซอสเทอริยากิให้เข้ากัน 2. วางอกไก่ลงบนถาดย่างแล้วอบ 3. เมื่อมีสัญญาณเตือนดังขึ้น ให้กลับไก่และอบต่อ จากนั้นให้รับประทานขณะร้อนพร้อมกับผักต้ม

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ	คำแนะนำ
6.	ไก่ย่างทั้งตัว	900-1000 กรัม	ไก่ทั้งตัว (1 กก.) - 1 ตัว, น้ำตาล - ½ ช้อนโต๊ะ, น้ำมันหอย - 5 ช้อนโต๊ะ, ซีอิ๊ว - 3 ช้อนโต๊ะ, พริก ไทยดำ - 1 ช้อนโต๊ะ, ผักชี - 2 ต้น, กระเทียม - 2 ช้อน โต๊ะ, น้ำมันพืช - 2 ช้อน โต๊ะ, เหล้า - 3 ช้อนโต๊ะ	1. ปั่นกระเทียม พริกไทยดำ และราก ผักชีเข้าด้วยกัน ปั่นรสด้วยน้ำตาล น้ำมันหอย ซีอิ๊ว เหล้า และน้ำมันพืช จากนั้นผสมเข้าด้วยกัน 2. คลุกสมุนไพรมันตัวไก่และขัด สมุนไพรมันตัวไก่ทั้งตัว 15-20 นาที 3. วางไก่หมักบนถาดอย่าง จากนั้นจึงอบ 4. เมื่อมีสัญญาณเตือนดังขึ้น ให้กลับ ไก่แล้วอบต่อ นำไก่ออกมา แล้ว รับประทานขณะร้อนพร้อม น้ำจิ้มรสเผ็ด

การใช้คุณสมบัติละลายน้ำแข็ง

คุณสมบัติละลายน้ำแข็งช่วยให้คุณละลายเนื้อ ไก่ ปลา ชนมปัง เค้ก หรือผลไม้ เวลาและระดับพลังงานของการละลายน้ำแข็งจะถูกกำหนดโดยอัตโนมัติ คุณเพียงแค่เลือกโปรแกรมและน้ำหนักเท่านั้น

 โปรดใช้ภาชนะที่ระบุไว้กับไมโครเวฟได้เท่านั้น

เปิดประตู วางอาหารแช่แข็งบนภาชนะเซรามิกไว้บนส่วนกลางของจานหมุน ปิดประตู

1. กดปุ่ม ละลายน้ำแข็ง

ละลายน้ำแข็ง
Defrost

2. เลือกประเภทอาหารที่คุณต้องการอบโดยกดปุ่ม ละลายน้ำแข็ง โปรดดูตารางในหน้าถัดไป เพื่อดูคำอธิบายการตั้งค่าต่างๆ

ละลายน้ำแข็ง
Defrost

3. เลือกน้ำหนักอาหาร โดยกดปุ่ม (Λ) และ (V)

เลือกน้ำหนัก
Λ
V

4. กดปุ่ม เริ่มทำงาน (◊)

ผลลัพธ์:

- การละลายน้ำแข็งจะเริ่มขึ้น
- ในการละลายน้ำแข็ง เตาอบจะส่งเสียงเตือนให้ทราบว่าคุณต้องกลับอาหาร


เริ่มทำงาน
Start / +30s

5. กดปุ่ม เริ่มทำงาน (◊) อีกครั้ง เพื่อละลายน้ำแข็งจนเสร็จ





ผลลัพธ์:

เมื่อสิ้นสุดการอบอาหาร เตาจะส่งเสียงเตือน พร้อมกับกะพริบ "0" สี่ครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาฬิกาที่ละครั้ง

เริ่มทำงาน
Start / +30s

 คุณสามารถละลายน้ำแข็งจากอาหารโดยกำหนดค่าเองได้เช่นกัน เมื่อต้องการดำเนินการ ให้เลือกการทำงานแบบไมโครเวฟ และใช้ระดับพลังงาน 180 วัตต์ โปรดดูรายละเอียดเพิ่มเติมในหัวข้อ "การละลายน้ำแข็ง" ที่หน้า 33

ตารางต่อไปนี้เป็นตารางตั้งโปรแกรมละลายน้ำแข็งแบบต่างๆ รวมทั้งปริมาณ เวลาพักอาหาร และคำแนะนำที่เหมาะสม โปรดนำบรรจุภัณฑ์ออกจากอาหารก่อนที่จะละลายน้ำแข็ง วางเนื้อ เป็ดไก่ และปลาในจานแก้วหรือกระเบื้องกันบนแข็งวางขนมปังและเค้กบนกระดาษซับมัน

รหัส	อาหาร	ปริมาณอาหาร	เวลาพัก	คำแนะนำ
1.	เนื้อ 	200-2000 กรัม	20-90 นาที	หุ้มส่วนขอบด้วยฟอยล์อะลูมิเนียม กลับเนื้อเมื่อได้อินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับเนื้อ แกะ หมู สเต็ค เนื้อเป็นชิ้น เนื้อตับ
2.	เป็ดไก่ 	200-2000 กรัม	20-90 นาที	หุ้มขาและปลายปีกด้วยฟอยล์อะลูมิเนียม กลับเนื้อได้อินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับไก่ หังตัว หรือไก่ที่หั่นเป็นชิ้น
3.	ปลา 	200-2000 กรัม	20-80 นาที	หุ้มส่วนหางของปลาที่ยังไม่หั่นด้วยฟอยล์อะลูมิเนียม กลับเนื้อได้อินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับปลาทั้งตัว หรือปลาชิ้น
4.	ขนมปัง/เค้ก 	125-1000 กรัม	10-60 นาที	วางขนมปัง/แวนอนบนกระดาษไขและกระดาษเมื่อมีเสียงเตือน วางเค้กบนจานกระเบื้อง และพลิกกลับด้านเมื่อได้อินเสียงสัญญาณจากเตาอบ (เตาอบจะทำงานต่อไป และจะหยุดเมื่อคุณเปิดประตู) โปรแกรมนี้เหมาะสำหรับขนมปังทุกประเภท ไม่ว่าจะเป็นแบบตัดหรือหั่นก้อน เช่นเดียวกับขนมปังก้อนและแท่งแบบฝรั่งเศส วางก้อนขนมปังเป็นวงกลม โปรแกรมนี้เหมาะกับบิสกิตเค้ก บิสกิต ชีสเค้ก และฟัพทุกประเภท แต่ไม่เหมาะสำหรับขนมพัสดรูปแบบซอหรือคริสต์ เค้กผลไม้หรือครีม รวมทั้งเค้กราคช็อคโกแลต

รหัส	อาหาร	ปริมาณอาหาร	เวลาพัก	คำแนะนำ
5.	ผลไม้ 	100-600 กรัม	5-20 นาที	วางผลไม้ให้เสมอกันในจานแก้วกันบน โปรแกรมนี้เหมาะกับผลไม้ทุกประเภท

การใช้คุณสมบัติอาหารจานด่วน

คุณสมบัติอาหารจานด่วนเก็บแบบมีเวลาในการปรุงอาหารที่กำหนดไว้ล่วงหน้าสัปดาห์ โดยคุณไม่จำเป็นต้องตั้งเวลาอบหรือระดับพลังงานอีก

คุณสามารถปรับปริมาณของอาหาร โดยกดปุ่ม (Λ) และ (V)

เปิดประตู วางอาหารที่ส่วนกลางของจานหมุน ปิดประตู

1. กดปุ่ม อาหารจานด่วน

อาหาร
จานด่วน
Quick Meal

2. เลือกประเภทอาหารที่คุณต้องการอบโดยกดปุ่ม อาหารจานด่วน โปรดดูตารางในหน้าถัดไป เพื่อคู่มือรายการตั้งค่าต่างๆ

อาหาร
จานด่วน
Quick Meal

3. เลือกปริมาณอาหารโดยกดปุ่ม (Λ) และ (V)



4. กดปุ่ม เริ่มทำงาน (▶)

ผลลัพธ์:

เตาอบจะอบอาหารตามการตั้งค่าล่วงหน้าที่คุณเลือกไว้

- เมื่อสิ้นสุดการอบอาหาร เตาจะส่งเสียงเตือน พร้อมกับกะพริบ "0" สีครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาฬิกาละครั้ง

▶
เริ่มทำงาน /+30 วินาที
Start / +30s

ตารางต่อไปนี้จะแสดงโปรแกรมอาหารจานด่วนต่างๆ รวมทั้งปริมาณ เวลาพักอาหาร และคำแนะนำที่เหมาะสม

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ	คำแนะนำ
1.	บะหมี่สำเร็จรูป	670 กรัม	หมูสับ - 100 กรัม, ไข่ - 1 ฟอง, ผัก - 100 กรัม, บะหมี่สำเร็จรูป - 1 ซอง, น้ำร้อน - 2 ถ้วย	1. ใส่บะหมี่สำเร็จรูป หมูสับ ผัก และไข่รวมกันและอบ
2.	ขนมจีบกุ้งแช่แข็ง	192 กรัม (16/ชิ้น)	-	1. จัดมุมของช่องและอบ
3.	ซาลาเปาไส้หมูสับแช่แข็ง	180 กรัม (30/ชิ้น)	-	1. จัดมุมของช่องและอบ
4.	เกี๊ยวกุ้งแช่แข็ง	250 กรัม	-	1. นำถุงด้านนอกออกก่อนอุ่น 2. เจาะฟิล์มให้เป็นรู 3-4 ครั้ง และปรุง
5.	ข้าวต้มปลาเก๋าแช่แข็ง	350 กรัม	-	1. นำถุงด้านนอกออกก่อนอุ่น 2. เปิดฝาด้านบน เติมน้ำตามขีดที่ระบุ 3. ปิดฝาให้แน่นไว้เพื่อให้ระบายไอน้ำออกไต่ระหว่างให้ความร้อนและอบอาหาร
6.	สปาเก็ตตี้ซอสไก่แช่แข็ง	450 กรัม	-	1. นำถุงด้านนอกออกก่อนอุ่น 2. เจาะฟิล์มให้เป็นรู 3-4 ครั้ง และอบ
7.	ข้าวผัดกุ้ง	220 กรัม	-	1. นำถุงด้านนอกออกก่อนอุ่น 2. เปิดฝาด้านบนและปรุง

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ	คำแนะนำ
8.	ข้าวกระเพราไก่แซ่แข็ง	295 กรัม	-	1. นำถุงด้านนอกออกก่อนอุ่น 2. เจาะฟิล์มให้เป็นรู 3-4 ครั้ง และอบ
9.	บัวลอยเผือก	160 กรัม	-	1. นำกล่องด้านนอกออกก่อนอุ่น 2. เจาะฟิล์มให้เป็นรู 3-4 ครั้ง 3. ปรุงอาหารและนำออกมาเขย่า เมื่อมีเสียงเตือน 4. อบอีกครั้ง

การใช้คุณสมบัติเมนูอบ

คุณสมบัติเมนูอบทำงานแบบมีเวลาในการปรุงอาหารที่กำหนดไว้ล่วงหน้าสลับ โดยคุณไม่จำเป็นต้องตั้งเวลาอบหรือระดับพลังงานอีก

คุณสามารถปรับปริมาณของอาหาร โดยกดปุ่ม (Λ) และ (V)

เปิดประตู วางอาหารที่ส่วนกลางของจานหมุน ปิดประตู

1. กดปุ่ม เมนูอบ

เมนูอบ
Bake Menu

2. เลือกประเภทอาหารที่คุณอบด้วยการกดปุ่ม เมนูอบ โปรดดูตารางในหน้าถัดไป เพื่อดูคำอธิบายการตั้งค่าต่างๆ

เมนูอบ
Bake Menu

3. เลือกน้ำหนักอาหาร โดยกดปุ่ม (Λ) และ (V)



4. กดปุ่ม เริ่มทำงาน (◀)

ผลลัพธ์:

เตาอบจะอบอาหารตามการตั้งค่าล่วงหน้าที่คุณเลือกไว้

- เมื่อสิ้นสุดการอบอาหาร เตาจะส่งเสียงเตือน พร้อมกับกะพริบ "0" สีครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาฬิกาครั้ง

เริ่มทำงาน /+30 วินาที
Start / +30s

ตารางต่อไปนี้จะแสดงโปรแกรมเมนูแบบต่างๆ รวมทั้งปริมาณ เวลาพักอาหาร และคำแนะนำที่เหมาะสม


รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ	คำแนะนำ
1.	ข้าวต้มกับกุ้งเชื่อง	450 กรัม	ข้าวสุก - 2 ถ้วย, กุ้งเชื่อง หั่นลูกเต๋า - ¼ ถ้วย, แครอท หั่นลูกเต๋า - ¼ ถ้วย, หน่อ ไม้หั่นหั่นลูกเต๋า - ¼ ถ้วย, ข้าวโพดอ่อน - ¼ ถ้วย, ซอสถั่วเหลือง - 1 ช้อน โต๊ะ, น้ำมันหอย - ¼ ช้อน โต๊ะ, น้ำมันพืช - 1 ช้อนโต๊ะ, กระเทียมสับ - 1 ช้อนโต๊ะ	1. ใส่กุ้งเชื่องและกระเทียมลงใน ซาม แล้วอบ 2. เมื่อมีสัญญาณเตือนตั้งขึ้น ให้ เติมน้ำ แล้วปรุงรสด้วยซอส และ ใส่ส่วนผสมทั้งหมดลงในซาม คนให้ เข้ากัน แล้วใส่ในเตาอบและเริ่มอบ รับประทานขณะร้อน
2.	หอยอบกระเทียม	300 กรัม	เนยเค็ม - 50 กรัม, กระเทียม - 4 ช้อนโต๊ะ, พาร์สลีย์สับ - 2 ช้อนโต๊ะ, พริกไทยดำ - ¼ ช้อนโต๊ะ, หอยเชลล์ - 15 ชิ้น, ขนบั้งซีลี - ¼ ถ้วย	1. ผสมเนย กระเทียม พริกไทยดำ พาร์สลีย์สับ และขนบั้งซีลีเข้าด้วยกัน 2. ใส่หอยเชลล์ในซามและทาเนย ที่ผสมแล้ว 3. วางในจานอบเรียบร้อยแล้ว
3.	บรราวี	600-800 กรัม	คาร์ร็อกโกแลตสด - 190 กรัม, เนยจืด - 190 กรัม, น้ำตาล - 120 กรัม, แป้ง อเนกประสงค์ - 115 กรัม, ไข่ - 3 ฟอง, เม็ด มะม่วงหิมพานต์สับ - 200 กรัม, เกลือ - 1 ช้อนโต๊ะ	1. วางเนยที่มีอุณหภูมิปกติและ ชีสโกแลตเชมชนในไมโครเวฟ ที่ความร้อน 900 วัตต์เป็นเวลา 1 นาที คนให้ทั่ว 2. ตีไข่ด้วยความเร็วสูงและค่อยๆ เติมน้ำตาลลงในส่วนผสมข้าง 3. เติมนเนยและชีสโกแลตที่ผสม กันลงในส่วนผสมข้าง (ข้อ 2) ผสมทุกอย่างเข้าด้วยกัน แล้วเติม มะม่วงหิมพานต์สับ 4. ใส่ลงในแม่พิมพ์ขนาด 11 x 10 x 1.2 นิ้ว ที่ทาเนยไว้บนพื้นผิว จากนั้นจึงเริ่มอบ

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ	คำแนะนำ
4.	เค้กกล้วยหอม	500-700 กรัม	แป้งอเนกประสงค์ - 190 กรัม, ผงฟู - 1.5 กรัม, เบ กกิ้งโซดา - 2.5 กรัม, เนย - 120 กรัม, เกลือ - 1 กรัม, น้ำตาล - 175 กรัม, ไข่ - 2 ฟอง, นม - ¼ ถ้วย, น้ำ มะนาว - 1 ช้อนโต๊ะ, กล้วย - 220 กรัม, กลิ่นกล้วยหอม - 1 ช้อนโต๊ะ	1. ผสมแป้งอเนกประสงค์ แป้งเค้ก เบกกิ้งโซดาเข้าด้วยกัน 2. ผสมกล้วย นม น้ำมะนาว และ กลิ่นกล้วยหอมเข้าด้วยกัน 3. ผสมเนยและเกลือเข้าด้วยกัน และเติมน้ำตาลจาก จากนั้น จากนั้น นั้นเติมน้ำมะนาวและกลิ่นทั้งหมด หลังจากนั้น ค่อยๆ เติมน้ำและ กล้วยลงในส่วนผสมข้าง 4. ใส่ลงในแม่พิมพ์ขนาด 1½ x 1½ นิ้ว (ประมาณ 14 ชิ้น) จาก นั้นจึงเริ่มอบ
5.	คุกกี้เนย	250-300 กรัม	แป้ง - 3 ถ้วย (325 กรัม), เนย - ¾ ถ้วย (175 กรัม), น้ำตาล - 150 กรัม, เกลือ - ½ ช้อนชา, ไข่ - 1 ฟอง, นม สด - ¼ ถ้วย, เบกกิ้งโซดา - 1 ช้อนโต๊ะ, กลิ่นวานิลลา - 1 ช้อนโต๊ะ	1. ร่อนแป้งและเบกกิ้งโซดาเข้า ด้วยกันสองรอบ ผสมกลิ่นวานิลลา และนมสดเข้าด้วยกัน 2. ตีเนยและเกลือจนมีเนื้อละเอียด และมีสีครีม จากนั้นให้เติมน้ำตาล และเริ่มตีส่วนผสมจนเข้ากันทั้งหมด เป็นเนื้อเดียวกัน ให้เติมน้ำ แป้ง และนมสด จากนั้นให้ตีจนเข้ากัน ทั้งไว้สักครู่ 3. ทาเนยบนถาด และปั้นแป้งเป็น ก้อนกลม จากนั้นจึงวางลงในถาด แล้วนำไปอบ

การปรุงอาหารแบบหลายขั้นตอน

คุณสามารถตั้งโปรแกรมเตาไมโครเวฟเพื่อให้แบ่งการอบอาหารได้ถึงสามขั้นตอน (คุณไม่สามารถใช้โหมดอบ ไมโครเวฟ +อบ และอุ่นเตาอบ เมื่อต้องการอบอาหารแบบหลายขั้นตอน) ตัวอย่าง: คุณต้องการละลายอาหารแช่แข็ง และอบโดยไม่ต้องตั้งเตาอบใหม่ในแต่ละขั้นตอน คุณสามารถละลายน้ำแข็งและอบไก่ขนาด 1.8 กก. ในสามขั้นตอน:

- การละลายน้ำแข็ง
- อบไมโครเวฟ 30 นาที
- ย่าง 15 นาที

 การละลายน้ำแข็งต้องทำเป็นขั้นตอนแรก การผสมและย่างจะใช้เพียงครั้งเดียวในระหว่างขั้นตอนที่สอง แต่ไมโครเวฟจะใช้สองครั้ง (ที่ระดับพลังงานสองระดับที่แตกต่างกัน)

1. กดปุ่ม ละลายน้ำแข็ง

ละลายน้ำแข็ง
Defrost

2. เลือกประเภทอาหารที่คุณต้องการอบโดยกดปุ่ม ละลายน้ำแข็ง

ละลายน้ำแข็ง
Defrost

3. ตั้งค่าน้ำหนักโดยกดปุ่ม (∧) และ (V) เป็นจำนวนครั้งที่เหมาะสม (เช่น 1800 กรัม)



4. กดปุ่ม ไมโครเวฟ

ไมโครเวฟ
Microwave

5. กำหนดระดับพลังงานของไมโครเวฟโดยกดปุ่ม ไมโครเวฟ เพื่อเลือก ระดับพลังงานที่เหมาะสม (เช่น 450 วัตต์)

ไมโครเวฟ
Microwave

6. เลือกเวลาในการอบอาหาร โดยกดปุ่ม (∧) และ (V) (เช่น 30 นาที)



7. กดปุ่ม ย่าง

ย่าง
Grill

8. เลือกเวลาในการอบอาหาร โดยกดปุ่ม (∧) และ (V) (เช่น 15 นาที)



9. กดปุ่ม เริ่มทำงาน (▶)

ผลลัพธ์:

การอบอาหารจะเริ่มขึ้น:

- เมื่อสิ้นสุดการอบอาหาร เตาจะส่งเสียงเตือน พร้อมกับกะพริบ "0" สี่ครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาฬิกาละติง


เริ่มทำงาน /+30 วินาที
Start / +30s

การอุ่นเตาอย่างรวดเร็ว

สำหรับการอบด้วยความร้อน ขอแนะนำให้คุณอุ่นเตาหรือเพียงแค่พอก่อนที่จะวางอาหารในเตาอบ เมื่อเตาอบร้อนได้ที่แล้ว จะรักษาระดับความร้อนไว้ประมาณ 10 นาที จากนั้นจะปิดโดยอัตโนมัติ โปรดตรวจสอบว่าขดลวดความร้อนนั้นอยู่ในตำแหน่งที่เหมาะสมกับประเภทการอบที่คุณต้องการ

1. กดปุ่ม อุ่นเตาอบ

ผลลัพธ์: หน้าจอจะแสดงผลดังนี้:
220 °C (อุณหภูมิ)

อุ่นเตาอบ
Fast Preheat

2. กดปุ่ม อุ่นเตาอบ ตามจำนวนที่เหมาะสม เพื่อกำหนดอุณหภูมิ (อุณหภูมิ : 220, 200, 180, 160, 140, 100, 40 °C)

อุ่นเตาอบ
Fast Preheat

3. กดปุ่ม เริ่มทำงาน (▶)

ผลลัพธ์: เตาอบจะถูกอุ่นร้อนตามอุณหภูมิที่กำหนด

- เวลาที่ปรากฏคือ 8 วินาทีสำหรับโหมดการปรุงอาหารที่เลือก และ 2 วินาทีสำหรับอุณหภูมิที่ตั้งล่วงหน้าตามลำดับ
- ตัวอย่าง) โหมดอุ่นเตาอบที่ 200 °C

เริ่มทำงาน / +30 วินาที
Start / +30s

HEAT

(ปรากฏเป็นเวลา 8 วินาที)

200 °C

(ปรากฏเป็นเวลา 2 วินาที)

- เมื่อร้อนได้ที่แล้ว เตาอบจะส่งสัญญาณเตือน 6 ครั้ง และจะรักษาอุณหภูมิไว้ 10 นาที
- หลังจาก 10 นาที จะมีเสียงเตือน 4 ครั้งและเครื่องจะหยุดทำงาน

เมื่ออุณหภูมิภายในถึงขีดที่กำหนดไว้ เตาอบจะส่งสัญญาณเตือน 6 ครั้ง ขณะที่เตาอบจะรักษาอุณหภูมิที่กำหนดไว้ล่วงหน้าเป็นเวลา 10 นาที

หากคุณต้องการทราบอุณหภูมิของเตาอบ ให้กดปุ่ม อุ่นเตาอบ

การอบอาหารด้วยการอบ

โหมดการอบช่วยให้คุณสามารถอบอาหารในลักษณะเดียวกับในเตาอบธรรมดา ไม่มีการใช้โหมดไมโครเวฟ คุณสามารถกำหนดอุณหภูมิได้ตามต้องการ ตั้งแต่ 40 °C ถึง 220 °C ในระดับที่ตั้งค่าไว้แล้ว 8 ระดับ เวลาปรุงอาหารสูงสุดคือ 60 นาที



หากคุณต้องการอุ่นเตาอบให้ร้อน โปรดดูที่หน้า 23

- โปรดใช้ถุงมือกันความร้อนทุกครั้งที่สัมผัสภาชนะในเตา เนื่องจากภาชนะเหล่านี้จะร้อนจัด
- คุณสามารถใช้ตะแกรงแบบต่ำเพื่อให้อาหารสุกยิ่งขึ้น และหลีกเลี่ยงน้ำรั่วประทุกัน

ให้ขดลวดความร้อนอยู่ในตำแหน่งแนวอนและจานหมุนอยู่กับที่แล้ว เปิดประตูเตาอบและวางภาชนะบนตะแกรงแบบต่ำและตั้งจานหมุน

1. กดปุ่ม อบ

ผลลัพธ์: หน้าจอจะแสดงผลดังนี้:
220 °C (โหมดอบ)
(อุณหภูมิ)

อบ
Convection

2. กดปุ่ม อบ ตามจำนวนที่เหมาะสม เพื่อกำหนดอุณหภูมิ (อุณหภูมิ : 220, 200, 180, 160, 140, 100, 40 °C)

อบ
Convection

3. กำหนดเวลาในการอบอาหารโดยกดปุ่ม (▶) และ (▼)

▶
▼

4. กดปุ่ม เริ่มทำงาน (◀▶)

ผลลัพธ์:

การอบอาหารจะเริ่มขึ้น:

- เวลาที่ปรากฏคือ 8 วินาทีสำหรับเวลาปรุงอาหารที่กำหนดไว้ล่วงหน้า และ 2 วินาทีสำหรับอุณหภูมิที่ตั้งล่วงหน้าตามลำดับ (ตัวอย่าง) 30 นาทีของเวลาปรุงอาหารที่ 200 °C



(ปรากฏเป็นเวลา 8 วินาที)



(ปรากฏเป็นเวลา 2 วินาที)

- เมื่อสิ้นสุดการอบอาหาร เตาจะส่งเสียงเตือน พร้อมกับกะพริบ "0" สี่ครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาฬิกาครั้ง

 


หากคุณต้องการทราบอุณหภูมิของเตาอบ ให้กดปุ่ม อุณหภูมิ

การเลือกอุปกรณ์เสริม

การอบด้วยความร้อนแบบเดิมจำเป็นต้องใช้ภาชนะที่เหมาะสม คุณควรใช้เฉพาะภาชนะที่ใช้ในเตาอบธรรมดาเท่านั้น ภาชนะที่เหมาะสมสำหรับไมโครเวฟมักจะไมเหมาะกับการอบด้วยความร้อน โปรดอย่าใช้ภาชนะหรือจานพลาสติก ด้วย กระดาษ กระดาษเช็ดปาก เป็นต้น

หากคุณต้องการเลือกการอบแบบผสม (ไมโครเวฟและย่างหรืออบด้วยความร้อน) โปรดใช้ภาชนะที่เหมาะสมสำหรับเตาไมโครเวฟและเตาอบเท่านั้น



โปรดดูรายละเอียดเพิ่มเติมเกี่ยวกับภาชนะหรือเครื่องใช้ที่เหมาะสมในคู่มือสำหรับอุปกรณ์การทำอาหารที่หน้า 27

 
เริ่มทำงาน / +30 วินาที
Start / +30s

การย่าง

การย่างช่วยให้คุณอุ่นและทำให้อาหารเกรียมได้อย่างรวดเร็ว โดยไม่ต้องใช้ไมโครเวฟ

- โปรดใช้ถุงมือกันความร้อนทุกครั้งที่สัมผัสภาชนะในเตา เนื่องจากภาชนะเหล่านี้จะร้อนจัด
- คุณสามารถใช้ตะแกรงแบบสูงเพื่อให้อาหารสุกยิ่งขึ้น และหลีกเลี่ยงน้ำรั่วประหลาด

- เปิดประตูเตาอบและวางภาชนะบนตะแกรง



- กดปุ่ม ย่าง

 
ผลลัพธ์:

หน้าจอจะแสดงผลดังนี้:
UU (โหมดย่าง)

- คุณไม่สามารถกำหนดอุณหภูมิสำหรับการย่าง

- กำหนดเวลาในการย่างโดยกดปุ่ม (Λ) และ (V)

- เวลาสูงสุดสำหรับการย่างคือ 60 นาที



- กดปุ่ม เริ่มทำงาน (◀▶)

ผลลัพธ์:

เริ่มต้นการย่าง

- เมื่อสิ้นสุดการอบอาหาร เตาจะส่งเสียงเตือน พร้อมกับกะพริบ "0" สี่ครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาฬิกาครั้ง




การใช้ไมโครเวฟผสมการย่าง

คุณสามารถใช้ไมโครเวฟร่วมกับการย่าง เพื่อให้อาหารสุกเร็ว และเหลืองเกรียมในขณะเดียวกัน

- ▶ โปรดใช้ภาชนะและเครื่องครัวที่ใช้กับไมโครเวฟและเตาอบ จานแก้วหรือกระเบื้องเป็นภาชนะที่เหมาะสม เนื่องจากยอมให้ไมโครเวฟเข้าถึงอาหารได้ทั่วถึงกัน
- ▶ โปรดใช้ถุงมือกันความร้อนทุกครั้งที่สัมผัสภาชนะในเตา เนื่องจากภาชนะเหล่านี้จะร้อนจัด
- ▶ คุณสามารถใช้ตะแกรงแบบสูงเพื่อให้อาหารสุกยิ่งขึ้น และเหลืองนารับประทาน

เปิดประตู วางอาหารบนตะแกรงที่เหมาะสมกับอาหารที่จะปรุง วางตะแกรงบนจานหมุน ปิดประตู

1. กดปุ่ม ไมโครเวฟ + ย่าง

ผลลัพธ์: หน้าจอจะแสดงผลดังนี้:
 (โหมดผสมไมโครเวฟและย่าง)
 600 วัตต์ (กำลังไฟฟ้า)

ไมโครเวฟ
+ ย่าง
MW+Grill

2. เลือกระดับพลังงานที่เหมาะสม โดยกดปุ่ม ไมโครเวฟ + ย่าง จนกว่าจะแสดงกำลังไฟที่ต้องการ (300-600 วัตต์)

- คุณสามารถกำหนดอุณหภูมิสำหรับการย่าง

ไมโครเวฟ
+ ย่าง
MW+Grill

3. กำหนดเวลาในการอบอาหารโดยกดปุ่ม (Λ) และ (V)

- เวลาปรุงอาหารสูงสุดคือ 60 นาที



4. กดปุ่ม เริ่มทำงาน (◁)

ผลลัพธ์:

- การอบแบบผสมจะเริ่มขึ้น
- เมื่อสิ้นสุดการอบอาหาร เตาจะส่งเสียงเตือน พร้อมกับกะพริบ "0" สี่ครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาฬิกาครั้ง

เริ่มทำงาน / +30 วินาที
Start / +30s

การใช้ไมโครเวฟร่วมกับการอบ

การอบแบบผสมใช้ทั้งพลังงานไมโครเวฟและพลังงานความร้อน คุณไม่จำเป็นต้องอุ่นเตาอบหรือร้อน เนื่องจากเตาอบสามารถใช้พลังงานไมโครเวฟได้ทันที


คุณสามารถปรุงอาหารหลายประเภทโดยใช้การอบแบบผสม โดยเฉพาะอย่างยิ่ง:

- เนื้อและไก่อบ
- พายและเค้ก
- อาหารชีสและชีส

- ▶ โปรดใช้ภาชนะและเครื่องครัวที่ใช้กับไมโครเวฟและเตาอบ จานแก้วหรือกระเบื้องเป็นภาชนะที่เหมาะสม เนื่องจากยอมให้ไมโครเวฟเข้าถึงอาหารได้ทั่วถึงกัน
- ▶ โปรดใช้ถุงมือกันความร้อนทุกครั้งที่สัมผัสภาชนะในเตา เนื่องจากภาชนะเหล่านี้จะร้อนจัด
- ▶ คุณสามารถใช้ตะแกรงแบบต่ำเพื่อให้อาหารสุกยิ่งขึ้น และเหลืองนารับประทาน

เปิดประตู วางอาหารบนจานหมุน หรือใช้ตะแกรงแบบต่ำซึ่งต้องนำไปวางบนจานหมุนอีกที ปิดประตู

1. กดปุ่ม ไมโครเวฟ+อบ

ผลลัพธ์: หน้าจอจะแสดงผลดังนี้:
 (โหมดผสมไมโครเวฟและอบ)
 600 วัตต์ (กำลังไฟฟ้า : สลับเป็นโหมดอุณหภูมิต่อไปนี้ใน 2 วินาที)
 220 °C (อุณหภูมิ)

ไมโครเวฟ
+อบ
MW+Conv.

2. เลือกอุณหภูมิโดยกดปุ่ม ไมโครเวฟ+อบ (อุณหภูมิ : 220, 200, 180, 160, 140, 100, 40 °C)

ไมโครเวฟ
+อบ
MW+Conv.

3. กำหนดเวลาในการอบอาหารโดยกดปุ่ม (Λ) และ (V)

- เวลาปรุงอาหารสูงสุดคือ 60 นาที



4. ตั้งค่าระดับพลังงานที่เหมาะสมโดยกดปุ่ม ไมโครเวฟ+อบ จนกว่าจะแสดงกำลังไฟที่ต้องการ (600, 450, 300, 180, 100 วัตต์)

ไมโครเวฟ
+อบ
MW+Conv.

5. กดปุ่ม เริ่มทำงาน (▶)

ผลลัพธ์:

- การอบแบบผสมจะเริ่มขึ้น
- เตาอบจะเพิ่มความร้อนจนถึงระดับที่ต้องการ และจากนั้นจะอบด้วยไมโครเวฟจนหมดเวลาอบที่ตั้งไว้
- เวลาที่ปรากฏคือ 8 วินาทีสำหรับเวลาปรุงอาหารที่กำหนดไว้ล่วงหน้า และ 2 วินาทีสำหรับอุณหภูมิที่ตั้งล่วงหน้าตามลำดับ (ตัวอย่าง) 30 นาทีของเวลาปรุงอาหารที่ 200 °C



(ปรากฏเป็นเวลา 8 วินาที)



(ปรากฏเป็นเวลา 2 วินาที)

- เมื่อสิ้นสุดการอบอาหาร เตาจะส่งเสียงเตือน พร้อมกับกะพริบ "0" สี่ครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาฬิกาละครั้ง

☒ หากคุณต้องการทราบอุณหภูมิของเตาอบ ให้กดปุ่ม อุณหภูมิ (Fas) (ไอ)

การใช้คุณสมบัติกำจัดกลิ่น

คุณสามารถใช้คุณสมบัตินี้หลังจากการอบอาหารที่มีกลิ่นแรง หรือเมื่อมีควันมากภายในเตาขั้นแรกให้ทำความสะอาดภายในเตา

กดปุ่ม กำจัดกลิ่น หลังจากทำความสะอาดเสร็จ คุณจะได้ยินสัญญาณเตือนสี่ครั้ง

กำจัดกลิ่น
Deodorize

- ☒ เวลาในการกำจัดกลิ่นตั้งไว้ที่ 5 นาที
- ☒ คุณสามารถปรับเวลาในการ กำจัดกลิ่น โดยกดปุ่ม +30 วินาที
- ☒ เวลาในการกำจัดกลิ่นสูงสุดคือ 60 นาที

การลือคเตาไมโครเวฟ

เตาไมโครเวฟของคุณมีโปรแกรมป้องกันเพื่อความปลอดภัยของเด็ก ซึ่งจะ "ลือค" เตาอบไม่ให้เด็กหรือบุคคลที่ไม่คุ้นเคยสามารถใช้เตาอบได้

คุณสามารถลือคเตาอบเมื่อใดก็ได้ที่ต้องการ

1. กดปุ่ม ย่าง และ ไมโครเวฟ+อบ พร้อมกัน (เป็นเวลาประมาณสามวินาที)

ผลลัพธ์:

- เตาอบจะถูกลือค
- เครื่องหมายต่อไปนี้จะปรากฏขึ้น "L"

ย่าง	ไมโครเวฟ+อบ
Grill	MW+Conv.

2. ในการปลดลือคเตาไมโครเวฟ ให้กดปุ่ม ย่าง และ ไมโครเวฟ+อบ พร้อมกันอีกครั้ง (ประมาณสามวินาที)

ผลลัพธ์:

คุณสามารถใช้เตาอบได้ตามปกติ

ย่าง	ไมโครเวฟ+อบ
Grill	MW+Conv.

คู่มือสำหรับอุปกรณ์การทำอาหาร

ในการอบอาหารด้วยเตาไมโครเวฟ คลื่นไมโครเวฟจะต้องสามารถแทรกเข้าสู่อาหาร โดยไม่มีกระสะท้อนหรือดูดซับโดยภาชนะ

คุณจึงควรเลือกอุปกรณ์อย่างรอบคอบ คุณควรเลือกภาชนะที่มีข้อความหรือเครื่องหมายว่าใช้กับไมโครเวฟได้ ตารางต่อไปนี้แสดงอุปกรณ์การทำอาหารประเภทต่างๆ และระบุว่าสามารถใช้กับเตาไมโครเวฟได้หรือไม่ และอย่างไร

อุปกรณ์	ใช้กับไมโครเวฟได้	หมายเหตุ
พอลิเอทิลีน	✓ X	สามารถใช้จำนวนเล็กน้อย เพื่อป้องกันส่วนที่ไม่ต้องการให้สุกเกินไป อาจมีประกายไฟ ถ้าพอลิเอทิลีนอยู่ใกล้กับผนังของเตาอบมากเกินไป หรือใช้พอลิเอทิลีนมากเกินไป
จานรอง	✓	ห้ามอุ่นหรืออบเกิน 8 นาที
กระเบื้องและดินเผา	✓	กระเบื้องพอร์ซเลน ดินเผา ดินเผาเคลือบ และกระเบื้องเคลือบนั้นมักจะใช้ได้ดี ยกเว้นที่มีขอบโลหะ
จานโพลีหรือกระดาษแบบใช้แล้วทิ้ง	✓	อาหารแห้งบางชนิดจะบรรจุในภาชนะประเภทนี้
บรรจุภัณฑ์ของอาหารจานด่วน		
• ถ้วยโพลี	✓	สามารถใช้อุ่นอาหาร ความร้อนสูงมากๆ จะทำให้โพลีละลาย
• ถ้วยกระดาษหรือหนังสือพิมพ์	X	อาจติดไฟ
• กระดาษรีไซเคิลหรือขอบโลหะ	X	อาจเกิดประกายไฟ
เครื่องแก้ว		
• อุปกรณ์บนโต๊ะอาหารที่สามารถใช้กับเตาอบ	✓	ใช้ได้ หากไม่ประดับด้วยขอบโลหะ
• เครื่องแก้วบาง	✓	สามารถใช้อุ่นอาหารหรือของเหลว แก้วที่บางมากอาจแตกหรือร้าวหากได้รับความร้อนทันที
• โถแก้ว	✓	ต้องใช้อย่างไม่ปิดฝา เหมาะสำหรับการอุ่นอาหารเท่านั้น

อุปกรณ์	ใช้กับไมโครเวฟได้	หมายเหตุ
โลหะ		
• จาน	X	อาจเกิดประกายหรือติดไฟ
• ลวดสำหรับมัดปากถุงแช่แข็ง	X	
กระดาษ		
• จาน ถ้วย กระดาษเช็ดปาก และกระดาษเช็ดมือ	✓	สำหรับกรอบเวลาสั้นๆ และการอุ่นอาหาร และใช้ซับของเหลวที่มากเกินไป
• กระดาษรีไซเคิล	X	อาจเกิดประกายไฟ
พลาสติก		
• ภาชนะ	✓	โดยเฉพาะพลาสติกทนความร้อน พลาสติกชนิดอื่นอาจบิดหรือเปลี่ยนสีเมื่อโดนความร้อนสูง ห้ามใช้พลาสติกแบบเมลามีน
• ฟิล์มสำหรับปิดอาหาร	✓	สามารถใช้เก็บรักษาความชื้น ไม่ควรสัมผัสกับอาหารโดยตรง ใช้ความระมัดระวังขณะนำฟิล์มออก เนื่องจากอาจมีไอระเหยออกมาด้วย
• ถุงแช่แข็ง	✓ X	เฉพาะชนิดที่ต้มได้หรือใช้กับเตาอบได้ ไม่ควรเป็นแบบกักอากาศ ซึ่งต้องใช้ลมจะก่ออันตราย ถ้าจำเป็นต้องใช้
กระดาษมันหรือกระดาษไข	✓	สามารถใช้เก็บรักษาความชื้นหรือห่ออาหารกระเด็น

- ✓ : แนะนำ
 ✓ X : ใช้อย่างระมัดระวัง
 X : ไม่ปลอดภัย

คู่มือการอบอาหาร

ไมโครเวฟ

พลังงานไมโครเวฟจะแทรกซึมในอาหาร โดยจะมีการดูดซับโดยน้ำ ไขมัน และน้ำตาลในอาหาร ไมโครเวฟทำให้โมเลกุลของอาหารเคลื่อนไหวอย่างรวดเร็ว การเคลื่อนไหวอย่างรวดเร็วนี้ทำให้เกิดแรงเสียดทานของโมเลกุล และความร้อนจากแรงเสียดทานนี้ทำให้อาหารสุก

การอบ

ภาชนะสำหรับอบด้วยไมโครเวฟ:

ภาชนะที่ใช้จะต้องยอมให้พลังงานไมโครเวฟผ่าน เพื่อให้การอบมีประสิทธิภาพ คลื่นไมโครเวฟจะสะท้อนกับโลหะ เช่น สเตนเลส อะลูมิเนียม และทองแดง แต่จะสามารถแทรกซึมผ่านดินเผา แก้ว กระเบื้อง และพลาสติก เช่นเดียวกับกระดาษและไม้ ห้ามอบอาหารในภาชนะโลหะเด็ดขาด

อาหารที่เหมาะสมสำหรับการอบด้วยไมโครเวฟ:

อาหารหลายชนิดเหมาะสำหรับการอบด้วยไมโครเวฟ เช่นผัก ผลไม้ พาสต้า ข้าว ธัญพืช ถั่ว ปลา และเนื้อ ซึ่งแข็งแข็งหรือสอ ซอส คัสตาร์ด ซุป พุดดิ้งอบ ของแห้งและของหมักดอง โดยทั่วไปแล้ว ไมโครเวฟเหมาะสำหรับการอบอาหารแทบทุกชนิดที่สามารถอบด้วยวิธีนี้ ตัวอย่างเช่น การละลายเนยหรือซอซอโกเลต (โปรดดูเคล็ดลับ เทคนิค และคำแนะนำประกอบ)

การปิดหรือครอบอาหาร

การปิดหรือครอบอาหารระหว่างการอบเป็นสิ่งสำคัญ เนื่องจากน้ำจะกลายเป็นไอน้ำและมีผลต่อการอบอาหาร คุณสามารถครอบอาหารได้หลายวิธีดังนี้ เช่น ใช้จานกระเบื้อง ฝาพลาสติก หรือฟิล์มปิดอาหารที่เหมาะสมกับไมโครเวฟ

เวลาพักอาหาร

เมื่อการอบอาหารเสร็จ เวลาพักอาหารจะช่วยให้อุณหภูมิในอาหารกระจายทั่วถึงกัน

คู่มือการอบอาหารสำหรับผักแช่แข็ง

ใช้อ่างแก้วทนไฟ (ไฟเร็กซ์) ที่มีฝาปิด อบอุ่นโดยปิดฝาและใช้เวลาให้น้อยที่สุด - โปรดดูในตาราง อบอุ่นเพื่อให้ได้ผลลัพธ์ตามต้องการ

คนอาหารสองครั้งระหว่างอบ และหนึ่งครั้งหลังการอบ เติมน้ำมัน เครื่องเทศ หรือเนยหลังการอบ ปิดฝาขณะพักอาหาร

อาหาร	สัดส่วน	พลังงาน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
ผักขม	150 กรัม	600 วัตต์	5-6	2-3	เติมน้ำมัน 15 มล. (1 ช้อนโต๊ะ)
บร็อคโคลี	300 กรัม	600 วัตต์	8-9	2-3	เติมน้ำมัน 30 มล. (2 ช้อนโต๊ะ)
ถั่ว	300 กรัม	600 วัตต์	7-8	2-3	เติมน้ำมัน 15 มล. (1 ช้อนโต๊ะ)
ถั่วเขียว	300 กรัม	600 วัตต์	7½-8½	2-3	เติมน้ำมัน 30 มล. (2 ช้อนโต๊ะ)
ผักกวม (แครอท/ถั่ว/ธัญพืช)	300 กรัม	600 วัตต์	7-8	2-3	เติมน้ำมัน 15 มล. (1 ช้อนโต๊ะ)
ผักกวม (แบบจีน)	300 กรัม	600 วัตต์	7½-8½	2-3	เติมน้ำมัน 15 มล. (1 ช้อนโต๊ะ)

คู่มือการอบอาหารสำหรับข้าวและพาสต้า

- ข้าว :** ใช้ซามแกวไฟเร็กซ์ขนาดใหญ่ที่มีฝาปิด ข้าวจะมีปริมาณเพิ่มเป็นสองเท่าเมื่อหุงสุกแล้ว
 อบโดยปิดฝา
 เมื่อหมดเวลาอบ คนให้ทั่วก่อนพักอาหาร และเติมเกลือหรือเครื่องเทศและเนยตามต้องการ
 หมายเหตุ: ข้าวอาจไม่ดูดซับน้ำทั้งหมด หลังจากทั้งหมดเวลาอบแล้ว
- พาสต้า :** ใช้ซามแกวไฟเร็กซ์ขนาดใหญ่ เติมน้ำร้อน เกลือเล็กน้อย และคนให้ทั่ว อบโดยปิดฝา
 คนเป็นระยะระหว่างและหลังการอบ ปิดฝาขณะพักอาหาร และเทน้ำออกให้หมดหลังจากนั้น

อาหาร	สัดส่วน	พลังงาน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
ข้าว (หุงพอลุก)	250 กรัม	900 วัตต์	15-16	5	เติมน้ำเย็น 500 มล.
	375 กรัม		17½-18½		เติมน้ำเย็น 750 มล.
ข้าวกล้อง (หุงพอลุก)	250 กรัม	900 วัตต์	20-21	5	เติมน้ำเย็น 500 มล.
	375 กรัม		22-23		เติมน้ำเย็น 750 มล.
ข้าวผสม (ข้าวขาว + ข้าวซ้อมมือ)	250 กรัม	900 วัตต์	16-17	5	เติมน้ำเย็น 500 มล.
ธัญพืชผสม (ข้าว + ธัญพืช)	250 กรัม	900 วัตต์	17-18	5	เติมน้ำเย็น 400 มล.
พาสต้า	250 กรัม	900 วัตต์	10-11	5	เติมน้ำร้อน 1000 มล.

คู่มือการอบอาหารสำหรับผักสด

ใช้อ่างแกวทนไฟ (ไฟเร็กซ์) ที่มีฝาปิด เติมน้ำเย็น 30 - 45 มล. (2-3 ช้อนโต๊ะ) สำหรับน้ำหนัก 250 กรัม นอกจากนี้
 คำแนะนำเป็นอย่างอื่น - โปรตุเกสในตาราง อบโดยปิดฝาและใช้เวลาอย่างน้อยที่สุด - โปรตุเกสในตาราง อบต่อไปเพื่อให้ได้
 ผลลัพธ์ตามต้องการ คนหนึ่งครั้งระหว่างและหลังการอบ เติมเกลือ เครื่องเทศ หรือเนยหลังการอบ ปิดฝาขณะพักอาหาร
 เป็นเวลา 3 นาที

คำแนะนำ: หั่นผักสดออกเป็นชิ้นเท่าๆ กัน ผักชิ้นเล็กจะใช้เวลาอบน้อยกว่า

ผักสดทุกประเภทควรอบโดยใช้พลังงานไมโครเวฟเต็มที่ (900 วัตต์)

อาหาร	สัดส่วน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
บร็อคโคลี่	250 กรัม 500 กรัม	4½-5 7-8	3	หั่นเป็นขนาดเท่ากัน วางส่วนก้านไว้ตรงกลาง
กะหล่ำปลีรัสเซล	250 กรัม	6-6½	3	เติมน้ำ 60-75 มล. (5-6 ช้อนโต๊ะ)
แครอท	250 กรัม	4½-5	3	ผ่าแนวยาวเป็นชิ้นเท่าๆ กัน
ดอกกะหล่ำ	250 กรัม 500 กรัม	5-5½ 7½-8½	3	หั่นเป็นขนาดเท่ากัน หั่นแบ่งขนาดใหญ่เป็นครึ่ง วางส่วนก้านไว้ตรงกลาง
ผักทองน้ำเต้า	250 กรัม	4-4½	3	ผ่าแนวยาวเป็นชิ้นบางๆ เติมน้ำ 30 มล. (2 ช้อนโต๊ะ) หรือเนย อบให้นุ่ม
มะเขือม่วง	250 กรัม	3½-4	3	ผ่าแนวยาวเป็นชิ้นบางๆ และเติมน้ำมันมะกอกหนึ่งช้อนโต๊ะ
กระเทียม	250 กรัม	4-4½	3	หั่นเป็นชิ้นขนาดขิงหนา
เห็ด	125 กรัม 250 กรัม	1½-2 2½-3	3	เตรียมเห็ดหัวเล็กทั้งหัว หรือหัวใหญ่ผ่าเป็นแฉก อย่ายัดไส้ให้ยิบหั่นมะนาวเล็กน้อย โรยเกลือและพริกไทย เทน้ำออกก่อนรับประทาน
หัวหอม	250 กรัม	5-5½	3	ผ่าแนวยาวเป็นแฉก หรือหั่นครึ่ง เติมน้ำ 15 มล. (1 ช้อนโต๊ะ)
พริกหยวก	250 กรัม	4½-5	3	หั่นเป็นชิ้นบางๆ

อาหาร	สัดส่วน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
มันฝรั่ง	250 กรัม 500 กรัม	4-5 7-8	3	ซังน้ำหมักมันฝรั่งที่ปอกแล้ว และหั่นครึ่งหรือสี่ส่วน เป็นชิ้นต่างๆ กัน
หัวผักกาด	250 กรัม	5½-6	3	หั่นเป็นชิ้นสี่เหลี่ยมลูกเต๋ายาวขนาดเล็ก

การอุ่น

เตาไมโครเวฟของคุณสามารถอุ่นอาหารโดยใช้เวลาเพียงเสี้ยวของการอุ่นด้วยเตาอบแบบเก่าหรือถึงใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้ เวลาในแผนผังนี้ใช้กับอาหารที่เป็นของเหลว และมีอุณหภูมิปกติคือประมาณ +18 ถึง +20°C หรืออาหารแช่เย็นที่มีอุณหภูมิ +5 ถึง +7 °C

การจัดวางและการปิดครอบ

ไม่ควรอุ่นอาหารที่มีขนาดใหญ่ เช่น ก้อนเนื้อ เนื่องจากอาหารจะสุกและแห้งจนเกินไปก่อนที่ส่วนกลางจะร้อน การอุ่นอาหารที่เป็นชิ้นเล็กๆ จะได้ผลดีกว่า

ระดับพลังงานและการคน

อาหารบางอย่างสามารถอุ่นได้โดยใช้พลังงาน 900 วัตต์ แต่อาหารบางอย่างควรอุ่นโดยใช้พลังงาน 600 วัตต์, 450 วัตต์ หรือ 300 วัตต์

โปรดดูตารางต่อไปนี้เป็นแนวทาง

โดยทั่วไป คุณควรอุ่นอาหารโดยใช้ระดับพลังงานต่ำ หากอาหารนั้นละเอียดอ่อน มีปริมาณมาก หรือถ้าเป็นอาหารชนิดที่ร้อนเร็ว (เช่น พายเนื้อสับ เป็นต้น) คนให้ทั่ว หรือกลับด้านระหว่างการอุ่นอาหาร เพื่อให้ได้ผลดีที่สุด ถ้าเป็นไปได้ ควรคนอีกครั้งก่อนรับประทาน ใช้ความระมัดระวังเป็นพิเศษเมื่ออุ่นอาหารเหลวและอาหารสำหรับทารก เพื่อป้องกันการเดือดและกระเด็น ซึ่งอาจทำให้อาหารลวกมือ คุณควรคนอาหารก่อน ระหว่าง และหลังการอุ่น ปล่อยให้ทิ้งไว้ในเตาไมโครเวฟขณะพักอาหาร ขอแนะนำให้คุณใส่ซองพลาสติกหรือแท่งแก้วในอาหารที่เป็นของเหลว ระวังอย่าให้อาหารร้อนเกินไป (ซึ่งจะทำให้เสียรสชาติ) ขอแนะนำให้คุณประมาณเวลาบิให้น้อยลง และเพิ่มเวลาในการอุ่นอาหาร ถ้าจำเป็น

เวลาในการอุ่นและพักอาหาร

เมื่ออุ่นอาหารเป็นครั้งแรก คุณควรบันทึกเวลาที่ใช้ในการอุ่นไว้ เพื่อใช้ประโยชน์ในอนาคต โปรดอุ่นอาหารให้เดือดทั่วกันทุกครั้ง

พักอาหารไว้ชั่วขณะหลังจากการอุ่น เพื่อให้อุณหภูมิสม่ำเสมอทั่วกัน

เวลาพักอาหารที่เหมาะสมสำหรับการอุ่นก็คือ 2 - 4 นาที นอกจากนี้แนะนำให้เป็นอย่างอื่นในแผนผัง

ใช้ความระมัดระวังเป็นพิเศษเมื่ออุ่นอาหารเหลวและอาหารสำหรับทารก โปรดอ่านข้อมูลเพิ่มเติมในเรื่องข้อควรระวังเพื่อความปลอดภัย

การอุ่นของเหลว

กำหนดเวลาพักอาหารอย่างน้อย 20 วินาทีหลังจากที่ปิดเตาอบทุกครั้ง เพื่อให้มีการปรับอุณหภูมิ คนอาหารระหว่างให้ความร้อนถ้าจำเป็น และคนทุกครั้ง หลังจากอุ่น เพื่อป้องกันการเดือดกระเด็นและอันตรายจากน้ำร้อนลวก โปรดใส่ช้อนหรือแท่งแก้วในเครื่องต้ม และคนก่อน ระหว่าง และหลังการอุ่น

การอุ่นอาหารสำหรับทารก

อาหารสำหรับทารก:

เทใส่จานกระเบื้องกันลื่น ครอบด้วยฝาพลาสติก คนให้ทั่วหลังการอุ่น พักอาหารเป็นเวลา 2-3 นาทีก่อนรับประทาน คนอีกครั้ง และตรวจสอบอุณหภูมิ อุณหภูมิที่แนะนำในการป้อน: ระหว่าง 30-40 °C

นมสำหรับทารก:

เทนมในขวดแก้วที่ทำความสะอาดแล้ว อุ่นโดยไม่ปิดฝา ห้ามอุ่นขวดนมเด็กโดยปิดจุกนมไว้ เนื่องจากขวดอาจจะระเบิด เมื่อได้รับความร้อนสูง เขย่าก่อนพักอาหาร และเขย่าอีกครั้งก่อนนำไปป้อนทารก ทุกครั้ง จะต้องตรวจสอบอุณหภูมิของอาหารหรือนมสำหรับทารกก่อนที่จะนำไปป้อน อุณหภูมิที่แนะนำในการป้อน: ประมาณ 37 °C

หมายเหตุ:

โปรดตรวจสอบอุณหภูมิของอาหารสำหรับทารกอย่างละเอียดก่อนที่จะนำไปป้อน เพื่อป้องกันการอาหารร้อนลวก ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้

การอุ่นอาหารและนมสำหรับทารก

ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้

อาหาร	สัดส่วน	พลังงาน	เวลา	เวลาพักอาหาร (นาที)	คำแนะนำ
อาหารสำหรับทารก (ผัก + เนื้อสัตว์)	190 กรัม	600 วัตต์	30 วินาที	2-3	เทใส่จานกระเบื้องกันลื่น ครอบด้วยฝาพลาสติก คนให้ทั่วหลังการอุ่น พักอาหารเป็นเวลา 2-3 นาที คนให้ทั่วก่อนนำไปป้อน และตรวจสอบอุณหภูมิอย่างละเอียด
โจ๊กสำหรับทารก (ซีเรียล + นม + ผลไม้)	190 กรัม	600 วัตต์	20 วินาที	2-3	เทใส่จานกระเบื้องกันลื่น ครอบด้วยฝาพลาสติก คนให้ทั่วหลังการอุ่น พักอาหารเป็นเวลา 2-3 นาที คนให้ทั่วก่อนนำไปป้อน และตรวจสอบอุณหภูมิอย่างละเอียด
นมสำหรับทารก	100 มล. 200 มล.	300 วัตต์	30-40 วินาที 1 นาที ถึง 1 นาที 10 วินาที	2-3	เขย่าหรือคนให้ทั่ว และเทลงในขวดแก้วที่ฆ่าเชื้อแล้ว วางตรงกลางของจานหมุน ครอบโดยไม่ปิดฝา คนให้ทั่ว และพักอาหารอย่างน้อย 3 นาที คนให้ทั่วก่อนรับประทาน และตรวจสอบอุณหภูมิอย่างละเอียด

การอุ่นของเหลวและอาหาร

ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้

อาหาร	สัดส่วน	พลังงาน	เวลา (นาที)	เวลาพัก อาหาร (นาที)	คำแนะนำ
เครื่องดื่ม (กาแฟ ชา และน้ำ)	150 มล. (1 ถ้วย)	900 วัตต์	1-1½	1-2	เทในถ้วยและอุ่นโดยไม่ปิดฝา วาง 1 ถ้วยตรงกลาง 2 ถ้วยตรง ข้ามกัน และ 3 ถ้วยเป็นวงกลม ทั้งไว้ในเตาไมโครเวฟระหว่าง พักอาหาร และคนให้ทั่ว
	300 มล. (2 ถ้วย)		2-2½		
	450 มล. (3 ถ้วย)		3-3½		
	600 มล. (4 ถ้วย)		3½-4		
ซูป (เย็น)	250 กรัม	900 วัตต์	2½-3	2-3	เทในจานหรือชามกระเบื้อง ก้นลึก ครอบด้วยฝาพลาสติก คนให้ทั่วหลังการอุ่น คนอีกครั้ง ก่อนรับประทาน
	350 กรัม		3-3½		
	450 กรัม		3½-4		
	550 กรัม		4½-5		
สตูว์ (เย็น)	350 กรัม	600 วัตต์	4½-5½	2-3	เทสตูว์ในจานกระเบื้อง ก้นลึก ครอบด้วยฝาพลาสติก คนเป็นระยะระหว่างการอุ่น และ คนอีกครั้งก่อนพักอาหารและ รับประทาน
พาสต้าราดซอส (เย็น)	350 กรัม	600 วัตต์	3½-4½	3	ใส่พาสต้า (เช่น สปาเก็ตตี้หรือ มะมียู) ในจานกระเบื้องแบน ปิดด้วยฟิล์มสำหรับไมโครเวฟ คนก่อนรับประทาน
พาสต้ามีไส้ราด ซอส (เย็น)	350 กรัม	600 วัตต์	4-5	3	วางพาสต้าแบบมีไส้ (เช่น ราวีโอลี ทอร์เทลลินี) ในจาน กระเบื้องก้นลึก ครอบด้วยฝา พลาสติก คนเป็นระยะระหว่าง การอุ่น และคนอีกครั้งก่อนพัก อาหารและรับประทาน

อาหาร	สัดส่วน	พลังงาน	เวลา (นาที)	เวลาพัก อาหาร (นาที)	คำแนะนำ
อาหารซูด (เย็น)	350 กรัม 450 กรัม 550 กรัม	600 วัตต์	4½-5½ 5½-6½ 6½-7½	3	จัดอาหารซูดซึ่งมีส่วนประกอบ แช่เย็น 2 - 3 อย่างในจาน กระเบื้อง ปิดด้วยฟิล์มสำหรับ ไมโครเวฟ
ชีสฟองดู พร้อมรับ ประทาน (เย็น)	400 กรัม	600 วัตต์	6-7	1-2	ใส่ชีสฟองดูที่พร้อมรับประทาน ในชามแก้วไฟร์กซ์ที่มีฝาปิด คนเป็นระยะระหว่างและหลัง การอุ่น คนก่อนรับประทาน

การละลายน้ำแข็ง

ไมโครเวฟเป็นวิธีการละลายอาหารแช่แข็งที่ดียเยี่ยม เนื่องจากจะค่อยๆ ละลายอาหารแช่แข็งได้ภายในเวลาอันสั้น ซึ่งจะมีประโยชน์เป็นอย่างมาก หากมีแขกมาเยี่ยมเยียนโดยไม่ได้เตรียมตัว

ไก่แช่แข็งต้องได้รับการละลายน้ำแข็งทั่วทั้งตัว ก่อนที่จะสามารถนำไปอบอาหาร น้ำที่รั่วซึ่งเป็นไขมันและน้ำอาหารออกจากวัสดุห่อหุ้ม เพื่อให้ไขมันซึ่งจะละลายสามารถไหลออกจากอาหาร

วางอาหารแช่แข็งในจานโดยไม่มีฝาครอบ พลิกกลับด้านเมื่อผ่านไประยะหนึ่งของเวลาที่กำหนด เทน้ำออกและนำเครื่องในออกโดยเร็วที่สุด ตรวจสอบอาหารเป็นระยะ เพื่อให้ร้อนจนเกินไป

หากส่วนที่มีขนาดเล็กหรือบางของอาหารแช่แข็งเริ่มอุ่น คุณสามารถหุ้มส่วนเหล่านั้นด้วยฟอยล์อะลูมิเนียมชิ้นเล็กๆ ระหว่างการละลายน้ำแข็ง

ถ้าเปิดไก่เริ่มอุ่นที่ผิวนอก ให้หยุดละลายน้ำแข็ง เพื่อให้เป็นการพักอาหาร 20 นาที ก่อนที่จะดำเนินการต่อ

พักปลา เนื้อ และไก่ไว้สักครู่ เพื่อให้ไขมันแข็งละลายทั่วทั้งก้อน เวลาพักอาหารเพื่อละลายน้ำแข็งจะขึ้นอยู่กับปริมาณของอาหาร โปรดดูตารางต่อไปนี้

คำแนะนำ: อาหารที่มีลักษณะแบนจะละลายน้ำแข็งได้เร็วกว่า และปริมาณที่ไม่มากจะใช้เวลาน้อยกว่า โปรดนึกถึงคำแนะนำนี้ เมื่อแช่แข็งและละลายอาหาร

สำหรับการละลายอาหารแช่แข็งที่มีอุณหภูมิระหว่าง -18 ถึง -20 °C โปรดใช้ตารางด้านล่างเป็นแนวทาง

อาหารแช่แข็งทุกประเภทควรมีการละลาย โดยใช้ระดับความร้อนสำหรับการละลายอาหารแช่แข็ง (180 วัตต์)

อาหาร	สัดส่วน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
เนื้อ				
เนื้อสับ	250 กรัม	6-7	15-30	วางเนื้อบนจานกระเบื้องแบบเรียบ หุ้มส่วนที่บางด้วยฟอยล์อะลูมิเนียม กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง
	500 กรัม	10-12		
เนื้อหมูเป็นชิ้น	250 กรัม	7-8		
เบ็ดไก่				
ไก่เป็นชิ้น	500 กรัม (2 ชิ้น)	14-15	15-60	ชั้นแรก ให้วางไก่เป็นชิ้นบนจานกระเบื้องแบบเรียบ โดยให้ส่วนที่เล็กอยู่ใต้ส่วนที่หนากว่า หุ้มส่วนที่บางด้วยฟอยล์อะลูมิเนียม หุ้มส่วนที่บางและเล็ก เช่น ปีก หรือกระดูกฟอยล์อะลูมิเนียม กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง
ไก่ทั้งตัว	1200 กรัม	32-34		
ปลา				
ชิ้นเนื้อปลา	200 กรัม	6-7	10-25	วางปลาแช่แข็งกลางจานกระเบื้องแบบเรียบ โดยให้ส่วนที่เล็กอยู่ใต้ส่วนที่หนากว่า หุ้มส่วนที่บางและหางปลาด้วยฟอยล์อะลูมิเนียม กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง
ปลาทั้งตัว	400 กรัม	11-13		
ผลไม้				
เบอร์รี่	300 กรัม	6-7	5-10	วางผลไม้ให้กระจายบนจานแก้วกลมแบบเรียบ (และมีเส้ณาศูนย์กลางไทย)
ขนมปัง				
ขนมปังก้อน (ประมาณก้อนละ 50 กรัม)	2 ชิ้น 4 ชิ้น	1-1½ 2½-3	5-20	วางก้อนขนมปังเป็นวง หรือวางขนมปังแผ่นเป็นแนวบนจานกระเบื้องเซรามิกหรือกลางจานหมุน กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง
ขนมปังแผ่นแช่แข็ง	250 กรัม	4-4½		
ขนมปังเยอร์มัน (แบ่งสี่-ไร่)	500 กรัม	7-9		

ย่าง

ขดลวดสำหรับการย่างอยู่บริเวณใต้ผิวด้านบนของเตาอบ และจะทำงานเมื่อปิดประตูและจานหมุนทำงาน การหมุนของจานหมุนจะทำให้อาหารเกรียมทั่วถึงกัน อุ่นเตาเพื่อเตรียมการย่างเป็นเวลา 4 นาที เพื่อให้อาหารเกรียมเร็วขึ้น

ภาชนะสำหรับการย่าง:

อุปกรณ์จะต้องไม่ติดไฟและอาจมีส่วนประกอบของโลหะได้ ห้ามใช้อุปกรณ์ที่เป็นพลาสติก เนื่องจากจะละลายได้

อาหารที่เหมาะสมสำหรับการย่าง:

เนื้อเป็นชิ้น ไส้กรอก สติก แอมเบอร์เกอร์ เบคอนและชาหุรมควิน เนื้อปลาที่แล่บางๆ แชนดริช และขนมปังปิ้งแบบมีที่อบปิ้ง

หมายเหตุสำคัญ:

เมื่อใดก็ตามที่ใช้เฉพาะโหมดย่าง โปรดทราบว่าอาหารจะต้องอยู่บนตะแกรงแบบสูง นอกจากนี้มีคำแนะนำเป็นอย่างอื่น

ไมโครเวฟ + ย่าง

การอบอาหารแบบนี้เป็นการผสมผสานความร้อนจากขดลวดเข้ากับความเร็วของไมโครเวฟ และจะทำงานเมื่อปิดประตูและจานหมุนทำงาน การหมุนของจานหมุนจะทำให้อาหารสุกเกรียมทั่วกัน คุณสามารถใช้การปรุงแบบผสมได้สามอย่างสำหรับเตาอบรุ่นนี้:

600 วัตต์ + ย่าง, 450 วัตต์ + ย่าง และ 300 วัตต์ + ย่าง

อุปกรณ์สำหรับการอบอาหารด้วยไมโครเวฟ + ย่าง

โปรดใช้อุปกรณ์ที่คลื่นไมโครเวฟสามารถผ่านได้ และจะต้องไม่ติดไฟ โปรดอย่าใช้อุปกรณ์หรือภาชนะที่เป็นโลหะกับการทำงานแบบผสม ห้ามใช้อุปกรณ์ที่เป็นพลาสติก เนื่องจากจะละลายได้

อาหารที่เหมาะสมสำหรับการอบด้วยไมโครเวฟ + ย่าง:

อาหารที่เหมาะสมสำหรับการอบแบบผสมนี้ประกอบด้วยอาหารที่สุกแล้วทุกชนิด ซึ่งจะต้องมีการอุ่นและทำให้เหลือง (เช่น พาสต้าอบ) เช่นเดียวกับอาหารที่ต้องใช้เวลาอบไม่นาน เพื่อให้ส่วนบนเหลืองเกรียม นอกจากนี้ การทำงานแบบนี้ยังใช้กับอาหารที่มีลักษณะหนา และควรมีส่วนบนที่เกรียมกรอบ (เช่น ไก่เป็นชิ้น ซึ่งควรกลับด้านเมื่ออบได้ครึ่งของระยะเวลา) โปรดดูรายละเอียดเพิ่มเติมในตารางการย่าง

หมายเหตุสำคัญ:

เมื่อใดก็ตามที่ใช้โหมดผสม (ไมโครเวฟ + ย่าง) โปรดทราบว่าอาหารจะต้องอยู่บนตะแกรงแบบสูง นอกจากนี้มีคำแนะนำเป็นอย่างอื่น โปรดดูคำแนะนำในแผนผังต่อไปนี้
คุณจะต้องกลับอาหาร หากต้องการให้เหลืองเกรียมทั้งสองด้าน

คู่มือการย่างสำหรับอาหารสด

อุณหภูมิการย่างเป็นเวลา 2-3 นาที
ใช้ระดับพลังงานและเวลาในการย่างตามแผนผังต่อไปนี้
ใช้คู่มือกันความร้อนเมื่อนำออกจากเตา

อาหารสด	สัดส่วน	พลังงาน	เวลาของ ด้านที่หนึ่ง (นาที)	เวลาของ ด้านที่สอง (นาที)	คำแนะนำ
ขนมปังแผ่น	4 ชิ้น (ชิ้นละ 25 กรัม)	ย่างเท่านั้น	2-3	1-2	วางแผ่นขนมปังคู่กันบน ตะแกรง
มะเขือเทศย่าง	400 กรัม (2 ชิ้น)	300 วัตต์ + ย่าง	5-6	-	หั่นครึ่งมะเขือเทศ ใส่ชีสที่ ด้านบน วางเป็นรูปวงกลม บนจานแก้วไฟเร็กซ์ แบบเรียบ วางบนตะแกรง แบบสูง พักอาหารเป็นเวลา 2-3 นาที
มะเขือเทศ-ชีส โทสต์	4 ชิ้น (300 กรัม)	300 วัตต์ + ย่าง	4-5	-	บั้งขนมปังก่อน วางขนมปัง บั้งพร้อมที่อบปิ้งบน ตะแกรงแบบสูง พักอาหาร เป็นเวลา 2-3 นาที
โทสต์อวอย (แอม สับปะรด แผ่นชีส)	4 ชิ้น (500 กรัม)	300 วัตต์ + ย่าง	5-6	-	บั้งขนมปังก่อน วางขนมปัง บั้งพร้อมที่อบปิ้งบน ตะแกรงแบบสูง พักอาหาร เป็นเวลา 2-3 นาที
มันฝรั่งอบ	500 กรัม	600 วัตต์ + ย่าง	7-8	-	หั่นแบ่งมันฝรั่งเป็นครึ่ง หัว วางบนตะแกรงเป็น วงกลม โดยให้ด้านที่หั่น อยู่ข้างล่าง
กราแตงมันฝรั่ง/ ผัก (เย็น)	450 กรัม	450 วัตต์ + ย่าง	9-11	-	วางกราแตงสดในจานแก้ว ไฟเร็กซ์ขนาดเล็ก วางจาน บนตะแกรงแบบสูง พัก อาหารเป็นเวลา 2-3 นาที

อาหารสด	สัดส่วน	พลังงาน	เวลาของ ด้านที่หนึ่ง (นาที)	เวลาของ ด้านที่สอง (นาที)	คำแนะนำ
แอปเปิลอบ	แอปเปิล 2 ผล (ประมาณ 400 กรัม)	300 วัตต์ + ย่าง	7-8	-	คว้านไส้แอปเปิลและตัดด้วย ลูกเต๋าและแยม ใส่ อัลมอนด์ฝานบางๆ ไว้ด้าน บน วางแอปเปิลบนจานแก้ว ไฟเร็กซ์แบบเรียบ วางจาน บนตะแกรงแบบต่ำ
ไก่เป็นชิ้น	500 กรัม (2 ชิ้น)	300 วัตต์ + ย่าง	8-10	6-8	ใช้แปรงทาลูกมันและเครื่อง เทศไทล์ไว้ชิ้นไก่ วางเป็น วงบนตะแกรงแบบสูง หลังจาก ย่างแล้วให้พักอาหาร 2-3 นาที
สเต็กเนื้อ (สุก ปานกลาง)	400 กรัม (2 ชิ้น)	ย่างเท่านั้น	10-14	8-12	ทาน้ำมันบนเนื้อสเต็ก วาง เป็นวงบนตะแกรงแบบสูง หลังจากย่างแล้วให้พักอาหาร 2-3 นาที
ปลาย่าง	400-500 กรัม	300 วัตต์ + ย่าง	5-7	5½-6½	ทาน้ำมันให้ทั่วตัวปลา จาก นั้นใส่สมุนไพรและเครื่องเทศ วางปลาสองตัวคู่กัน (สลับ ด้านหัวและหาง) บนตะแกรง แบบสูง หลังจากย่างแล้วให้ พักอาหาร 2-3 นาที



การอบ

การปรุงอาหารด้วยความร้อนเป็นวิธีปรุงอาหารแบบดั้งเดิมและแพร่หลาย โดยใช้เตาอบธรรมดาและไอร้อน ขดลวดความร้อนและพัดลมจะอยู่ที่ผนังด้านหลัง เพื่อให้ไอร้อนหมุนเวียน

ภาชนะสำหรับการปรุงด้วยความร้อน:

ใช้อุปกรณ์สำหรับเตาอบแบบธรรมดา ถาดสำหรับเตาอบ และภาชนะชนิดอื่นๆ ที่ใช้ได้โนเตาอบธรรมดา

อาหารที่เหมาะสมสำหรับการอบด้วยความร้อน:

คุณสามารถทำขนมกรอบ เช่น บิสกิต ขนมปังกรอบ ขนมปังและเค้ก รวมทั้งฟรุตเค้ก เพสทรี และซูเฟลล์ ด้วยการอบแบบนี้

ไมโครเวฟ+อบ

การทำงานแบบนี้จะผสมผสานพลังงานไมโครเวฟเข้ากับไอร้อน ซึ่งจะช่วยลดเวลาในการอบโดยที่อาหารยังคงเหลืออง เกรียมและกรอบ

การอบด้วยความร้อนเป็นวิธีปรุงอาหารแบบดั้งเดิมที่แพร่หลาย ด้วยการอบไอร้อนซึ่งกระจายหมุนเวียนด้วยพัดลมที่ผนังด้านหลัง

อุปกรณ์สำหรับการปรุงอาหารด้วยไมโครเวฟ + อบ:

ควรมอบไมโครเวฟผ่านได้ ใช้กับเตาอบได้ (เช่น แก้ว ดินเผา หรือกระเบื้องเคลือบที่ไม่มีขอบโลหะ) เช่นเดียวกับ

อุปกรณ์สำหรับการอบด้วยไมโครเวฟ+อบ

อาหารที่เหมาะสมสำหรับการปรุงอาหารแบบไมโครเวฟ+อบ:

เนื้อและไก่ทุกชนิด และอาหารอบหม้อดิน กราแดง สปันจ์เค้ก และฟรุตเค้กแบบเนื้อเบา พายและครีมเบิ้ล ผักอบ ขนมปังกรอบและขนมปัง

คู่มือการอบด้วยไอร้อนสำหรับอาหารสดและอาหารแช่แข็ง

อุณหภูมิที่ได้อุ่นหมุ่ตามต้องการด้วยฟังก์ชันการอุ่นเตาอบอัตโนมัติ ใช้ระดับพลังงานและเวลาในการอบตามแผนผังต่อไปนี้

ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา

อาหารสด	สัดส่วน	พลังงาน	เวลาของ ด้านที่หนึ่ง (นาที)	เวลาของ ด้านที่สอง (นาที)	คำแนะนำ
พิซซ่า					
พิซซ่าแช่แข็ง (อบแล้ว)	300-400 กรัม	450 วัตต์ + 220 °C	13-15	-	วางพิซซ่าบนตะแกรงแบบต่ำ พักอาหารเป็นเวลา 2-3 นาที หลังการอบ
พาสต้า					
ลาซาญญา แช่แข็ง	400 กรัม	450 วัตต์ + 220 °C	22-25	-	วางในจานแก้วไฟร์เร็กซ์ที่มี ขนาดเหมาะสม หรือใส่ในบรรจุ ภัณฑ์เดิม (ถ้าสามารถใช้กับ ไมโครเวฟและเตาอบได้) วาง พาสต้าแช่แข็งบนตะแกรง แบบต่ำ พักอาหารเป็นเวลา 2-3 นาที
เนื้อ					
โรสบีฟ/โรส แลมบ์ (สุกปาน กลาง)	1200-1300 กรัม	600 วัตต์ + 180 °C	20-23	10-13	ใช้แปรงทาลูกัน้ำมันให้ทั่วชิ้นเนื้อ และปรุงรสด้วยพริกไทย เกลือ และพริกป่น วางบนตะแกรง แบบต่ำ โดยเริ่มจากด้านบนอยู่ ข้างล่าง หลังการอบ หักด้วย ฟอยล์อะลูมิเนียมเพื่อพักอาหาร เป็นเวลา 10-15 นาที
ไก่อบ	1000-1100 กรัม	450 วัตต์ + 220 °C	17-22	13-17	ใช้แปรงทาลูกัน้ำมันและเครื่อง เทศให้ทั่วตัวไก่ วางบนตะแกรง แบบต่ำ โดยให้ด้านนอกของไก่ ลงก่อน จากนั้นวางไก่อกอยู่ ด้านบน พักอาหาร 5 นาที



อาหารสด	สัดส่วน	พลังงาน	เวลาของ ด้านที่หนึ่ง (นาที)	เวลาของ ด้านที่สอง (นาที)	คำแนะนำ
ขนมปัง					
ขนมปังก่อนสด	6 ชิ้น (350 กรัม)	100 วัตต์ + 180 °C	8-10	-	วางขนมปังก่อนเป็นวงบน ตะแกรงแบบต่ำ พัก อาหารเป็นเวลา 2-3 นาที
ขนมปัง กระเทียม (แช่ เย็น อบสุก แล้ว)	200 กรัม (1 ชิ้น)	180 วัตต์ + 220 °C	8-10	-	วางขนมปังบนกระดาษสำหรับ อบบนตะแกรงแบบต่ำ พัก อาหารเป็นเวลา 2-3 นาที หลังจากอบ
เค้ก					
แอปเปิ้ลเค้ก (แบ่งสด)	500 กรัม	180 °C เท่านั้น	38-43	-	ใส่แอปเปิ้ลในพิมพ์โลหะ สี่เหลี่ยมผืนผ้าขนาดเล็กสี่ด้าน (ความยาว 25 ซม.) วางเค้กบน ตะแกรงแบบต่ำ พักอาหารเป็น เวลา 5-10 นาทีหลังการอบ
มัฟฟินขนาด เล็ก (แบ่งสด)	12 x 30 กรัม (350-400 กรัม)	220 °C เท่านั้น	17-23	-	ใส่แป้งสดให้เสมอกันในจานกระ ดาษสำหรับมัฟฟิน วางจานใน ตะแกรงแบบต่ำ พักอาหารเป็น เวลา 5 นาทีหลังการอบ
ลูกกี (แบ่งสด)	200-250 กรัม	200 °C เท่านั้น	15-20	-	วางครัวซองต์แช่เย็นบน กระดาษสำหรับอบบนตะแกรง แบบต่ำ
เค้กแซ่ซิ่ง	1000 กรัม	180 วัตต์ + 180 °C	18-20	-	วางเค้กแซ่ซิ่งบนตะแกรง แบบต่ำ หลังจากละลายและ อุ่นแล้ว ให้พักอาหารเป็นเวลา 15-20 นาที

เคล็ดลับพิเศษ

การละลายเนย

ใส่เนย 50 กรัมในจานแก้วกันเล็กขนาดเล็ก ครอบด้วยผ้าพลาสติก
อุ่นเป็นเวลา 30-40 วินาที โดยใช้กำลังไฟ 900 วัตต์ จนเนยละลาย

การละลายชีสค็อกเกต

ใส่ชีสค็อกเกต 100 กรัมในจานแก้วกันเล็ก
ให้ความร้อนเป็นเวลา 3-5 นาที โดยใช้พลังงาน 450 วัตต์ จนชีสค็อกเกตละลาย
คนหนึ่งหรือสองครั้งระหว่างการละลาย ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา

การละลายผลึกน้ำผึ้ง

ใส่เกล็ดน้ำผึ้ง 20 กรัมในจานแก้วกันเล็ก
ให้ความร้อนเป็นเวลา 20-30 วินาที ใช้พลังงาน 300 วัตต์ จนน้ำผึ้งละลาย

การละลายเจลาติน

วางแผ่นเจลาตินแห้ง (10 กรัม) ไว้ในน้ำเย็นเป็นเวลา 5 นาที
นำน้ำออก และใส่เจลาตินในถ้วยแก้วไฟเร็กซ์ขนาดเล็ก
ให้ความร้อน 1 นาทีโดยใช้พลังงาน 300 วัตต์
คนหลังการละลาย

การอบหน้าเค้กไอซ์ซิ่ง (สำหรับเค้กและขนม)

ผสมหน้า (ประมาณ 14 กรัม) กับน้ำตาล 40 กรัมและน้ำเย็น 250 มล.
อบโดยไม่ต้องปิดฝา ในถ้วยแก้วไฟเร็กซ์ เป็นเวลา 3½ ถึง 4½ โดยใช้พลังงาน 900 วัตต์ จนกระทั่งหน้าเค้กไอซ์ซิ่งใส
คนสองครั้งระหว่างการอบ

การทำแยม

ใส่ผลไม้ 600 กรัม (เช่น เบอร์รี่ชนิดต่างๆ) ในซามแก้ว ไฟเร็กซ์ที่มีขนาดเหมาะสมและมีฝาปิด เติมน้ำตาล 300 กรัม
และคนให้ทั่ว

อบโดยปิดฝาเป็นเวลา 10-12 นาที โดยใช้กำลังไฟ 900 วัตต์
คนบ่อยๆ ระหว่างการอบ เกล็นไอแกล์ไอแยม ที่มีฝาปิดเกลียว พักโดยปิดฝาไว้ 5 นาที

การทำฟุดจิง

ผสมฟุดจิงกับน้ำตาลและนม (500 มล.) ตามคำแนะนำของผู้ผลิต จากนั้นคนให้เข้ากัน ใช้อ่างแก้วไฟเร็กซ์ที่มีฝาปิด
อบโดยปิดฝาเป็นเวลา 6½ ถึง 7½ นาที โดยใช้พลังงาน 900 วัตต์
คนบ่อยๆ ระหว่างการอบ

การอบเมล็ดอัลมอนต์แผ่น


นำเมล็ดอัลมอนต์ผ่านเป็นแผ่น 30 กรัมมาใส่ในจานกระเบื้องให้เสมอกัน
คนหลายๆ ครั้งระหว่างที่เริ่มเหลืองเป็นเวลา 3½ ถึง 4½ โดยใช้ความร้อน 600 วัตต์
พักในเตาเป็นเวลาประมาณ 2-3 นาที ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา

การทำความสะอาดเตาอบไมโครเวฟของคุณ

โปรดทำความสะอาดส่วนต่อไปนี้ในเตาไมโครเวฟเป็นประจำ เพื่อไม่ให้มีไขมันและเศษอาหารเกาะ:

- ผิวหน้าด้านในและด้านนอก
- ประตูและซีลขอบประตู
- จานหมุนและวงแหวน

 ทุกครั้งต้องตรวจสอบว่าซีลประตูสะอาดและประตูสามารถปิดได้อย่างเหมาะสม

 หากไม่รักษาความสะอาดเตาอบอาจทำให้เกิดความเสียหายกับพื้นผิว ซึ่งอาจมีผลเสียต่อเตาอย่างมาก และอาจก่อให้เกิดอันตรายได้

1. ทำความสะอาดพื้นผิวด้านนอกด้วยผ้านุ่ม ชุบน้ำอุ่นผสมน้ำยาล้างจาน ล้างให้สะอาดและเช็ดให้แห้ง
2. จัดการอาหารที่กระเด็นบนพื้นผิวด้านในของเตาอบหรือวงแหวนด้วยผ้าชุบน้ำยาล้างจาน ล้างให้สะอาดและเช็ดให้แห้ง
3. เพื่อให้เศษอาหารที่แห้งแข็งหลุดออกง่ายขึ้น และขจัดกลิ่นไม่พึงประสงค์ ให้วางถ้วยน้ำมะนาวผสมน้ำเบจันจานหมุน และให้ความร้อนโดยใช้พลังงานเต็มที่เป็นเวลาสิบนาที
4. ล้างจานที่ใช้เครื่องล้างได้เมื่อใดก็ตามที่ต้องการ

 โปรดอย่าทำน้ำหกในช่องระบาย ห้ามใช้สารขัดถูหรือสารทำลายทางเคมีเด็ดขาด โปรดใช้ความระมัดระวังขณะทำความสะอาดซีลขอบประตู เพื่อให้แน่ใจว่าไม่มีเศษอาหารติดอยู่:

- สบู่
- ทำให้ประตูปิดไม่สนิท

 ทำความสะอาดภายในเตาอบหลังจากใช้งานทันที โดยใช้ผ้าชุบน้ำอุ่นๆ แต่โปรดรอให้เตาไมโครเวฟเย็นลงก่อนที่จะทำความสะอาด เพื่อป้องกันอันตรายที่อาจเกิดขึ้น

 คำแนะนำสำหรับการปรุงอาหาร ตะแกรง และเตาอบ จะไม่ระบุไว้ให้ใช้เครื่องทำความสะอาดด้วยไอน้ำ

การเก็บรักษาและซ่อมเตาไมโครเวฟ

โปรดทราบข้อควรระวังต่อไปนี้ เมื่อเก็บรักษาหรือนำเตาไมโครเวฟไปซ่อมแซม ห้ามใช้เตาอบ หากประตูหรือซีลขอบประตูเสียหาย

- บานพับเสียหาย
- ซีลมีความเสียหาย
- โครงภายนอกของเตาอบบิดหรืองอ

โปรดใช้บริการซ่อมบำรุงโดยช่างผู้ชำนาญการซ่อมไมโครเวฟเท่านั้น

 ห้ามถอดโครงภายนอกของเตาอบ หากเตาไมโครเวฟทำงานไม่ถูกต้อง หรือต้องมีการบำรุงรักษาหรือหากคุณมีข้อสงสัย

- ถอดสายไฟออกจากปลั๊กที่ผนัง
- ติดต่อศูนย์บริการหลังการขายที่อยู่ใกล้

 หากคุณต้องการเก็บเตาอบไว้ชั่วคราว โปรดเก็บไว้ในที่แห้งและไม่มีฝุ่นละออง

- สาเหตุ: ฝุ่นละอองและความชื้นอาจมีผลต่อส่วนประกอบของเตาอบ

ข้อมูลจำเพาะด้านเทคนิค

SAMSUNG มุ่งมั่นที่จะพัฒนาผลิตภัณฑ์อยู่เสมอ ดังนั้นรายละเอียดของเครื่องและคำแนะนำสำหรับผู้ใช้นี้จึงอาจมีการเปลี่ยนแปลง โดยไม่ได้แจ้งให้ทราบ

การจ่ายไฟ	220 V ~ 50 Hz AC
การใช้พลังงาน	
พลังงานสูงสุด	2700 วัตต์
ไมโครเวฟ	1400 วัตต์
ย่าง (ขดลวดความร้อน)	1250 วัตต์
อบ (ขดลวดความร้อน)	สูงสุด 1850 วัตต์
กำลังไฟฟ้า	100 วัตต์ / 900 วัตต์ - 6 ระดับ (IEC-705)
ความถี่ของคลื่นขณะทำงาน	2450 MHz
ขนาด (กว้าง x ลึก x สูง)	
ด้านนอก	517 x 460 x 310 มม.
ช่องของเตาอบ	358 x 327 x 231.5 มม.
ปริมาตร	1.0 ลูกบาศก์ฟุต
น้ำหนักสุทธิ	18.0 กก. โดยประมาณ

หมายเหตุ



ติดต่อซัมซุงเว็บไซต์ หากมีคำแนะนำหรือข้อสงสัยเกี่ยวกับผลิตภัณฑ์ซัมซุง

ติดต่อสอบถามได้ที่ SAMSUNG customer care center

โทรฟรี : 1800-29-3232

โทร : 02-689-3232

 
www.samsung.com



CE107VAD

Microwave Oven

Owner's Instructions & Cooking Guide



This manual is made with 100% recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product.
Please register your product at

www.samsung.com/register





CONTENTS

"Quick" look-up guide.....	2
Using the steam cleaning.....	3
Control panel.....	4
Oven	5
Accessories	5
Using this instruction booklet.....	6
Safety information.....	6
Legend for symbols and icons.....	6
Precautions to avoid possible exposure to excessive microwave energy..	6
Important safety instructions.....	7
Installing your microwave oven	10
Setting the time	10
Checking that your oven is operating correctly.....	11
How a microwave oven works	11
What to do if you are in doubt or have a problem.....	12
Cooking/Reheating	12
Power levels and time variations	13
Stopping the cooking	13
Adjusting the cooking time.....	13
Using the thai menu feature	14
Using the grill menu feature	16
Using the defrost feature.....	17
Using the quick Meal feature.....	19
Using the bake menu feature.....	20
Multistage cooking	22
Fast preheating the oven	23
Cooking by convection	23
Grilling	24
Choosing the accessories.....	24
Combining microwaves and the grill.....	25
Combining microwaves and convection.....	25
Safety-locking your microwave oven.....	26
Switching the beeper off	26
Using the deodorize feature	26
Cookware guide	27
Cooking guide	28
Cleaning your microwave oven	38
Storing and repairing your microwave oven.....	38
Technical specifications	39

"QUICK" LOOK-UP GUIDE

I want to cook some food.

1. Place the food in the oven.
Press the **Microwave** button.

ไมโครเวฟ
Microwave

2. Press the **Microwave** button until the appropriate power level is displayed.

ไมโครเวฟ
Microwave

3. Select the cooking time by pressing the (Λ) and (V) buttons as required.



4. Press **Start** (◀▶) button.

Result:

Cooking starts.

- When cooking has finished, the oven will beep and flash "0" four times. The oven will then beep one time per minute.



I want to add an extra 30 seconds

Leave the food in the oven.

Press **+30s** button one or more times for each extra 30 seconds that you wish to add.



I want to defrost some food

1. Place the frozen food in the oven.
Press the **Defrost** button.

 
ละลายน้ำแข็ง
Defrost

2. Select the food category by pressing the **Defrost** button, until the desired food category is selected.

ละลายน้ำแข็ง
Defrost



3. Select the weight by pressing the (Λ) and (V) buttons as required.



4. Press **Start** (↔) button.

Result:

Defrosting starts.

- When cooking has finished, the oven will beep and flash "0" four times. The oven will then beep one time per minute.

 


USING THE STEAM CLEANING


The steam provided by steam clean system will soak the cavity surface. After using steam clean function, you can easily clean the cavity of oven.

- Use this function only after the oven has completely cooled. (Room temperature)
- Use normal water only, and no distilled water.
- If will be more better if you do a deodorization function after using Steam cleaning.
- If the door is opened during this operation "E-47" will be displayed. (The water in the oven will be very hot due to the steam cleaning function)


1. Open the Door.



 2. Fill with water following guide line inside the water bowl. (The line is about 30 ml.)



 3. Please attach the water bowl in right side of the oven.




4. Close the door.


5. Press the **Steam clean** button. (Bulb does work during Steam cleaning time.)



 6. Open the Door.



 
7. Please clean cavity of oven with dried dishtowel. Remove the turntable and only under rack with kitchen paper.



Warning!

- Water Bowl only can be use during "Steam Clean" mode.
- When cooking non-liquid items, remove water bowl because It will damage and cause fire to the microwave oven.


CONTROL PANEL

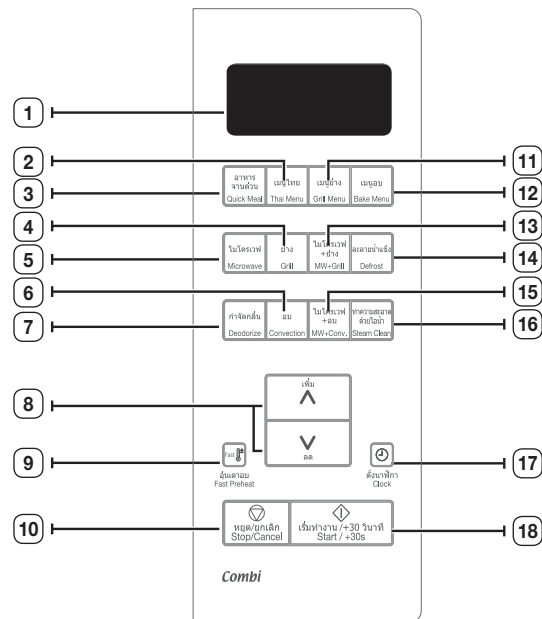

- | | |
|--|--------------------------------|
| 1. DISPLAY | 10.STOP/CANCEL BUTTON |
| 2. AUTO THAI MENU BUTTON | 11.AUTO GRILL MENU BUTTON |
| 3. AUTO QUICK MEAL BUTTON | 12.AUTO BAKE MENU BUTTON |
| 4. GRILL BUTTON | 13.MICROWAVE+GRILL BUTTON |
| 5. MICROWAVE BUTTON | 14.DEFROST BUTTON |
| 6. CONVECTION BUTTON | 15.MICROWAVE+CONVECTION BUTTON |
| 7. DEODORIZE BUTTON | 16.STEAM CLEAN BUTTON |
| 8. UP/DOWN BUTTON
(Weight/Serving/Time) | 17.CLOCK SETTING BUTTON |
| 9. AUTO FAST PREHEAT
SELECTION BUTTON | 18.START/+30s BUTTON |



OVEN

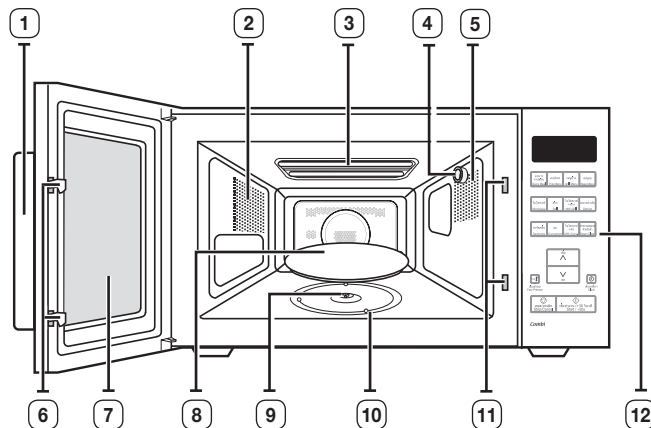

- | | |
|----------------------|----------------------------|
| 1. DOOR HANDLE | 7. DOOR |
| 2. VENTILATION HOLES | 8. TURNTABLE |
| 3. HEATING ELEMENT | 9. COUPLER |
| 4. WATER BOWL HOLDER | 10. ROLLER RING |
| 5. VENTILATION HOLES | 11. SAFETY INTERLOCK HOLES |
| 6. DOOR LATCHES | 12. CONTROL PANEL |

ACCESSORIES

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.

- 1. Coupler**, to be placed correctly over the motor shaft in the base of the oven.

Purpose: The coupler rotates the turntable.



 
- 2. Roller ring**, to be placed in the center of the oven.

Purpose: The roller ring supports the turntable.




- 3. Turntable**, to be placed on the roller ring with the center fitting on to the coupler.

Purpose: The turntable serves as the main cooking surface; it can be easily removed for cleaning.



- 4. High rack, Low rack**, to be placed on the turntable.

Purpose: The metal racks can be used to cook two dishes at the same time. A small dish may be placed on the turntable and a second dish on the rack. **The metal racks can be used in grill, convection and combination cooking.**

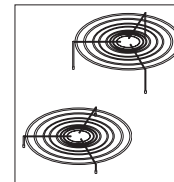

- 5. Clean water bowl**, to be placed in the right side of the oven.

Purpose: The water bowl can be used to clean.



USING THIS INSTRUCTION BOOKLET

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contain valuable information on cooking with your microwave oven:

- Safety precautions
- Suitable accessories and cookware
- Useful cooking tips
- Cooking tips

IMPORTANT SAFETY INFORMATION

IMPORTANT SAFETY INSTRUCTIONS.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Before using the oven, confirm that the following instructions are followed.

- Use this appliance only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.
- Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.
- This microwave oven is supposed for heating food. It is intended for domestic home-use only. Do not heat any type of textiles or cushions filled with grains, which could cause burns and fire. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the appliance.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possible result in a hazardous situation.

LEGEND FOR SYMBOLS AND ICONS



WARNING

Hazards or unsafe practices that may result in **severe personal injury or death.**



CAUTION

Hazards or unsafe practices that may result in **minor personal injury or property damage.**



Warning; Fire hazard



Warning; Hot surface



Warning; Electricity



Warning; Explosive material



Do NOT attempt.



Follow directions explicitly.



Do NOT disassemble.



Unplug the power plug from the wall socket.



Do NOT touch.



Make sure the machine is grounded to prevent electric shock.



Call the service center for help.



Note



Important

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.
- Do NOT place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.
- Do NOT operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:
 - (1) door (bent)



- (2) door hinges (broken or loose)
- (3) door seals and sealing surfaces
- (d) The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

This product is a Group 2 Class B ISM equipment. The definition of group 2 which contains all ISM equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and EDM and arc welding equipment.

For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.

IMPORTANT SAFETY INSTRUCTIONS

Make sure that these safety precautions are obeyed at all times.

⚠ WARNING					
Only qualified staff should be allowed to modify or repair the microwave oven.	✓	✓	✓	✓	✓
Do not heat liquids and other food in sealed containers for microwave function.	✓	✓	✓	✓	✓
For your safety, do not use high-pressure water cleaners or steam jet cleaners.	✓	✓	✓	✓	✓
Do not install this appliance; near heater, inflammable material; in a humid, oily or dusty location, in a location exposed to direct sunlight and water or where gas may leak; on un level ground.	✓	✓	✓	✓	✓
This appliance must be properly grounded in accordance with local and national codes.	✓	✓	✓	✓	✓
Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.	✓	✓	✓	✓	✓
Do not pull or excessively bend or place heavy objection the power cord.	✓	✓	✓	✓	✓
In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug.	✓	✓	✓	✓	✓
Do not touch the power plug with wet hands.	✓	✓	✓	✓	✓
Do not turn the appliance off by unplugging the power plug while an operation is in progress.	✓	✓	✓	✓	✓

Do not insert fingers or foreign substances, If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.	✓	✓	✓	✓
Do not apply excessive pressure or impact to the appliance.	✓	✓	✓	✓
Do not place the oven over a fragile object such as a sink or glass object. (Counter top model only.)	✓	✓		
Do not use benzene, thinner, alcohol, steam cleaner or high pressure cleaner to clean the appliance.	✓	✓	✓	✓
Ensure that the power voltage, frequency and current are the same as those of the product specifications.	✓	✓		✓
Plug the power plug into the wall socket firmly. Do not use a multiple plug adapter, an extension cord or an electric transformer.	✓	✓	✓	
Do not hook the power cord on a metal object, insert the power cord between the objects or behind the oven.	✓	✓	✓	
Do not use a damaged power plug, damaged power cord or loose wall socket. When the power plug or power cord is damaged, contact your nearest service centre.	✓	✓	✓	✓
Appliances are not intended to be operated by means of an external timer or separate remote-control system.	✓	✓		
Do not pour or directly spray water onto the oven.	✓	✓		
Do not place objects on the oven, inside or on the door of the oven.	✓	✓	✓	
Do not spray volatile material such as insecticide onto the surface of the oven.	✓	✓		
Children should be supervised to ensure that they do not play with the appliance	✓	✓	✓	✓
The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.	✓	✓	✓	✓
Do not store flammable materials in the oven. Take special care when heating dishes or drinks that contain alcohol as alcohol vapours may contact a hot part of the oven.	✓		✓	✓
The microwave oven is intended to be used on the counter or counter top use only, the microwave oven shall not be placed in a cabinet. (Counter top model only.)	✓	✓	✓	✓

★ WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.	✓	✓	✓	✓
★ WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.	✓	✓	✓	✓
★ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.	✓	✓	✓	✓
□ WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.	✓	✓	✓	✓
□ WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.	✓	✓	✓	✓
□ WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.	✓	✓	✓	
□ WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.	✓		✓	✓
□ WARNING: Accessible parts may become hot during use. To avoid burns young children should be kept away.	✓		✓	

★ WARNING: Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container; To prevent this situation ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize. Stir during heating, if necessary, and ALWAYS stir after heating. In the event of scalding, follow these FIRST AID instructions: <ul style="list-style-type: none"> Immerse the scalded area in cold water for at least 10 minutes. Cover with a clean, dry dressing. Do not apply any creams, oils or lotions. 	✓	✓	✓	✓
★ During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.	✓		✓	✓
★ WARNING: The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns;			✓	
★ The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.	✓	✓	✓	✓
★ This oven should be positioned proper direction and height permitting easy access to cavity and control area.	✓	✓	✓	✓
★ Before using the your oven first time, oven should be operated with the water during 10 minute and then used.	✓	✓	✓	✓
★ This microwave oven has to be positioned so that plug is accessible. If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.	✓	✓	✓	✓
□ during cleaning conditions the surfaces may get hotter than usual and children should be kept away. (Cleaning function model only.)		✓	✓	
□ Excess spillage must be removed before cleaning and utensils which state in cleaning manual can be left in the oven during cleaning. (Cleaning function model only.)	✓	✓	✓	✓



★	Appliance should allow to disconnection of the appliance from the supply after installation. The disconnection may be achieved by having the plug accessible or by incorporating a switch in the fixed wiring in accordance with the wiring rules. (Built-in model only.)	✓	✓	✓	✓
✎	If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.	✓			


CAUTION					
★	Only use utensils that are suitable for use in microwave ovens; DO NOT use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc. Remove wire twist ties from paper or plastic bags. Reason: Electric arcing or sparking may occur and may damage the oven.	✓		✓	✓
★	When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition;	✓		✓	
☐	Do not use your microwave oven to dry papers or clothes.	✓		✓	✓
★	Use shorter times for smaller amounts of food to prevent overheating and burning food.	✓		✓	✓
✎	If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames;	✓		✓	✓
★	The oven should be cleaned regularly and any food deposits removed;	✓	✓		✓
☐	Do not immerse the power cable or power plug in water and keep the power cable away from heat.	✓	✓		
☐	Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended; Also do not heat airtight or vacuum-sealed bottles, jars, containers, nuts in shells, tomatoes etc.			✓	✓
☐	Do not cover the ventilation slots with cloth or paper. They may catch fire as hot air escapes from the oven. The oven may also overheat and switch itself off automatically, and will remain off until it cools sufficiently.	✓		✓	

☐	Always use oven mitts when removing a dish from the oven to avoid unintentional burns.		✓	
☐	Do not touch heating elements or interior oven walls until the oven has cooled down.		✓	
★	Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.		✓	
★	Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.		✓	
☐	Do not operate the microwave oven when it is empty. The microwave oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the microwave oven is started accidentally.	✓		✓
☐	Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.	✓		✓
★	Install the oven in compliance with the clearances stated in this manual. (See installing your microwave oven.)	✓		✓
★	Take care when connecting other electrical appliances to sockets near the oven.	✓	✓	✓


INSTALLING YOUR MICROWAVE OVEN

Place the oven on a flat level surface 85 cm above the floor. The surface should be strong enough to safely bear the weight of the oven.

1. When you install your oven, make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind and, on the sides of the oven and 20 cm (8 inches) of space above.

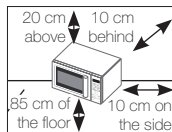

2. Remove all packing materials inside the oven. Install the roller ring and turntable. Check that the turntable rotates freely.

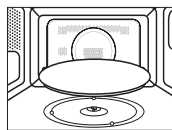

3. This microwave oven has to be positioned so that plug is accessible.

- ☞ If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent. For your personal safety, plug the cable into a 3-pin, 220 Volt, 50 Hz, AC earthed socket. If the power cable of this appliance is damaged, it must be replaced by a special cable.
- ☞ Do not install the microwave oven in hot or damp surroundings like next to a traditional oven or radiator. The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven. Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

SETTING THE TIME

Your microwave oven has an inbuilt clock. When power is supplied, “:0”, “88:88” or “12:00” is automatically displayed on the display.

Please set the current time. The time can be displayed in either the 24- hour or 12- hour notation. You must set the clock:

- When you first install your microwave oven
- After a power failure

- ☑ Do not forget to reset the clock when you switch to and from summer and winter time.

 
1. To display the time in the... Then press the ⊕ button...

12-hour notation
24-hour notation

Once
Twice




2. Press the (Λ) and (∨) buttons to set the hour.



3. Press the ⊕ button.



 4. Press the (Λ) and (∨) buttons to set the minute.



5. When the right time is displayed, press the ⊕ button to start the clock.


Result: The time is displayed whenever you are not using the microwave oven.





CHECKING THAT YOUR OVEN IS OPERATING CORRECTLY

The following simple procedure enables you to check that your oven is working correctly at all times. If you are in doubt, refer to the section entitled "What to Do if You are in Doubt or Have a Problem" on the page.

 
-  The oven must be plugged into an appropriate wall socket. The turntable must be in position in the oven. If a power level other than the maximum (100 % - 900 W) is used, the water takes longer to boil.

Open the oven door by pulling the handle on the right side of the door. Place a glass of water on the turntable. Close the door.

Press the **Start** (↻) button and set the time to 4 or 5 minutes, by pressing the **Start** (↻) button the appropriate number of times.

Result:

The oven heats the water for 4 or 5 minutes.
The water should then be boiling.



HOW A MICROWAVE OVEN WORKS


Microwaves are high-frequency electromagnetic waves; the energy released enables food to be cooked or reheated without changing either the form or the colour.


You can use your microwave oven to:

- Defrost
- Reheat
- Cook

Cooking Principle

1. The microwaves generated by the magnetron reflected at cavity and are distributed uniformly as the food rotates on the turntable. The food is thus cooked evenly.
2. The microwaves are absorbed by the food up to a depth of about 1 inch (2.5 cm). Cooking then continues as the heat is dissipated within the food.
3. Cooking times vary according to the container used and the properties of the food:
 - Quantity and density
 - Water content
 - Initial temperature (refrigerated or not)

-  As the centre of the food is cooked by heat dissipation, cooking continues even when you have taken the food out of the oven. Standing times specified in recipes and in this booklet must therefore be respected to ensure:
 - Even cooking of the food right to the centre
 - The same temperature throughout the food

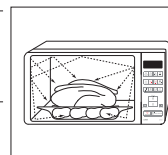

WHAT TO DO IF YOU ARE IN DOUBT OR HAVE A PROBLEM

Becoming familiar with a new appliance always takes a little time. If you have any of the problems listed below, try the solutions given. They may save you the time and inconvenience of an unnecessary service call.

The following are normal occurrences.

- Condensation inside the oven
- Air flow around the door and outer casing
- Light reflection around the door and outer casing
- Steam escaping from around the door or vents

The food is not cooked at all

- Have you set the timer correctly and pressed the **Start** (▶) button?
- Is the door closed?
- Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered.

The food is either overcooked or undercooked

- Was the appropriate cooking length set for the type of food?
- Was an appropriate power level chosen?

Sparking and cracking occur inside the oven (arcing)

- Have you used a dish with metal trimmings?
- Have you left a fork or other metal utensil inside the oven?
- Is aluminum foil too close to the inside walls?

The oven causes interference with radios or televisions

- Slight interference may be observed on televisions or radios when the oven is operating. This is normal.
 - Solution: install the oven away from televisions, radios and aerials.
- If interference is detected by the oven's microprocessor, the display may be reset.
 - Solution: Disconnect the power plug and reconnect it. Reset the time.

"E - 24" message indicates

- The "E - 24" message is automatically activated prior to the microwave oven overheating. Should the "E - 24" message be activated, then depress the "Stop/Cancel" key to utilize the initialization mode.

If the above guidelines do not enable you to solve the problem, then contact your local SAMSUNG customer service centre. Please have the following information read;

- The model and serial numbers, normally printed on the rear of the oven
- Your warranty details
- A clear description of the problem

Then contact your local dealer or SAMSUNG aftersales service.


COOKING/REHEATING

The following procedure explains how to cook or reheat food.

- ☐ ALWAYS check your cooking settings before leaving the oven unattended.

Open the door. Place the food in the centre of the turntable. Close the door. Never switch the microwave oven on when it is empty.

1. Press the **Microwave** button.

Result: The following indications are displayed:
 (microwave mode)

ไมโครเวฟ
Microwave

2. Select the appropriate power level by pressing the **Microwave** button again until the corresponding output power is displayed. Refer to the power level table below for further details.

ไมโครเวฟ
Microwave

3. Set the cooking time by pressing the (▲) and (▼) buttons.

Result: The cooking time is displayed.



4. Press the **Start** (▶) button.

Result: The oven light comes on and the turntable starts rotating. Cooking starts and when it has finished:

- The oven beep and flash "0" four times.
The oven will then beep one time per minute.

▶
เริ่มทำงาน /+30 วินาที
Start / +30s

- ☐ If you would like to know the current Power Level of the oven cavity, press **Microwave** button once. If you would like to change the power level during cooking, press the **Microwave** button twice or more times to select the desired power level.

Quick Start:

- ☐ If you wish to heat a dish for a short period of time at maximum power (900 W), you can also simply press the **Start** (▶) button once for each 30 seconds of cooking time. The oven starts immediately.



POWER LEVELS AND TIME VARIATIONS

The power level function enables you to adapt the amount of energy dissipated and thus the time required to cook or reheat your food, according to its type and quantity. You can choose between six power levels.

Power level	Percentage	Output
HIGH	100 %	900W
MEDIUM HIGH	67 %	600 W
MEDIUM	50 %	450 W
MEDIUM LOW	33 %	300 W
DEFROST	20 %	180 W
LOW	11 %	100 W

The cooking times given in recipes and in this booklet correspond to the specific power level indicated.

If you select a...	Then the cooking time must be...
Higher power level	Decreased
Lower power level	Increased

STOPPING THE COOKING

You can stop cooking at any time so that you can:

- Check the food
- Turn the food over or stir it
- Leave it to stand

To stop the cooking...	Then...
Temporarily	Open the door. Result: Cooking stops. To resume cooking, close the door again and press the Start (↵) button.
Completely	Press the Stop (⏻) button. Result: Cooking stops. If you wish to cancel the cooking settings, press the Stop (⏻) button again.

ADJUSTING THE COOKING TIME

You can increase the cooking time by pressing the +30s button once for each 30 seconds to be added.

- Check how cooking is progressing at any time simply by opening the door
- Increase the remaining cooking time

To increase the cooking time of your food, press the **Start** (↵) button once for each 30 seconds that you wish to add.

- Example: To add three minutes, press the **Start** (↵) button six times.





USING THE THAI MENU FEATURE

The ten Thai Menu features include/provide pre-programmed cooking times. You do not need to set either the cooking times or the power level.

Open the door. Place the food in the centre of the turntable. Close the door.

1. Press the **Thai Menu** button.

เมนูไทย
Thai Menu

2. Select the type of food that you are cooking by pressing the **Thai Menu** button. Refer to the table on the following page for a description of the various preprogrammed settings.

เมนูไทย
Thai Menu

3. Press the **Start** (↻) button.

Result:

The food is cooked according to the preprogrammed setting selected.

- When cooking has finished, the oven will beep and flash "0" four times. The oven will then beep one time per minute.

เริ่มทำงาน /+30 วินาที
Start / +30s

The following table presents the various Thai Menu Programmes, quantities, standing times and appropriate recommendations.

Code	Food	Serving size	Ingredients	Recommendations
1.	Rice	320 g	rice - 1 cup, water - 1 ¼ cup	1. Put rice, water in a bowl and cover with the lid. 2. Cook and keep the lid closed for another 15-20 minutes before serve
2.	Brown rice	350 g	brown rice - 1 cup, water for cooking - 2 cups, water for cleaned rice	1. Put brown rice in a bowl, add water and cover with the lid. 2. Cook and wait for 10 minutes ready to serve.
3.	Sticky rice	350-400 g	sticky rice - 1 cup, water - ½ cup	1. Put the sticky rice, add water in bowl and cover with the lid. 2. Cook and keep the lid closed for another 15-20 minutes before serve.
4.	Pork congee/ Porridge	600-750 g	cooked rice - 1 cup, water - 500 ml, pork chopped - ½ cup, pepper ground - 1 tbs, soy sauce - 1 tbs, oyster sauce - 1 tbs, spring onion, sliced Celery, coriander - ½ cup	1. Mix chopped pork with Pepper, Oyster sauce and make a small balls. 2. Put pork balls, cooked rice, water, then seasoning with seasoning powder pork flavor, stir well and cook. 3. Add the Celery, Spring Onion, Corianders before serve.



Code	Food	Serving size	Ingredients	Recommendations
5.	Clear broth soup with soft tofu and seaweed	850 g	chopped ground pork - 100 g, pepper - ¼ ts, spring onion - ¼ cup, chopped coriander - 1 tbs, water - 500 ml, fish sauce - 1 tbs, strips soft tofu - 2, dried seaweed - ¼ cup, oyster sauce - 1 tbs, pepper - 1 tbs	1. marinated ground pork and pepper for 5 minutes. 2. Put water, chopped pork, soft tofu, and cook. 3. Add spring onion, coriander, and pepper dried seaweed Ready to serve.
6.	Tom yum soup with shrimp	920 g	shrimp - 150 g, sliced galangal - 4 pieces, sliced kaffir - ¼ cup, lemongrass - 2, boiled water - 500 ml, mushroom - 1 cup, tomatoes - 4, chili paste - 1 tbs, Evaporated milk - ¼ cup, fish sauce - 3 tbs, lime juice - 3 tbs, chilis - 10	1. Put galangal, lemongrass, tear kaffir leave, tomato, tom yum khung paste in Boiled water wait for 2 minutes. 2. Add shrimp, mushroom, chili, and cook. 3. Then add the evaporated milk seasoning with fish sauce, lime juice, chili paste then serve hot.
7.	Steamed egg (egg custard)	400-450 g	fresh egg - 2, evaporated milk - 2 tbs, water - ¾ cup, Japanese soy sauce - 1 tbs, salt - ts, kani crab - ¼ cup, boiled shrimps - 4	1. Put eggs in a bowl, bleated then add evaporated milk, water and seasoning with Japanese soy sauce and salt mixed well. 2. Cook and decorate with Kani crab and shrimp before serve.
8.	Omelets	120 g	egg - 2, chopped tomato - 1 tbs, chopped onion - 1 tbs, Soy sauce - ½ tbs, butter - 1 tbs	1. Mix the beaten eggs, chopped tomato, chopped onion and soy sauce and stir well. 2. Spread the butter on the plate, put the mixer on the plate and cook

Code	Food	Serving size	Ingredients	Recommendations
9.	Spaghetti cream sauce	450-500 g	onion - ¼ cup, water - ½ cup, cooked ham - ½ cup, cooked spaghetti - 80 g, salted butter - 2 tbs, bay leaves - 3, plain flour - 1 tbs, whipping cream - 100 ml, sliced mushroom - ½ cup, Salt, pepper - ¼ ts, mozzarellas cheese - 2 tbs	1. Mix water and flour, then add butter, whipping cream, bay leave, chopped onion, ham, sliced mustroom seasoning with salt & pepper. 2. Cook and add mozzarella cheese stir then serve with spaghetti.
10.	Coconut custard	130 g	duck eggs - 3, crane sugar - ½ cup, coconut milk - 1 cup, pandanus leaf - 2-3, small diced pumpkins - 1 cup	1. Mixed egg and stir with squeezed pandanus leaf until have a smell of pandanus leaf; then stir with the crane sugar. Fill out only the juice. 2. Add the diced pumpkin and cook, then serve in room tempurate

USING THE GRILL MENU FEATURE

The six Grill Menu features provide four pre-programmed cooking times. You do not need to set either the cooking times or the power level.

Open the door. Place the food in the centre of the turntable. Close the door.

1. Press the **Grill Menu** button.

เมนูย่าง
Grill Menu

2. Select the type of food that you are cooking by pressing the **Grill Menu** button. Refer to the table on the following page for a description of the various preprogrammed settings.

เมนูย่าง
Grill Menu

3. Press the **Start** (↻) button.

Result:

The food is cooked according to the preprogrammed setting selected.

- When cooking has finished, the oven will beep and flash "0" four times. The oven will then beep one time per minute.

เริ่มทำงาน / +30 วินาที
Start / +30s

The following table presents the various Grill Menu Programmes, quantities, standing times and appropriate recommendations.

Code	Food	Serving size	Ingredients	Recommendations
1.	Garlic bread	200-250 g	French bread - 10 pieces, butter - 2 tbs, salt - ½ ts, garlic - 1 tbs	1. Mix butter salt and garlic together then spread on the bread. 2. Put the bread on rack, and cook then serve.
2.	Shrimp chop canape (kan num ban na krung)	200-220 g	white bread cut in square - 16 pieces, chopped prawn - 150 g, chopped garlic - 1 tbs, pepper - ¼ ts, coriander root - 1 tbs, oyster sauce - ½ tbs, for decorated coriender leave	1. Mix the topping by putting chopped prawn and all spices then seasoning with oyster sauce stir well. 2. Spread the topping on bread . 3. Cook and let its cool. Serve.
3.	Pork satay	200-250 g	pork meat - 250 g, satay paste - 1 tbs, evaporated milk - 5 tbs, salt - ¼ tbs, oyster sauce - 1 tbs, sugar - 2 tbs	1. Mix the marinate sauce the satay paste with oyster sauce, sugar, salt, and evaporated milk. 2. Marinate the pork meat with the marinate sauce for 15 minutes put in the bamboo stick (about 20 sticks). 3. Put on tray and cook then served with cucumber salad and satay sauce.



Code	Food	Serving size	Ingredients	Recommendations
4.	New orleans chicken wings	200 g	chicken wings - 250 g, oyster sauce - 2 tbs, pepper - ½ tbs, chili sauce - 1 tbs, bay leave - 1	1. Make the marinate sauce by mixing oyster sauce, bay leave, pepper, chili sauce ; then marinate with chicken wings leave for 15 minutes. 2. Put its on crusty tray and cook. 3. When beep is ringing, flip over and cook
5.	Chicken teriyaki	450-550 g	chicken breast with skin - 500 g, Teriyaki sauce - 2 tbs, steam vegetables	1. Mix Chicken with teriyaki sauce as well. 2. Put the chicken breast on grill tray and cook. 3. When beep is ringing, flip over and cook then serve hot with steam vegetables.
6.	Grilled whole chicken	900-1000 g	Whole chicken (1 kg) - 1, sugar - ½ tbs, oyster sauce - 5 tbs, soy sauce - 3 tbs, black pepper - 1 tbs, coriander - 2 roots, garlic - 2 tbs, vegetable oil - 2 tbs, liquor - 3 tbs	1. Blend garlic, black pepper, and coriander root. Seasoning with sugar, oyster sauce, soy sauce, liquor, and vegetable oil then mix together. 2. Braise the herb on the chicken and put the herb in the chicken, leave for 15-20 minutes. 3. Put the marinated chicken on grill tray then cook. 4. When beep is ringing, flip the chicken and cook. Take it out and serve hot with spicy dipping.

USING THE DEFROST FEATURE

The Defrost feature enables you to defrost meat, poultry, fish, bread, cake and fruit. The defrost time and power level are set automatically. You simply select the programme and the weight.

Use only containers that are microwave-safe.

Open the door. Place the frozen food on a ceramic in the centre of the turntable. Close the door.

1. Press the **Defrost** button.

ละลายน้ำแข็ง
Defrost

2. Select the type of food that you are cooking by pressing the **Defrost** button. Refer to the table on the following page for a description of the various preprogrammed settings.

ละลายน้ำแข็ง
Defrost

3. Select the food weight by pressing the (Λ) and (V) buttons.



4. Press **Start** (◊) button.

Result:

- Defrosting begins.
- The oven beeps through defrosting to remind you to turn the food over.

เริ่มทำงาน /+30 วินาที
Start / +30s

5. Press the **Start** (◊) again to finish defrosting.

Result:




When cooking has finished, the oven will beep and flash "0" four times. The oven will then beep one time per minute.



เริ่มทำงาน /+30 วินาที
Start / +30s

You can also defrost food manually. To do so, select the microwave function with power level of 180 W. Refer to the section entitled "Defrosting" on page 33 for further details.



The following table presents the various Defrost programmes, quantities, standing times and appropriate recommendations. Remove all kind of package material before defrosting. Place meat, poultry and fish on a flat glass plate or on a ceramic plate, arrange bread and cake on kitchen paper.

Code	Food	Serving size	Standing time	Recommendations
1.	Meat 	200-2000 g	20-90 min.	Shield the edges with aluminium foil. Turn the meat over, when the oven beeps. This programme is suitable for beef, lamb, pork, steaks, chops, minced meat.
2.	Poultry 	200-2000 g	20-90 min.	Shield the leg and wing tips with aluminium foil. Turn the poultry over, when the oven beeps. This programme is suitable for whole chicken as well as for chicken portions.
3.	Fish 	200-2000 g	20-80 min.	Shield the tail of a whole fish with aluminium foil. Turn the fish over, when the oven beeps. This programme is suitable for whole fishes as well as for fish fillets.

Code	Food	Serving size	Standing time	Recommendations
4.	Bread/ Cake 	125-1000 g	10-60 min.	Put bread horizontally on a piece of kitchen paper and turn over, as soon as the oven beeps. Place cake on a ceramic plate and if possible, turn over, as soon as the oven beeps. (Oven keeps operating and is stopped, when you open the door). This programme is suitable for all kinds of bread, sliced or whole, as well as for bread rolls and baguettes. Arrange bread rolls in a circle. This programme is suitable for all kinds of yeast cake, biscuit, cheese cake and puff pastry. It is not suitable for short/crust pastry, fruit and cream cakes as well as for cake with chocolate topping.
5.	Fruit 	100-600 g	5-20 min.	Spread fruits evenly into a flat glass dish. This programme is suitable for all kind of fruits.



USING THE QUICK MEAL FEATURE

The nine Quick Meal features provide four pre-programmed cooking times. You do not need to set either the cooking times or the power level.

Open the door. Place the food in the centre of the turntable. Close the door.

1. Press the **Quick Meal** button.

อาหาร
จานด่วน
Quick Meal

2. Select the type of food that you are cooking by pressing the **Quick Meal** button. Refer to the table on the following page for a description of the various preprogrammed settings.

อาหาร
จานด่วน
Quick Meal

3. Press the **Start** (↵) button.

Result:

The food is cooked according to the preprogrammed setting selected.

- When cooking has finished, the oven will beep and flash "0" four times. The oven will then beep one time per minute.

เริ่มทำงาน /+30 วินาที
Start / +30s

The following table presents the various Quick Meal Programmes, quantities, standing times and appropriate recommendations.

Code	Food	Serving size	Ingredients	Recommendations
1.	Instant noodle	670 g	minced pork - 100 g, egg - 1, any vegetables - 100 g, instant noodle - 1 bag, boiled water - 2 cups	1. Put instant noodle, minced pork, vegetable and egg together and cook
2.	Frozen shrimp dumpling (kanom jeeb kung)	192 g (16/p)	-	1. Cut the corner of the package and cook.
3.	Frozen chinese bun (salapao sai moo)	180 g (30/p)	-	1. Cut the corner of the package and cook
4.	Frozen wonton shrimp (keaw kung)	250 g	-	1. Remove the outer bag before reheating. 2. Pierce cover film for 3-4 time and cook.
5.	Frozen congee with grouper fish (kow tom pla kao)	350 g	-	1. Remove the outer seal before reheating. 2. Open the cover. Add water to fill line. 3. cover lid loosely to let steam escape during heat and cook.
6.	Frozen spaghetti with chicken sauce	450 g	-	1. Remove the outer bag before reheating. 2. Pierce cover film for 3-4 time and cook.

ENGLISH



Code	Food	Serving size	Ingredients	Recommendations
7.	Frozen shrimp fried rice (kow pad kung)	220 g	-	1. Remove the outer bag before reheating. 2. Open cover for a few and cook.
8.	Frozen fried chicken with basil with rice (kow kra pow kai)	295 g	-	1. Remove the outer bag before reheating. 2. Pierce cover film for 3-4 time and cook.
9.	Frozen taro pearls in coconut cream (bua laoy pauk)	160 g	-	1. Remove the outer box before reheating. 2. Pierce cover film for 3-4 time. 3. Cook and take out for shake when beep is ringing. 4. Cook again.

USING THE BAKE MENU FEATURE

The five Bake Menu features provide four pre-programmed cooking times. You do not need to set either the cooking times or the power level. Open the door. Place the food in the centre of the turntable. Close the door.

1. Press the **Bake Menu** button.

เมนูอบ
Bake Menu

2. Select the type of food that you are cooking by pressing the **Bake Menu** button. Refer to the table on the following page for a description of the various preprogrammed settings.

เมนูอบ
Bake Menu

3. Press **Start** (↕) button.

Result:

The food is cooked according to the preprogrammed setting selected.

- When cooking has finished, the oven will beep and flash “0” four times. The oven will then beep one time per minute.

เริ่มทำงาน /+30 วินาที
Start / +30s



The following table presents the various Bake Menu Programmes, quantities, standing times and appropriate recommendations.


Code	Food	Serving size	Ingredients	Recommendations
1.	Baked rice with chinese sausage	450 g	cooked rice - 2 cups, diced chinese sausage - ½ cup, diced carrot - ¼ cup, diced Asparagus - ¼ cup, baby corn - ¼ cup, soy sauce - 1 tbs, Oyster sauce - ½ tbs, vegetable oil - 1 tbs, garlic chopped - 1 tbs	1. Put Chinese sausage and garlic in a bowl, cook. 2. When beep is ringing, add rice cooking sauce and all ingredients into the bowl stir well then put in and cook, serve hot.
2.	Baked clam with garlic	300 g	salted butter - 50 g, chopped garlic - 4 tbs, chopped parsley - 2 tbs, black pepper - ¼ tbs, scallop - 15 pcs, bread crumb - ½ cup	1. Mix the butter, garlic, black pepper, chopped parsley and bread crumb together. 2. Put the scallops in the bowl and top with the mixed butter. 3. Put in crusty plate and cook.
3.	Brownie	600-800 g	baked dark chocolate - 190 g, unsalted butter - 190 g, sugar - 120 g, all purpose flavor - 115 g, egg - 3, chopped cashew nut - 200 g, salt - 1 tbs	1. Put the room temperature butter and baked dark chocolate in the microwave at 900 watt for 1 minute, stir well. 2. Blended egg with the fast speed and add sugar slowing on the batch. 3. Add the mixed butter and chocolate into the batch (No 2), put them all together ; then add chopped cashew nut. 4. Put on the bake ware size 11 x 10 x 1.2 inch which spread the butter on the surface then cook.

Code	Food	Serving size	Ingredients	Recommendations
4.	Banana cake	500-700 g	all purpose flavor - 190 g, baking powder - 1.5 g, baking soda - 2.5 g, butter - 120 g, salt - 1 g, sugar - 175 g, egg - 2, milk - ¼ cup, lime juice - 1 tbs, banana - 220 g, banana flavor - 1 tbs	1. Mix the all purpose flavor, baking powder, baking soda together. 2. Mix banana, milk, lime juice and banana flavor together. 3. Mix butter and salt together and add sugar slowly until all blended; then add egg until it is mixed well. After that add the flavors and banana slowly into the batch. 4. Put in the bakeware size 1 ½ x 1 ½ inch (around 14 pcs) then cook.
5.	Butter cookies	250-300 g	flour - 3 cups(325 g), butter - ¾ cup(175 g), sugar - 150 g, salt - ½ ts, egg - 1, fresh milk - ¼ cup, baking soda - 1 tbs, vanilla flavor - 1 tbs	1. Shift twice flour and baking soda. Mix vanilla flavor and fresh milk together. 2. Beat butter and salt until smooth and cream color then add sugar and continuous beat when its smooth add eggs and add flour and fresh milk beat until smooth leave for awhile. 3. Spread butter on try then balled the dough and put in the tray then cook.

MULTISTAGE COOKING

Your microwave oven can be programmed to cook food in up to three stages (the Convection, Microwave+Convection and Fast Preheat mode can not be used in Multistage cooking). Example: You wish to defrost food and cook it without having to reset the oven after each stage. You can thus defrost and cook a 1.8 kg chicken in three stages:

- Defrosting
- Microwave cooking for 30 minutes
- Grill for 15 minutes

 Defrosting must be the first stage. Combination and Grill can only be used once during the remaining two stages. However microwave can be used twice (at two different power levels).

1. Press the **Defrost** button.

ละลายน้ำแข็ง
Defrost

2. Select the type of food that you are cooking by pressing the **Defrost** button.

ละลายน้ำแข็ง
Defrost

3. Set the weight by pressing the (∧) and (∨) buttons the appropriate number of times (1800 g in the example).



4. Press the **Microwave** button.

ไมโครเวฟ
Microwave

5. Set the microwave power level by pressing the **Microwave** button to select the appropriate **Power Level** (450 W in the example).

ไมโครเวฟ
Microwave

6. Set the cooking time by pressing the (∧) and (∨) buttons (30 minutes in the example).



7. Press the **Grill** button.

ย่าง
Grill

8. Set the cooking time by pressing the (∧) and (∨) buttons (15 minutes in the example).



9. Press **Start** (▶) button.

Result:

Cooking starts:

- When cooking has finished, the oven will beep and flash "0" four times. The oven will then beep one time per minute.





FAST PREHEATING THE OVEN

For convection cooking, it is recommended that you preheat the oven to the appropriate temperature before placing the food in the oven. When the oven reaches the requested temperature, it is maintained for approximately 10 minutes; it is then switched off automatically.

Check that the heating element is in the correct position for type of cooking that you require.

1. Press the **Fast Preheat** button.

Result: The following indications are displayed:
220 °C (temperature)

อุ่นเตาอบ
Fast Preheat

2. Press the **Fast Preheat** button one or more times to set the temperature. (Temperature : 220, 200, 180, 160, 140, 100, 40 °C)

อุ่นเตาอบ
Fast Preheat

3. Press the **Start** (↻) button.

Result: The oven is preheated to the requested temperature.

- The display times are 8 seconds for the selected cooking mode and 2 seconds for the preset temperature in sequence.
Ex) In fast preheat mode at 200 °C



(displayed for 8 seconds)



(displayed for 2 seconds)

- Upon arrival at the preset temperature, the oven beeps 6 times and the temperature is kept for 10 minutes.
- After 10 minutes, the beeps 4 times and the operation stops.

- ☑ In case the inner temperature has reached the preset temperature, the beeps 6 times when temperature and the preset temperature is kept for 10 minutes.

- ☑ If you would like to know the current temperature of oven cavity, press **Fast Preheat** button.

COOKING BY CONVECTION

The convection mode enables you to cook food in the same way as in a traditional oven. The microwave mode is not used. You can set the temperature, as required, in a range varying from 40 °C to 220 °C in eight preset levels. The maximum cooking time is 60 minutes.

- ☑ If you wish to Fast Preheat the oven, see page 23.

- Always use oven gloves when touching the recipients in the oven, as they will be very hot.
- You can get better cooking and browning, if you use the low rack.

Check that the heating element is in the horizontal position and that the turntable is in position. Open the door and place the recipient on the low rack and set on turntable.

1. Press the **Convection** button.

Result: The following indications are displayed:
↻ (convection mode)
220 °C (temperature)

อบ
Convection

2. Press the **Convection** button once or more times to set the temperature. (Temperature : 220, 200, 180, 160, 140, 100, 40 °C)

อบ
Convection

3. Set the cooking time by pressing the (Λ) and (V) buttons.



4. Press the **Start** (🔼) button.

Result:

Cooking starts:

- The display times are 8 seconds for the preset cooking time and 2 seconds for the preset temperature in sequence.
Ex) 30 minutes of cooking time at 200 °C



(displayed for 8 seconds)



(displayed for 2 seconds)

- When cooking has finished, the oven will beep and flash "0" four times. The oven will then beep one time per minute.

📝 If you would like to know the current temperature of oven cavity, press **Fast Preheat** button.

 
CHOOSING THE ACCESSORIES

Traditional convection cooking does require cookware. You should, however, use only cookware that you would use in your normal oven.

Microwave-safe containers are not usually suitable for convection cooking; don't use plastic containers, dishes, paper cups, towels, etc.

If you wish to select a combined cooking mode (microwave and grill or convection), use only recipients that are microwave-safe and oven-proof.

📖 For further details on suitable cookware and utensils, refer to the Cookware Guide on page 27.




GRILLING

The grill enables you to heat and brown food quickly, without using microwaves.

- Always use oven gloves when touching the recipients in the oven, as they will be very hot.
- You can get better cooking and grilling results, if you use the high rack.

 1. Open the door and place the food on the rack.



2. Press the **Grill** button.

Result:

 
The following indications are displayed:
🔼 (grill mode)

- You cannot set the temperature of the grill.

ย่าง
Grill

3. Set the grilling time by pressing the (🔼) and (🔽) buttons.

- The maximum grilling time is 60 minutes.



4. Press the **Start** (🔼) button.

Result:

Grilling starts.

- When cooking has finished, the oven will beep and flash "0" four times. The oven will then beep one time per minute.





 
COMBINING MICROWAVES AND THE GRILL

You can also combine microwave cooking with the grill, to cook quickly and brown at the same time.

- ☑ ALWAYS use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly.
- ALWAYS use oven gloves when touching the recipients in the oven, as they will be very hot.
- You can improve cooking and grilling, if you use the high rack.

Open the door. Place the food on the rack best suited to the type of food to be cooked. Place the rack on the turntable. Close the door.

1. Press the **Microwave + Grill** button.

Result: The following indications are displayed:
 (microwave & grill combi mode)

600 W (output power)

ไมโครเวฟ
+ ย่าง
MW+Grill

2. Select the appropriate power level by pressing the **Microwave + Grill** button until the corresponding output power is displayed (300-600 W).

- You cannot set the temperature of the grill.

ไมโครเวฟ
+ ย่าง
MW+Grill

3. Set the cooking time by pressing the () and () buttons.

- The maximum cooking time is 60 minutes.



4. Press the **Start** () button.

Result:

- Combination cooking starts.
- When cooking has finished, the oven will beep and flash "0" four times. The oven will then beep one time per minute.

เริ่มทำงาน / +30 วินาที
Start / +30s

COMBINING MICROWAVES AND CONVECTION

Combination cooking uses both microwave energy and convection heating. No preheating is required as the microwave energy is immediately available.

Many foods can be cooked in combination mode, particularly:

- Roast meats and poultry
- Pies and cakes
- Egg and cheese dishes


- ☑ ALWAYS use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly.

ALWAYS use oven gloves when touching the recipients in the oven, as they will be very hot.

You can get better cooking and browning, if you use the low rack.

Open the door. Place the food on the turntable or on the low rack which should then be placed on the turntable. Close the door.

1. Press the **Microwave+Convection** button.

Result: The following indications are displayed:
 (microwave & convection combi mode)

600W (output power : Switches to the following temperature mode in 2 seconds)

220 °C (temperature)

ไมโครเวฟ
+ อบ
MW+Conv.

2. Select the temperature by pressing the **Microwave+Convection** button. (Temperature : 220, 200, 180, 160, 140, 100, 40 °C)

ไมโครเวฟ
+ อบ
MW+Conv.

3. Set the cooking time by pressing the () and () buttons.

- The maximum cooking time is 60 minutes.



4. Set the appropriate power level by pressing the **Microwave+Convection** button until the corresponding output power is displayed (600, 450, 300, 180, 100 W).

ไมโครเวฟ
+ อบ
MW+Conv.

5. Press the **Start** (↔) button.

Result:

- Combination cooking starts.
- The oven is heated to the required temperature and then microwave cooking continues until the cooking time is over.
- The display times are 8 seconds for the preset cooking time and 2 seconds for the preset temperature in sequence.
Ex) 30 minutes of cooking time at 200 °C



(displayed for 8 seconds)



(displayed for 2 seconds)

- When cooking has finished, the oven will beep and flash "0" four times. The oven will then beep one time per minute.

☑ If you would like to know the current temperature of oven cavity, press **Fast Preheat** (Fast) button.

USING THE DEODORIZE FEATURE

Use this feature after cooking odorous food or when there is a lot of smoke in the oven interior.

First clean the oven interior.

Press the **Deodorize** button after you have finished cleaning.
You will hear four beeps.

กำจัดกลิ่น
Deodorize

- ☑ The deodorization time has been specified as 5 minutes.
- ☑ You can also adjust **Deodorize** time by pressing the +30s button.
- ☑ The maximum deodorization time is 60 minutes.



เริ่มทำงาน / +30 วินาที
Start / +30s

SAFETY-LOCKING YOUR MICROWAVE OVEN

Your microwave oven is fitted with a special Child Safety programme, which enables the oven to be "locked" so that children or anyone unfamiliar with it cannot operate it accidentally.

The oven can be locked at any time.

1. Press the **Clock** and **Cancel** button at the same time (about three second).

Result:

- The oven is locked.
- The follow indication is display "L".



ตั้งนาฬิกา
Clock

หยุด/ยกเลิก
Stop/Cancel

2. To unlock the oven, press the **Clock** and **Clock** buttons again at the same time (about three second).

Result:

The oven can be used normally.



ตั้งนาฬิกา
Clock

หยุด/ยกเลิก
Stop/Cancel

SWITCHING THE BEEPER OFF

You can switch the beeper off whenever you want.

1. Press the **Cancel** and **Start** buttons at the same time (about one second).

Result:

The oven does not beep to indicate the end of a function.



หยุด/ยกเลิก
Stop/Cancel

เริ่มทำงาน / +30 วินาที
Start / +30s

2. To switch the beeper back on, press the **Cancel** and **Start** buttons again at the same time (about three second).

Result:

The oven can be used normally.



หยุด/ยกเลิก
Stop/Cancel

เริ่มทำงาน / +30 วินาที
Start / +30s



COOKWARE GUIDE

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used.

Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.

The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-Safe	Comments
Aluminum foil	✓ ✗	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Crust plate	✓	Do not preheat for more than 8 minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	✗	May catch fire.
• Recycled paper or metal trims	✗	May cause arcing.
Glassware		
• Oven-to-tableware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.

Cookware	Microwave-Safe	Comments
• Glass jars	✓	Must remove the lid. Suitable for warming only.
Metal		
• Dishes	✗	May cause arcing or fire.
• Freezer bag twist ties	✗	
Paper		
• Plates, cups, napkins and Kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	✗	May cause arcing.
Plastic		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓ ✗	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ : Recommended

✓✗ : Use Caution

✗ : Unsafe



COOKING GUIDE

MICROWAVES

Microwave energy actually penetrates food, attracted and absorbed by its water, fat and sugar content.

The microwaves cause the molecules in the food to move rapidly. The rapid movement of these molecules creates friction and the resulting heat cooks the food.

COOKING

Cookware for microwave cooking:

Cookware must allow microwave energy to pass through it for maximum efficiency. Microwaves are reflected by metal, such as stainless steel, aluminium and copper, but they can penetrate through ceramic, glass, porcelain and plastic as well as paper and wood. So food must never be cooked in metal containers.

Food suitable for microwave cooking:

Many kinds of food are suitable for microwave cooking, including fresh or frozen vegetables, fruit, pasta, rice, grains, beans, fish, and meat. Sauces, custard, soups, steamed puddings, preserves, and chutneys can also be cooked in a microwave oven. Generally speaking, microwave cooking is ideal for any food that would normally be prepared on a hob. Melting butter or chocolate, for example (see the chapter with tips, techniques and hints).

Covering during cooking

To cover the food during cooking is very important, as the evaporated water rises as steam and contributes to cooking process. Food can be covered in different ways: e.g. with a ceramic plate, plastic cover or microwave suitable cling film.

Standing times

After cooking is over food the standing time is important to allow the temperature to even out within the food.

Cooking Guide for frozen vegetables

Use a suitable glass pyrex bowl with lid. Cook covered for the minimum time - see table. Continue cooking to get the result you prefer.

Stir twice during cooking and once after cooking. Add salt, herbs or butter after cooking. Cover during standing time.

Food	Portion	Power	Time (min.)	Standing time (min.)	Instructions
Spinach	150 g	600 W	5-6	2-3	Add 15 ml (1 tablespoon) cold water.
Broccoli	300 g	600 W	8-9	2-3	Add 30 ml (2 tbsp.) cold water.
Peas	300 g	600 W	7-8	2-3	Add 15 ml (1 tbsp.) cold water.
Green beans	300 g	600 W	7½-8½	2-3	Add 30 ml (2 tbsp.) cold water.
Mixed vegetables (carrots/peas/corn)	300 g	600 W	7-8	2-3	Add 15 ml (1 tbsp.) cold water.
Mixed vegetables (chinese style)	300 g	600 W	7½-8½	2-3	Add 15 ml (1 tbsp.) cold water.



Cooking Guide for rice and pasta

Rice: Use a large glass pyrex bowl with lid - rice doubles in volume during cooking. Cook covered.
After the cooking time is over, stir before standing time and salt or add herbs and butter.
Remark: the rice may not have absorbed all water after the cooking time is finished.

Pasta: Use a large glass pyrex bowl. Add boiling water, a pinch of salt and stir well. Cook uncovered.
Stir occasionally during and after cooking. Cover during standing time and drain thoroughly afterwards.

Food	Portion	Power	Time (min.)	Standing time (min.)	Instructions
White rice (parboiled)	250 g	900 W	15-16	5	Add 500 ml cold water.
	375 g		17½-18½		Add 750 ml cold water.
Brown rice (parboiled)	250 g	900 W	20-21	5	Add 500 ml cold water.
	375 g		22-23		Add 750 ml cold water.
Mixed rice (rice + wild rice)	250 g	900 W	16-17	5	Add 500 ml cold water.
Mixed corn (rice + grain)	250 g	900 W	17-18	5	Add 400 ml cold water.
Pasta	250 g	900 W	10-11	5	Add 1000 ml hot water.

Cooking Guide for fresh vegetables

Use a suitable glass pyrex bowl with lid. Add 30-45 ml cold water (2-3 tbsp.) for every 250 g unless another water quantity is recommended - see table. Cook covered for the minimum time - see table. Continue cooking to get the result you prefer. Stir once during and once after cooking. Add salt, herbs or butter after cooking. Cover during a standing time of 3 minutes.

Hint: Cut the fresh vegetables into even sized pieces. The smaller they are cut, the quicker they will cook.

All fresh vegetables should be cooked using full microwave power (900 W).

Food	Portion	Time (min.)	Standing time (min.)	Instructions
Broccoli	250 g 500 g	4½-5 7-8	3	Prepare even sized florets. Arrange the stems to the centre.
Brussels sprouts	250 g	6-6½	3	Add 60-75 ml (5-6 tbsp.) water.
Carrots	250 g	4½-5	3	Cut carrots into even sized slices.
Cauliflower	250 g 500 g	5-5½ 7½-8½	3	Prepare even sized florets. Cut big florets into halves. Arrange stems to the centre.
Courgettes	250 g	4-4½	3	Cut courgettes into slices. Add 30 ml (2 tbsp.) water or a knob of butter. Cook until just tender.
Egg plants	250 g	3½-4	3	Cut egg plants into small slices and sprinkle with 1 tablespoon lemon juice.
Leeks	250 g	4-4½	3	Cut leeks into thick slices.
Mushrooms	125 g 250 g	1½-2 2½-3	3	Prepare small whole or sliced mushrooms. Do not add any water. Sprinkle with lemon juice. Spice with salt and pepper. Drain before serving.



Food	Portion	Time (min.)	Standing time (min.)	Instructions
Onions	250 g	5-5½	3	Cut onions into slices or halves. Add only 15 ml (1 tbsp.) water.
Pepper	250 g	4½-5	3	Cut pepper into small slices.
Potatoes	250 g 500 g	4-5 7-8	3	Weigh the peeled potatoes and cut them into similar sized halves or quarters.
Turnip cabbage	250 g	5½-6	3	Cut turnip cabbage into small cubes.

REHEATING

Your microwave oven will reheat food in a fraction of the time that conventional ovens hobs normally take.

Use the power levels and reheating times in the following chart as a guide. The times in the chart consider liquids with a room temperature of about +18 to +20 °C or a chilled food with a temperature of about +5 to +7 °C.

Arranging and covering

Avoid reheating large items such as joint of meat - they tend to overcook and dry out before the centre is piping hot. Reheating small pieces will be more successful.

Power levels and stirring

Some foods can be reheated using 900 W power while others should be reheated using 600 W, 450 W or even 300 W.

Check the tables for guidance.

In general, it is better to reheat food using a lower power level, if the food is delicate, in large quantities, or if it is likely to heat up very quickly (mince pies, for example).

Stir well or turn food over during reheating for best results. When possible, stir again before serving.

Take particular care when heating liquids and baby foods. To prevent eruptive boiling of liquids and possible scalding, stir before, during and after heating. Keep them in the microwave oven during standing time. We recommend putting a plastic spoon or glass stick into the liquids. Avoid overheating (and therefore spoiling) the food. It is preferable to underestimate cooking time and add extra heating time, if necessary.

Heating and standing times

When reheating food for the first time, it is helpful to make a note of the time taken - for future reference.

Always make sure that the reheated food is piping hot throughout.

Allow food to stand for a short time after reheating - to let the temperature even out.

The recommended standing time after reheating is 2-4 minutes, unless another time is recommended in the chart.

Take particular care when heating liquids and baby food. See also the chapter with the safety precautions.



REHEATING LIQUIDS

Always allow a standing time of at least 20 seconds after the oven has been switched off to allow the temperature to even out. Stir during heating, if necessary, and ALWAYS stir after heating. To prevent eruptive boiling and possible scalding, you should put a spoon or glass stick into the beverages and stir before, during and after heating.

REHEATING BABY FOOD

BABY FOOD:

Empty into a deep ceramic plate. Cover with plastic lid. Stir well after reheating! Let stand for 2-3 minutes before serving. Stir again and check the temperature. Recommended serving temperature: between 30-40 °C.

BABY MILK:

Pour milk into a sterilised glass bottle. Reheat uncovered. Never heat a baby's bottle with teat on, as the bottle may explode if overheated. Shake well before standing time and again before serving! Always carefully check the temperature of baby milk or food before giving it to the baby. Recommended serving temperature: ca. 37 °C.

REMARK:

Baby food particularly needs to be checked carefully before serving to prevent burns.

Use the power levels and times in the next table as a guide lines for reheating.

Reheating Baby Food and Milk

Use the power levels and times in this table as guide lines for reheating.

Food	Portion	Power	Time	Standing time (min.)	Instructions
Baby food (vegetables + meat)	190 g	600 W	30 sec.	2-3	Empty into ceramic deep plate. Cook covered. Stir after cooking time. Stand for 2-3 minutes. Before serving, stir well and check the temperature carefully.
Baby porridge (grain + milk + fruit)	190 g	600 W	20 sec.	2-3	Empty into ceramic deep plate. Cook covered. Stir after cooking time. Stand for 2-3 minutes. Before serving, stir well and check the temperature carefully.
Baby milk	100 ml 200 ml	300 W	30-40 sec. 1 min. to 1 min. 10 sec.	2-3	Stir or shake well and pour into a sterilized glass bottle. Place into the centre of turntable. Cook uncovered. Shake well and stand for at least 3 minutes. Before serving, shake well and check the temperature carefully.



Reheating Liquids and Food

Use the power levels and times in this table as a guide lines for reheating.

Food	Portion	Power	Time (min.)	Standing time (min.)	Instructions
Drinks (coffee, tea and water)	150 ml (1 cup)	900 W	1-1½	1-2	Pour into cups and reheat uncovered: 1 cup in the centre, 2 cups opposite of each other, 3 cups in a circle. Keep in microwave oven during standing time and stir well.
	300 ml (2 cups)		2-2½		
	450 ml (3 cups)		3-3½		
	600 ml (4 cups)		3½-4		
Soup (chilled)	250 g 350 g 450 g 550 g	900 W	2½-3 3-3½ 3½-4 4½-5	2-3	Pour into a deep ceramic plate or deep ceramic bowl. Cover with plastic lid. Stir well after reheating. Stir again before serving.
Stew (chilled)	350 g	600 W	4½-5½	2-3	Put stew in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving.
Pasta with sauce (chilled)	350 g	600 W	3½-4½	3	Put pasta (e.g. spaghetti or egg noodles) on a flat ceramic plate. Cover with microwave cling film. Stir before serving.

Food	Portion	Power	Time (min.)	Standing time (min.)	Instructions
Filled pasta with sauce (chilled)	350 g	600 W	4-5	3	Put filled pasta (e.g. ravioli, tortellini) in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving.
Plated meal (chilled)	350 g 450 g 550 g	600 W	4½-5½ 5½-6½ 6½-7½	3	Plate a meal of 2-3 chilled components on a ceramic dish. Cover with microwave cling-film.
Cheese fondue ready-to-serve (chilled)	400 g	600 W	6-7	1-2	Put the ready-to-serve cheese fondue in a suitable sized glass pyrex bowl with lid. Stir occasionally during and after reheating. Stir well before serving.



DEFROSTING

Microwaves are an excellent way of defrosting frozen food. Microwaves gently defrost frozen food in a short period of time. This can be of great advantage, if unexpected guests suddenly show up.

Frozen poultry must be thoroughly thawed before cooking. Remove any metal ties and take it out of any wrapping to allow thawed liquid to drain away.

Put the frozen food on a dish without cover. Turn over half way, drain off any liquid and remove any giblets as soon as possible. Check the food occasionally to make sure that it does not feel warm.

If smaller and thinner parts of the frozen food start to warm up, they can be shield by wrapping very small strips of aluminium foil around them during defrosting.

Should poultry start to warm up on the outer surface, stop thawing and allow it to stand for 20 minutes before continuing.

Leave the fish, meat and poultry to stand in order to complete defrosting. The standing time for complete defrosting will vary depending on the quantity defrosted. Please refer to the table below.

Hint: Flat food defrosts better than thick and smaller quantities need less time than bigger ones. Remember this hint while freezing and defrosting food.

For defrosting of frozen food with a temperature of about -18 to -20 °C, use the following table as a guide.

All frozen food should be defrosted using defrosting power level (180 W).

Food	Portion	Time (min.)	Standing time (min.)	Instructions
Meat				
Minced beef	250 g	6-7	15-30	Place the meat on a flat ceramic plate. Shield thinner edges with aluminium foil. Turn over after half of defrosting time!
	500 g	10-12		
Pork steaks	250 g	7-8		
Poultry				
Chicken pieces	500 g (2 pcs)	14-15	15-60	First, put chicken pieces first skin-side down, whole chicken first breast-side-down on a flat ceramic plate. Shield the thinner parts like wings and ends with aluminium foil. Turn over after half of defrosting time!
Whole chicken	1200 g	32-34		
Fish				
Fish fillets	200 g	6-7	10-25	Put frozen fish in the middle of a flat ceramic plate. Arrange the thinner parts under the thicker parts. Shield narrow ends of fillets and tail of whole fish with aluminium foil. Turn over after half of defrosting time!
Whole fish	400 g	11-13		
Fruits				
Berries	300 g	6-7	5-10	Spread fruit on a flat, round glass dish (with a large diameter).
Bread				
Bread rolls (each ca. 50 g)	2 pcs 4 pcs	1-1½ 2½-3	5-20	Arrange rolls in a circle or bread horizontally on kitchen paper in the middle of turntable. Turn over after half of defrosting time!
Toast/sandwich	250 g	4-4½		
German bread (wheat + rye flour)	500 g	7-9		



GRILL

The grill-heating element is located underneath the ceiling of the cavity. They operate while the door is closed and the turntable is rotating. The turntable's rotation makes the food brown more evenly. Preheating the grill for 4 minutes will make the food brown more quickly.

Cookware for grilling:

Should be flameproof and may include metal. Do not use any type of plastic cookware, as it can melt.

Food suitable for grilling:

Chops, sausages, steaks, hamburgers, bacon and gammon rashers, thin fish portions, sandwiches and all kinds of toast with toppings.

Important remark:

Whenever the grill only mode is used, please remember that food must be placed on the high rack, unless another instruction is recommended.

MICROWAVE + GRILL

This cooking mode combines the radiant heat that is coming from the grill with the speed of microwave cooking. It operates only while the door is closed and the turntable is rotating. Due to the rotation of the turntable, the food browns evenly. Three combination modes are available with this model: 600 W + Grill, 450 W + Grill and 300 W + Grill.

Cookware for cooking with microwave + grill

Please use cookware that microwaves can pass through. Cookware should be flameproof. Do not use metal cookware with combination mode. Do not use any type of plastic cookware, as it can melt.

Food suitable for microwave + grill cooking:

Food suitable for combination mode cooking include all kinds of cooked food which need reheating and browning (e.g. baked pasta), as well as foods which require a short cooking time to brown the top of the food. Also, this mode can be used for thick food portions that benefit from a browned and crispy top (e.g. chicken pieces, turning them over half way through cooking). Please refer to the grill table for further details.

Important remark:

Whenever the combination mode (microwave + grill) is used, the food should be placed on the high rack, unless another instruction is recommended. Please refer to the instructions in the following chart.

The food must be turned over, if it is to be browned on both sides.



Grill Guide for Fresh Food

Preheat the grill with the grill-function for 2-3 minutes.

Use the power levels and times in this table as guide lines for grilling.

Use oven gloves when taking out.

Fresh food	Portion	Power	1st side time (min.)	2nd side time (min.)	Instructions
Toast slices	4 pcs (each 25 g)	Grill only	2-3	1-2	Put toast slices side by side on the high rack.
Grilled tomatoes	400 g (2 pcs)	300 W + Grill	5-6	-	Cut tomatoes into halves. Put some cheese on top. Arrange in a circle in a flat glass pyrex dish. Place it on the high rack. Stand for 2-3 minutes.
Tomato-cheese toast	4 pcs (300 g)	300 W + Grill	4-5	-	Toast the bread slices first. Put the toast with topping on the high rack. Stand for 2-3 minutes
Toast hawaii (ham, pineapple, cheese slices)	4 pcs (500 g)	300 W + Grill	5-6	-	Toast the bread slices first. Put the toast with topping on the high rack. Stand for 2-3 minutes.
Baked potatoes	500 g	600 W + Grill	7-8	-	Cut potatoes into halves. Put them in a circle on the high rack with the cut side to the grill.
Gratin potatoes/Vegetables (chilled)	450 g	450 W + Grill	9-11	-	Put the fresh gratin into a small glass pyrex dish. Put the dish on the high rack. After cooking stand for 2-3 minutes.

Fresh food	Portion	Power	1st side time (min.)	2nd side time (min.)	Instructions
Baked apples	2 apples (ca. 400 g)	300 W + Grill	7-8	-	Core the apples and fill them with raisins and jam. Put some almond slices on top. Put apples on a flat glass pyrex dish. Place the dish directly on the low rack.
Chicken pieces	500 g (2 pcs)	300 W + Grill	8-10	6-8	Brush chicken pieces with oil and spices. Put them in a circle on the high rack. After grilling stand for 2-3 minutes
Beef steaks (medium)	400 g (2 pcs)	Grill only	10-14	8-12	Brush the beef steaks with oil. Lay them in a circle on the high rack. After grilling stand for 2-3 minutes
Roast fish	400-500 g	300 W + Grill	5-7	5½-6½	Brush skin of whole fish with oil and add herbs and spices. Put two fishes side by side (head to tail) on the high rack. After grilling stand for 2-3 minutes.



CONVECTION

Cooking with convection is the traditional and well known method of cooking food in a traditional oven with hot air.

The heating element and the fan position is at the back-wall, so that the hot air is circulating.

Cookware for convection cooking:

All conventional ovenproof cookware, baking tins and sheets – anything you would normally use in a traditional convection oven – can be used.

Food suitable for convection cooking:

All biscuits, individual scones, rolls and cakes should be made by this mode as well as rich fruit cakes, choux pastry and soufflés.

MICROWAVES + CONVECTION

This mode combines the microwave energy with the hot air and is therefore reducing the cooking time while giving the food a brown and crispy surface.

Cooking with convection is the traditional and well known method of cooking food in an oven with hot air circulated by a fan on the back-wall.

Cookware for cooking with microwaves + convection:

Should be able to let the microwaves pass through. Should be ovenproof (like glass, pottery or china without metal trims); similar to the cookware described under MW + Grill.

Food suitable for Microwave+Convection cooking:

All kinds of meats and poultry as well as casseroles and gratin dishes, sponge cakes and light fruit cakes, pies and crumbles, roast vegetables, scones and breads.

Convection Guide for fresh and frozen food

Preheat the convection with the auto pre-heat function to the desired temperature.

Use the power levels and times in this table as guide lines for convection cooking.

Use oven gloves when taking out.

Fresh food	Portion	Power	1st side time (min.)	2nd side time (min.)	Instructions
PIZZA Frozen pizza (ready baked)	300-400 g	450 W + 220 °C	13-15	-	Place the pizza on the low rack. After baking stand for 2-3 minutes
PASTA Frozen lasagne	400 g	450 W + 220 °C	22-25	-	Put into a suitable sized glass pyrex dish or leave in the original packaging (take care that this is suitable for microwaves and oven heat). Put frozen pasta gratin on the low rack. After cooking stand for 2-3 minutes.
MEAT Roast beef/ Roast lamb (medium)	1200-1300 g	600 W + 180 °C	20-23	10-13	Brush beef/ lamb with oil and spice it with pepper, salt and paprika. Put it on the low rack, first with the fat side down. After cooking wrap in aluminium foil and stand for 10-15 minutes.
Roast chicken	1000-1100 g	450 W + 220 °C	17-22	13-17	Brush chicken with oil and spices. Put chicken first breast side down, second side breast side up on the low rack. Stand for 5 minutes.



Fresh food	Portion	Power	1st side time (min.)	2nd side time (min.)	Instructions
BREAD Fresh bread rolls	6 pcs (350 g)	100 W + 180 °C	8-10	-	Put bread rolls in a circle on the low rack. Stand 2-3 minutes.
Garlic bread (chilled, prebaked)	200 g (1 pc)	180 W + 220 °C	8-10	-	Put the chilled baguette on baking paper on the low rack. After baking stand for 2-3 minutes.
CAKE Apple cake (fresh dough)	500 g	Only 180 °C	38-43	-	Put the fresh dough in a small rectangular black metal baking dish (length 25 cm). Put the cake on the low rack. After baking stand for 5-10 minutes.
Mini muffins (fresh dough)	12 x 30 g (350-400 g)	Only 220 °C	17-23	-	Fill the fresh dough evenly in paper muffin dishes. Put the dishes on the low rack. After baking stand for 5 minutes.
Cookies (fresh dough)	200-250 g	Only 200 °C	15-20	-	Put the chilled croissants on baking paper on the low rack.
Frozen cake	1000 g	180 W + 180 °C	18-20	-	Put the frozen cake directly on the low rack. After defrost and warming stand for 15-20 minutes.

SPECIAL HINTS

MELTING BUTTER

Put 50 g butter into a small deep glass dish. Cover with plastic lid. Heat for 30-40 seconds using 900 W, until butter is melted.

MELTING CHOCOLATE

Put 100 g chocolate into a small deep glass dish. Heat for 3-5 minutes, using 450 W until chocolate is melted. Stir once or twice during melting. Use oven gloves while taking out!

MELTING CRYSTALLIZED HONEY

Put 20 g crystallized honey into a small deep glass dish. Heat for 20-30 seconds using 300 W, until honey is melted.

MELTING GELATINE

Lay dry gelatine sheets (10 g) for 5 minutes into cold water. Put drained gelatine into a small glass pyrex bowl. Heat for 1 minute using 300 W. Stir after melting.

COOKING GLAZE/ICING (FOR CAKE AND GATEAUX)

Mix instant glaze (approximately 14 g) with 40 g sugar and 250 ml cold water. Cook uncovered in a glass pyrex bowl for 3½ to 4½ minutes using 900 W, until glaze/icing is transparent. Stir twice during cooking.

COOKING JAM

Put 600 g fruits (for example mixed berries) in a suitable sized glass pyrex bowl with lid. Add 300 g preserving sugar and stir well. Cook covered for 10-12 minutes using 900 W. Stir several times during cooking. Empty directly into small jam glasses with twist-off lids. Stand on lid for 5 minutes.

COOKING PUDDING

Mix pudding powder with sugar and milk (500 ml) by following the manufacturers instructions and stir well. Use a suitable sized glass pyrex bowl with lid. Cook covered for 6½ to 7½ minutes using 900 W. Stir several times well during cooking.

BROWNING ALMOND SLICES


Spread 30 g sliced almonds evenly on a medium sized ceramic plate. Stir several times during browning for 3½ to 4½ minutes using 600 W. Let it stand for 2-3 minutes in the oven. Use oven gloves while taking out!




CLEANING YOUR MICROWAVE OVEN


The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:

- Inside and outside surfaces
- Door and door seals
- Turntable and Roller rings


 **ALWAYS** ensure that the door seals are clean and the door closes properly.


 Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

1. Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.
2. Remove any splashes or stains on the inside surfaces or on the roller ring with a soapy cloth. Rinse and dry.
3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice on the turntable and heat for ten minutes at maximum power.
4. Wash the dishwasher-safe plate whenever necessary.

 **DO NOT** spill water in the vents. **NEVER** use any abrasive products or chemical solvents. Take particular care when cleaning the door seals to ensure that no particles:

- Accumulate
- Prevent the door from closing correctly

 Clean the microwave oven cavity right after each use with a mild detergent solution, but let the microwave oven cool down before cleaning in order to avoid injury.

 The instructions for cooking ranges, hobs and ovens shall state that a steam cleaner is not to be used.


STORING AND REPAIRING YOUR MICROWAVE OVEN

A few simple precautions should be taken when storing or having your microwave oven serviced.


The oven must not be used if the door or door seals are damaged:

- Broken hinge
- Deteriorated seals
- Distorted or bent oven casing

Only a qualified microwave service technician should perform repairs.

 **NEVER** remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:

- Unplug it from the wall socket
- Contact the nearest after-sales service centre

 If you wish to store your oven away temporarily, choose a dry, dust-free place.

- **Reason :** Dust and damp may adversely affect the working parts in the oven.



TECHNICAL SPECIFICATIONS

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Power source	220 V ~ 50 Hz AC
Power consumption	
Maximum power	2600 W
Microwave	1400 W
Grill (heating element)	1150 W
Convection (heating element)	Max. 1700 W
Output power	100 W / 900 W - 6 levels (IEC-705)
Operating frequency	2450 MHz
Dimensions (W x D x H)	
Outside	517 x 460 x 310 mm
Oven cavity	358 x 327 x 231.5 mm
Volume	1.0 Cubic feet
Weight	
Net	18.0 kg approx

NOTE



QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300-362-603	www.samsung.com
NEW ZEALAND	0800-SAMSUNG (0800-726-786)	
CHINA	400-810-5858	
HONG KONG	(852) 3698-4698	www.samsung.com/hk www.samsung.com/hk_en/
INDIA	1800 1100 11 3030 8282 1800 3000 8282 1800 266 8282	www.samsung.com
INDONESIA	0800-112-8888 021-5699-7777	
JAPAN	0120-327-527	
MALAYSIA	1800-88-9999	
PHILIPPINES	1-800-10-SAMSUNG (726-7864) for PLDT 1-800-3-SAMSUNG (726-7864) for Digitel 1-800-8-SAMSUNG (726-7864) for Globe 02-5805777	
SINGAPORE	1800-SAMSUNG (726-7864)	
THAILAND	1800-29-3232 02-689-3232	
TAIWAN	0800-329-999 0266-026-066	
VIETNAM	1-800-588-889	

Code No.: DE68-03714Y-01

